

[Manuals.plus](#) /

› [Leviton](#) /

› Leviton T5015-CHW Clock Hanger Receptacle User Manual

Leviton T5015-CHW

Leviton T5015-CHW Clock Hanger Receptacle User Manual

Model: T5015-CHW | Brand: Leviton

PRODUCT OVERVIEW

The Leviton T5015-CHW is a single recessed clock hanger type receptacle designed for commercial applications. It features a 5-15R configuration with 3 wires, a white color, and tamper-resistant construction. This unit is rated for 125 Volt AC and 15 Amp current, with a 1/2 HP power rating. It holds UL 498/514A and CSA C22.2 approvals, ensuring compliance with safety standards.



Image: Front view of the Leviton T5015-CHW single recessed clock hanger receptacle, showing the white faceplate, the 5-15R outlet, and the integrated clock hanger hook at the top.

SAFETY INFORMATION

WARNING: To avoid fire, shock, or death; turn off power at circuit breaker or fuse box and test that power is off before wiring! This device must be installed in accordance with all national and local electrical codes.

- Always disconnect power before installation or servicing.
- Do not install in wet locations.
- Ensure proper grounding to prevent electrical shock.
- Use only with compatible wiring and electrical systems.
- Consult a qualified electrician if you are unsure about any part of the installation process.

PACKAGE CONTENTS

- One (1) Leviton T5015-CHW Single Recessed Clock Hanger Receptacle

SETUP AND INSTALLATION

1. **Turn Off Power:** Locate the circuit breaker or fuse that supplies power to the outlet where the receptacle will be installed. Turn off the power completely. Verify power is off using a voltage tester.
2. **Prepare Wiring:** Remove the existing wall plate and old receptacle, if applicable. Carefully pull the wires out of the wall box.
3. **Connect Wires:**
 - Connect the *hot* (black or red) wire to the brass-colored terminal screw.
 - Connect the *neutral* (white) wire to the silver-colored terminal screw.
 - Connect the *ground* (green or bare copper) wire to the green terminal screw.

Ensure all connections are tight and secure.

4. **Mount Receptacle:** Carefully push the wired receptacle back into the wall box. Secure it with the mounting screws provided.
5. **Install Wall Plate:** Attach the appropriate wall plate (not included) over the receptacle.
6. **Restore Power:** Turn the power back on at the circuit breaker or fuse box.
7. **Test:** Plug a device into the receptacle to ensure it is functioning correctly.

Note: This device is designed for recessed installation, allowing clocks or other items to hang flush against the wall.

OPERATING INSTRUCTIONS

The Leviton T5015-CHW is a standard 15A, 125V receptacle. To operate, simply plug any compatible electrical device into the outlet. The integrated hanger hook at the top of the receptacle is designed to support clocks or other wall-mounted items, allowing their power cords to be neatly routed to the recessed outlet.

- Ensure the device being plugged in does not exceed the receptacle's 15 Amp current rating or 1/2 HP power rating.
- The tamper-resistant feature helps prevent the insertion of foreign objects into the receptacle openings, enhancing safety.

MAINTENANCE

The Leviton T5015-CHW receptacle requires minimal maintenance. Regular cleaning and inspection are recommended.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the receptacle and wall plate. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Inspection:** Periodically check the receptacle for any signs of damage, such as cracks, discoloration, or loose connections. If any damage is observed, turn off power at the circuit breaker and have the unit inspected or replaced by a qualified electrician.
- **No User-Serviceable Parts:** This device contains no user-serviceable parts. Do not attempt to disassemble or repair the unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power from receptacle.	Circuit breaker tripped or fuse blown. Loose wiring connection. Faulty receptacle.	Check and reset the circuit breaker or replace the fuse. Turn off power and check wire connections at the receptacle. Tighten if loose. If other solutions fail, replace the receptacle.
Device does not fit into receptacle.	Tamper-resistant shutters are not opening correctly.	Ensure both prongs of the plug are inserted simultaneously and with even pressure. Do not force the plug. If issue persists, the receptacle may be faulty.
Receptacle feels warm.	Overloaded circuit. Loose wiring connection. Faulty receptacle.	Unplug some devices from the circuit. Turn off power and check wire connections. Replace the receptacle immediately.

If troubleshooting steps do not resolve the issue, or if you suspect a serious electrical problem, contact a qualified electrician.

SPECIFICATIONS

Attribute	Detail
Model Number	T5015-CHW
Product Type	Single Recessed Clock Hanger Receptacle
Brand	Leviton
Configuration	5-15R
Voltage Rating	125V AC
Current Rating	15 Amp
Poles	2 Pole
Wires	3 Wire(s)
Power Rating	1/2 HP
Color	White

Attribute	Detail
Construction Feature	Tamper Resistant
Approvals	UL 498/514A, CSA C22.2
Dimensions (L x W x H)	10 x 4.88 x 8.13 inches
Weight	1 Pound
Material	viton
UPC	078477703489

WARRANTY AND SUPPORT

Specific warranty details are not provided in this manual. For information regarding warranty coverage, technical support, or service, please contact Leviton customer service or visit the official Leviton website.

Leviton Contact Information:

- **Website:** www.leviton.com
- Refer to the product packaging or Leviton's official website for the most current contact details and support resources.

© 2024 Leviton. All rights reserved.
This manual is for informational purposes only. Leviton is not responsible for any damages or injuries resulting from improper installation or use of this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00SHJ6JOC>

More documents and user manuals: <https://manuals.plus/>