

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Dyson](#) /
- › [Dyson V6 Absolute Cordless Stick Vacuum Cleaner User Manual](#)

Dyson V6 Absolute

Dyson V6 Absolute Cordless Stick Vacuum Cleaner User Manual

Model: V6 Absolute (209560-01)

INTRODUCTION

The Dyson V6 Absolute is a cordless stick vacuum cleaner designed for versatile cleaning across various floor types. It features two Dyson-engineered cleaner heads: a Soft roller cleaner head for hard floors and a Direct-drive cleaner head for carpets. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your Dyson V6 Absolute vacuum cleaner.

SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only Dyson recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bin and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors. Put away after use to prevent trip hazards.

- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

WHAT'S IN THE BOX

Your Dyson V6 Absolute package typically includes the following components:

- Dyson V6 Absolute Motor Unit (main body with motor and dust bin)
- Red Extension Wand
- Soft Roller Cleaner Head (for hard floors)
- Direct-Drive Cleaner Head (for carpets)
- Mini Motorized Tool
- Combination Tool
- Crevice Tool
- Docking Station
- Charger





Image: The Dyson V6 Absolute cordless stick vacuum cleaner, fully assembled with its red extension wand and a cleaner head, showcasing its sleek design and primary components.

SETUP

Initial Charging

Before first use, fully charge the vacuum for a minimum of 3.5 hours. Connect the charger to the docking station or directly to the vacuum's battery port. The indicator light will turn off when fully charged.

Assembling the Vacuum

1. **Attach the Wand:** Align the red extension wand with the main motor unit and push until it clicks securely into place.
2. **Attach a Cleaner Head:** Select either the Soft roller cleaner head or the Direct-drive cleaner head. Align it with the end of the extension wand and push until it clicks. For handheld use, attach tools directly to the main motor unit.

Mounting the Docking Station

The docking station allows for convenient storage and charging. Choose a suitable location near a power outlet. Secure the docking station to a wall stud using appropriate screws to ensure stability.



Image: A user demonstrates placing the Dyson V6 Absolute vacuum into its wall-mounted docking station for storage and charging.

OPERATING INSTRUCTIONS

Powering On and Off

The Dyson V6 Absolute operates with a trigger mechanism. Press and hold the trigger to activate suction. Release the trigger to turn off the vacuum. This design conserves battery power, using it only when cleaning.

Using Cleaner Heads

- **Soft Roller Cleaner Head:** Ideal for hard floors. It is engineered to remove both large debris and fine dust simultaneously without scratching delicate surfaces.
- **Direct-Drive Cleaner Head:** Designed for carpets and rugs. Its stiff nylon bristles drive deep into carpet pile to remove

ground-in dirt.



Image: The Soft roller cleaner head of the Dyson V6 Absolute vacuum cleaning a wooden floor, highlighting its gentle yet effective design.

Max Mode

For tougher tasks, press the 'MAX' button located on the top of the motor unit to engage maximum suction power. Note that using Max mode will reduce battery run time.

Converting to Handheld Mode

To convert the vacuum into a handheld unit, press the red release button at the top of the extension wand and pull the wand away from the main motor unit. Attach desired tools (e.g., crevice tool, combination tool, mini motorized tool) directly to the motor unit for cleaning upholstery, car interiors, or high-reach areas.



Image: The Dyson V6 Absolute in handheld configuration, equipped with a mini motorized tool, effectively cleaning pet hair from a sofa.



Image: A user extending the Dyson V6 Absolute to clean a high-up vent, demonstrating its versatility for overhead cleaning.

Battery Life

The Dyson V6 Absolute provides up to 20 minutes of fade-free suction in normal mode. Battery life will be shorter when using the Max mode or motorized tools.

MAINTENANCE

Emptying the Dust Bin

Empty the dust bin when the dirt reaches the MAX level mark. To empty, hold the vacuum over a trash can, then slide the red dirt removal button down to release the bin flap. Shake out the contents. For thorough cleaning, the clear bin can be detached by sliding the red dirt removal button all the way down while tilting the clear bin away from the motor.

Washing the Filter

The Dyson V6 Absolute features a washable HEPA filter located at the top of the motor unit. For optimal performance, wash

the filter at least once a month with cold water. Ensure the filter is completely dry (allow at least 24 hours) before reinserting it into the vacuum.

Clearing Blockages

If suction power drops, check for blockages in the cleaner head, wand, and main motor unit. Disconnect the vacuum from the charger before inspecting. Remove any debris or obstructions carefully.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power / Vacuum not turning on	Battery not charged; Trigger not pressed; Battery issue	Ensure battery is fully charged (3.5 hours minimum). Press and hold the trigger firmly. If issues persist, contact Dyson support.
Loss of suction	Dust bin full; Filter dirty/blocked; Blockage in cleaner head/wand/motor unit	Empty the dust bin. Wash and thoroughly dry the filter. Check for and clear any blockages.
Cleaner head not spinning	Blockage in brush bar; Electrical contact issue	Remove any hair or debris from the brush bar. Ensure the cleaner head is securely attached and electrical contacts are clean.
Short battery run time	Using Max mode; Battery degradation	Reduce use of Max mode. Ensure battery is fully charged. Battery life naturally decreases over time; consider a replacement if significantly degraded.

SPECIFICATIONS

- **Brand:** Dyson
- **Model Name:** V6 Absolute
- **Item Model Number:** 209560-01
- **Filter Type:** HEPA Filter
- **Is Cordless?:** Yes
- **Wattage:** 890 watts
- **Recommended Uses:** Carpet, Hard Floor
- **Form Factor:** Stick
- **Color:** Red
- **Battery Description:** Lithium-Ion
- **Battery Life:** Up to 20 minutes (normal mode)
- **Item Weight:** 5.07 pounds
- **Product Dimensions:** 9.8 x 8.2 x 46.4 inches
- **Voltage:** 21.6 Volts
- **Vacuum Collection Technology:** Roller brush, Direct suction

WARRANTY AND SUPPORT

Warranty Information

The Dyson V6 Absolute Cordless Stick Vacuum Cleaner comes with a **2-year warranty on parts and labor**. This warranty is activated automatically upon purchase. Please retain your proof of purchase for warranty claims.

Customer Support

For further assistance, troubleshooting, or to inquire about replacement parts, please contact Dyson customer support. Visit the official Dyson website for contact details and online support resources.

PRODUCT VIDEOS

Dyson V6 Absolute Overview

Your browser does not support the video tag.

Video: An overview of the Dyson V6 Absolute, demonstrating its features and capabilities. (Duration: 3:32)

Dyson V6 Absolute Cleaning Demonstration

Your browser does not support the video tag.

Video: A demonstration of the Dyson V6 Absolute in action, showcasing its performance on different surfaces. (Duration: 1:30)