

[manuals.plus](#) /› [Dyson](#) /› [Dyson V6 Absolute Cordless Stick Vacuum Cleaner Instruction Manual](#)

Dyson V6 Absolute

Dyson V6 Absolute Cordless Stick Vacuum Cleaner Instruction Manual

1. PRODUCT OVERVIEW

The Dyson V6 Absolute is a versatile and powerful cordless stick vacuum cleaner designed for efficient cleaning across various surfaces. It features advanced technology for strong suction and effective debris removal.



Figure 1: Dyson V6 Absolute Cordless Stick Vacuum Cleaner.

Key Features:

- **Cord-free, Hassle-free:** Enjoy unrestricted movement for cleaning your home.
- **Powerful Suction:** Delivers strong, fade-free suction for up to 20 minutes.
- **Lightweight and Versatile:** Easily transforms into a handheld vacuum for cleaning various areas, including cars and upholstery.
- **Direct-drive Cleaner Head:** Drives bristles deep into carpets to remove ground-in dirt.
- **Soft Roller Cleaner Head:** Gentle on hard floors, effectively removing large debris and fine dust simultaneously.
- **Whole Machine Filtration:** Captures 99.97% of particles as small as 0.3 microns, expelling cleaner air.
- **Hygienic One-click Bin Emptying:** Simple and clean disposal of dirt with a single button press.
- **Convenient Docking Station:** Stores and recharges the vacuum, ensuring it's always ready for use.

Video 1: Overview of the Dyson V6 Absolute's features and lightweight design.

2. SETUP

2.1 Unpacking and Assembly

Carefully remove all components from the packaging. The Dyson V6 Absolute comes with the main body, extension wand, cleaner heads (Soft roller and Direct-drive), and various accessories.

2.2 Charging the Battery

Before first use, fully charge the vacuum for a minimum of 3.5 hours. The docking station provides a convenient way to store and charge your vacuum.



Figure 2: The Dyson V6 Absolute charging in its wall-mounted docking station.

To charge, simply place the vacuum into the docking station. Ensure the power cord is securely connected to the docking station and a power outlet. The indicator light on the battery will show charging status.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off and Suction Modes

The Dyson V6 Absolute features an instant-release trigger. Press and hold the trigger to activate suction. Release the trigger to turn off the vacuum and conserve battery power.

The vacuum has two suction modes: Standard and MAX. Use the slider switch on the top of the main body to toggle between these modes. MAX mode provides increased suction for tougher tasks but reduces battery life.

3.2 Using Different Cleaner Heads

The Dyson V6 Absolute comes with two primary cleaner heads:

- **Soft Roller Cleaner Head:** Ideal for hard floors, this head uses soft nylon and anti-static carbon fiber filaments to capture both large debris and fine dust without scratching delicate surfaces.



Figure 3: The soft roller cleaner head effectively cleaning a hard floor surface.

- **Direct-drive Cleaner Head:** Designed for carpets, this head features stiff nylon bristles that penetrate deep into carpet pile to remove ground-in dirt and pet hair.

To change cleaner heads, press the red release button on the extension wand and pull the current head off. Align the new cleaner head with the wand and push until it clicks into place.

3.3 Using as a Handheld Vacuum

The V6 Absolute quickly converts to a handheld unit for versatile cleaning. Press the red release button on the extension wand to detach it. You can then attach accessories directly to the main body for cleaning stairs, upholstery, or car interiors.



Figure 4: The Dyson V6 Absolute used in handheld mode to clean upholstery.

Video 2: Demonstrating the versatility and power of the Dyson V6 Absolute for various cleaning tasks, including pet messes.

3.4 Cleaning High Areas

With the extension wand and appropriate tool, the lightweight design allows for easy cleaning of high-up areas like ceilings and cobwebs.



Figure 5: The lightweight design allows the Dyson V6 Absolute to easily reach and clean high areas.

4. MAINTENANCE

4.1 Emptying the Clear Bin

Empty the clear bin as soon as the dirt reaches the MAX level. To empty, hold the vacuum over a trash can and push the red 'MAX' button on the side of the bin. The bin base will open, releasing the dirt. Close the bin base firmly until it clicks.

4.2 Washing the Filter

The Dyson V6 Absolute features a washable HEPA filter. For optimal performance, wash the filter at least once a month. To remove the filter, twist the purple filter cap counter-clockwise and pull it out from the top of the main body. Rinse the filter under cold running water until the water runs clear. Squeeze and tap the filter to remove excess water. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum.

4.3 Changing the Battery

If your Dyson V6 Absolute's battery life significantly decreases, it may be time for a replacement. The battery is user-replaceable. Refer to the video below for a step-by-step guide.

Video 3: Detailed instructions on how to change the battery of your Dyson V6 vacuum cleaner.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power or short run time	Battery not charged or battery degradation.	Ensure the vacuum is fully charged (3.5 hours minimum). If run time is consistently short, consider replacing the battery (refer to Maintenance section).
Reduced suction	Blocked filter, full bin, or obstruction in cleaner head/wand.	Wash the filter (refer to Maintenance section). Empty the clear bin. Check for and remove any blockages in the cleaner head, wand, or main body.
Bin not emptying completely	Debris stuck around the shroud.	Ensure the bin is fully opened over a trash receptacle. Gently tap the bin to dislodge stubborn debris. If necessary, remove the bin for a more thorough clean.
Flashing red light	Battery fault or overheating.	Allow the vacuum to cool down for at least 1 hour. If the issue persists, the battery may need replacement.

6. SPECIFICATIONS

- **Brand:** Dyson
- **Model Name:** V6 Absolute
- **Item Model Number:** 209560-01
- **Color:** Red
- **Form Factor:** Stick
- **Is Cordless?:** Yes
- **Power Source:** Battery Powered
- **Battery Type:** Lithium-Ion
- **Battery Life:** Up to 20 minutes (Standard mode)
- **Filter Type:** HEPA Filter
- **Recommended Uses For Product:** Carpet, Hard Floor
- **Product Dimensions:** 9.8 x 8.2 x 46.4 inches
- **Item Weight:** 5.07 pounds

7. WARRANTY & SUPPORT

7.1 Warranty Information

The Dyson V6 Absolute Cordless Stick Vacuum Cleaner comes with a **2-year warranty on parts & labor**, activated automatically upon purchase. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For further assistance, troubleshooting, or to inquire about warranty services, please contact Dyson customer support. Visit the official Dyson website or refer to the contact information provided in your product packaging.