

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER 4-Slice Toaster Instruction Manual

BLACK+DECKER TR1478BD

BLACK+DECKER 4-Slice Toaster Instruction Manual

Model: TR1478BD

Brand: BLACK+DECKER

PRODUCT OVERVIEW

The BLACK+DECKER 4-Slice Toaster is designed for convenience and versatility, allowing you to toast a variety of bread types, including thick bagels and artisan breads, thanks to its extra-wide slots. It features multiple shade settings, specialized functions for bagels and frozen items, and an extra-lift lever for easy retrieval of smaller toasted goods. Cleanup is simplified with a removable crumb tray, and integrated cord wrap ensures tidy storage.

Key Features

- **EXTRA-WIDE TOASTING SLOTS:** Accommodates thick breads and bagels.
- **BAGEL FUNCTION:** Toasts the cut side of bagels while gently warming the other.
- **EXTRA LIFT:** Lever lifts toast safely within reach.
- **DROP-DOWN CRUMB TRAY:** For easy cleaning and maintenance.
- **SHADE SELECTOR:** Offers 7 different toast shade settings.

SAFETY INFORMATION

- Always unplug the toaster when not in use or before cleaning.
- Do not immerse the toaster, cord, or plug in water or any other liquid.
- Do not operate the toaster with a damaged cord or plug.
- Keep hands and utensils out of the toasting slots while the toaster is in operation.
- Do not place the toaster near hot gas or electric burners, or in a heated oven.
- Ensure adequate ventilation around the toaster during use.

SETUP

1. Unpack the toaster and remove all packaging materials, including any protective films or inserts from the toasting slots.
2. Place the toaster on a stable, flat, heat-resistant surface, ensuring there is sufficient clearance from walls, cabinets, and

other appliances.

3. Ensure the drop-down crumb tray is properly inserted at the bottom of the toaster.
4. Plug the power cord into a standard 120V AC electrical outlet.

OPERATING INSTRUCTIONS

Toasting Bread

1. Place up to four slices of bread into the extra-wide toasting slots. The self-adjusting guides will center the bread for even toasting.



Image description: A top-down view of the BLACK+DECKER 4-Slice Toaster highlighting its extra-wide toasting slots, designed to accommodate various bread types.

2. Select your desired toast shade using the shade selector knob. Settings range from 1 (lightest) to 7 (darkest).



Image description: A close-up of the toaster's control panel, focusing on the toast shade selector knob with numerical settings from 1 to 7.

3. Press down the toast lever until it locks into place. The toaster will begin the toasting cycle.
4. When toasting is complete, the toast will automatically pop up. For smaller items, use the extra-lift lever to raise them higher for safe retrieval.



Image description: The toaster with slices of toast partially elevated, demonstrating the extra-lift feature for easy removal.

Bagel Function

For toasting bagels, place the bagel halves into the slots with the cut side facing inwards. Press the **Bagel** button (indicated by a bagel icon) before lowering the toast lever. This function toasts the cut side while gently warming the outer side.



Bagel Function

Image description: A sliced bagel with cream cheese on a wooden cutting board, illustrating the use of the bagel function.

Frozen Function

To toast frozen bread, waffles, or pastries, place the frozen item into the slots and press the **Frozen** button (indicated by a snowflake icon) before lowering the toast lever. This function automatically adjusts the toasting time to defrost and toast the item.

Cancel Function

To stop the toasting cycle at any time, simply press the **Cancel** button (indicated by a circle with a line through it).

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your toaster.

1. Always unplug the toaster from the electrical outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Slide out the drop-down crumb tray located at the bottom of the toaster. Discard accumulated crumbs.

- Wipe the tray clean with a damp cloth and dry thoroughly before reinserting it. Ensure the crumb tray is fully pushed in before using the toaster.
3. **Exterior:** Wipe the exterior surfaces of the toaster with a soft, damp cloth. For stubborn spots, a mild household cleaner can be used, but ensure it is wiped off completely. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as they may damage the finish.
4. **Interior:** Do not attempt to clean the inside of the toaster with any tools or liquids. Any food particles stuck inside should be carefully shaken out over a sink or trash can once the toaster is completely cool and unplugged.
5. Never immerse the toaster in water or any other liquid for cleaning.

TROUBLESHOOTING

Toaster not turning on:

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check your household circuit breaker or fuse box to ensure there is power to the outlet.

Toast is too light/dark:

- Adjust the shade selector knob to a higher number for darker toast or a lower number for lighter toast.
- Consider the type and freshness of bread, as these factors can significantly affect toasting results. Drier or thinner bread may toast faster.

Bread stuck in toaster:

- Immediately unplug the toaster from the electrical outlet.
- Carefully remove the bread using non-metallic utensils (e.g., wooden tongs). Never use metal objects, as this can cause an electrical shock.

SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Color	Black with Stainless Steel Accents
Material	Aluminum
Product Dimensions	11.1"D x 10.67"W x 6.89"H
Specific Uses For Product	Bread
Wattage	1400 watts
Number of Slices	4
Special Feature	Cancel Function
Style	Classic
Item Weight	3 Pounds

Voltage	120 Volts
Number of settings	7
UPC	050875810341
Manufacturer	Spectrum Brands

OFFICIAL PRODUCT VIDEOS

No official seller videos are available for this product at this time.

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or further assistance, please refer to the official user guide or contact BLACK+DECKER customer support directly.

Official User Guide (PDF): [Download PDF](#)