

## SPC SPC Elegance ID

# SPC Elegance ID Landline Telephone User Manual

Model: SPC Elegance ID (3804N)

## 1. INTRODUCTION

Thank you for purchasing the SPC Elegance ID Landline Telephone. This analog telephone is designed for reliable communication with essential features for home and office use. Please read this manual carefully to ensure proper installation, operation, and maintenance of your device.

## 2. PACKAGE CONTENTS

Before you begin, please verify that all items are present in the package:

- SPC Elegance ID Landline Telephone Unit
- Telephone Handset
- Coiled Handset Cord
- Telephone Line Cord
- User Manual (this document)

## 3. SETUP

Follow these steps to set up your SPC Elegance ID telephone:

1. **Battery Installation:** The telephone requires 3 AAA batteries for certain features like display backlight and memory retention. Open the battery compartment on the underside of the phone and insert 3 AAA batteries, observing the correct polarity (+/-). Close the compartment securely.
2. **Connect the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the jack labeled with a handset icon on the side or back of the telephone base.
3. **Connect to Telephone Line:** Plug one end of the telephone line cord into the LINE jack on the back of the telephone base and the other end into your wall telephone jack.
4. **Initial Power On:** Once connected, the display should illuminate, and the clock/date may appear. You may need to set the date and time (refer to Section 4.5).



Figure 3.1: SPC Elegance ID Landline Telephone. This image shows the black telephone unit with its handset resting on the base. The blue backlit display shows a phone number and the current date and time. The numeric keypad and various function buttons are clearly visible.

## 4. OPERATING INSTRUCTIONS

This section details the basic functions and features of your telephone.

### 4.1 Making and Receiving Calls

- **To Make a Call:** Lift the handset or press the **Speakerphone** button. Dial the desired number using the keypad.
- **To Receive a Call:** When the phone rings, lift the handset or press the **Speakerphone** button to answer.
- **To End a Call:** Place the handset back on the cradle or press the **Speakerphone** button again if using handsfree.

### 4.2 Speakerphone Function

The telephone features a built-in speakerphone for hands-free communication.

- Press the **Speakerphone** button to activate hands-free mode during a call or to dial a number without lifting the handset.
- Press the **Speakerphone** button again to deactivate.

### 4.3 Volume Control and Mute

- **Volume Control:** Use the **Volume Up/Down** buttons (usually indicated by arrows) during a call to adjust the listening volume.

- **Microphone Mute:** Press the **Mute** button to temporarily disable your microphone during a call. The other party will not hear you. Press it again to unmute.

#### 4.4 Phonebook and Call Management

- **Phonebook:** The phone has a capacity for 70 phonebook entries. Refer to the on-screen menu for instructions on adding, editing, and deleting contacts.
- **Caller ID:** If subscribed to Caller ID service, the display will show the incoming caller's number and name (if available) before you answer.
- **Call Waiting:** If subscribed to Call Waiting service, you will hear a tone if another call comes in while you are on the phone.
- **Call Log:** The phone stores up to 83 call log entries (incoming, outgoing, missed calls). Use the navigation buttons to scroll through the call log.
- **Redialing:** Press the **Redial** button to call the last dialed number.

#### 4.5 Display and Melodies

- **Backlit Display:** The alphanumeric display features a backlight for improved visibility.
- **Clock/Date Display:** The display shows the current time and date. Refer to the menu settings to adjust these.
- **Melodies:** The phone offers 8 different melodies for incoming calls. You can select your preferred melody through the phone's settings menu.

### 5. MAINTENANCE

To ensure the longevity and optimal performance of your telephone, follow these maintenance guidelines:

- **Cleaning:** Wipe the telephone unit and handset with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the surface.
- **Battery Replacement:** If the display dims or features requiring battery power stop working, replace the 3 AAA batteries. Ensure proper polarity.
- **Environment:** Keep the telephone away from direct sunlight, heat sources, and excessive moisture. Avoid dropping the unit.

### 6. TROUBLESHOOTING

If you encounter issues with your telephone, try the following troubleshooting steps:

- **No Dial Tone:**
  - Ensure the telephone line cord is securely connected to both the phone and the wall jack.
  - Test the wall jack with another working phone.
- **No Display / Dim Display:**
  - Check if the 3 AAA batteries are correctly installed and not depleted. Replace if necessary.
- **Cannot Make/Receive Calls:**
  - Verify all connections (handset, line cord).
  - Ensure your telephone service is active.
- **Buttons Not Responding:**
  - Try disconnecting the phone from the line and power (if applicable) for a few minutes, then reconnect.

If the problem persists after trying these steps, please contact customer support.

## 7. SPECIFICATIONS


Detailed technical specifications for the SPC Elegance ID Landline Telephone:

Feature	Specification
Model Number	SPC Elegance ID (3804N)
Type	Analog Landline Telephone
Answering Machine	No
Phonebook Capacity	70 entries
Display Type	Alphanumeric, Backlit
Handsfree Function	Yes (Speakerphone)
Color	Black
Caller ID	Yes
Call Waiting	Yes
Call Log Entries	83 entries
Redialing	Yes
Number of Melodies	8
Dialing Type	Tone/Pulse
Microphone Mute	Yes
Volume Control	Digital
Clock/Date Display	Yes
Power Source	Battery Powered (3 AAA batteries required)
Dimensions (W x D x H)	174 mm x 230 mm x 110 mm
Weight	674 g (1.1 pounds)

## 8. WARRANTY AND SUPPORT

Your SPC Elegance ID Landline Telephone comes with **athree-year warranty** against manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, warranty service, or further inquiries, please contact SPC customer service. Refer to the product packaging or the official SPC website for contact information.

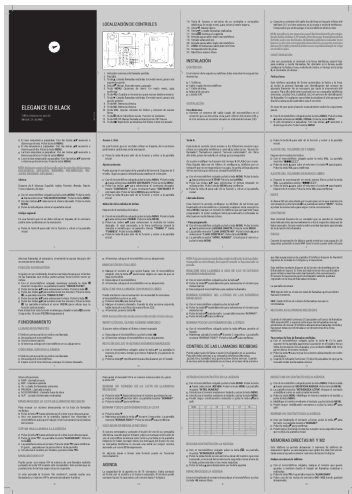

## [\[pdf\]](#) User Manual

3804 ESPANOL SPC ELEGANCE ID v3 support spc es hc pt article attachments 360000111425 ESPA  
OL |||

ELEGANCE ID BLACK Telefono bipieza con agenda MANUAL DE USUARIO El mes  
empezar a parpadear. Con las teclas disminuya el mes. Pulse la tecla MENU. El da  
empezar a parpadear. Con las teclas disminuya el da. Pulse la tecla MENU. La hora  
empezar a parpadear. Con las teclas disminuya la hora. Pulse la te...

lang:es score:19 filesize: 225.69 K page\_count: 2 document date: 2017-07-05




## [\[pdf\]](#)

FICHA TÉCNICA SPC ELEGANCE ID FT Elegance 3804N v 1621942567 cdn shopify s files 1 0506 9678  
1998 |||

ELEGANCE ID SKU 3804N EAN 8 436542 851374 Unidades por embalaje 4 Telefono  
de Cordn Todo lo que necesitas saber a primera vista Identificacin de llamadas  
Agenda de 70 nombres y nmeros Manos libres 2 memorias directas Pantalla  
iluminada Funciona sin pilas Corded Phone All you need to know at first ...

lang:es score:18 filesize: 443.16 K page\_count: 2 document date: 2016-01-05

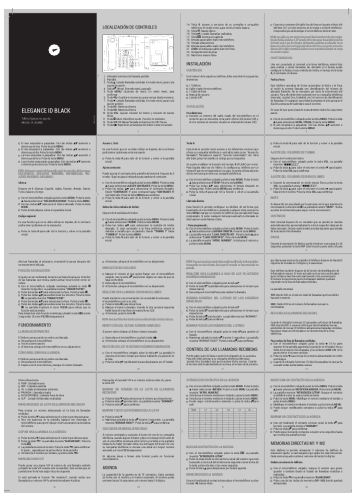

## [\[pdf\]](#) User Manual

MANUAIS SPC ELEGANCE ID M Elegance id 3804N v 1621949346 cdn shopify s files 1 0506 9678 1998  
|||

ELEGANCE ID BLACK Telefono bipieza con agenda MANUAL DE USUARIO El mes  
empezar a parpadear. Con las teclas disminuya el mes. Pulse la tecla MENU. El da  
empezar a parpadear. Con las teclas disminuya el da. Pulse la tecla MENU. La hora  
empezar a parpadear. Con las teclas disminuya la hora. Pulse la te...

lang:es score:16 filesize: 247.16 K page\_count: 2 document date: 2020-04-07