

[Manuals.plus](#) /

> [Toastermaster](#) /

> Toastermaster Bread Machine Maker Instruction Manual (Model: 1190) Reprint [Plastic Comb]

Toastermaster 1190

Toastermaster Bread Machine Instruction Manual

Model: 1190

INTRODUCTION

This instruction manual provides comprehensive guidance for the safe and efficient operation, maintenance, and troubleshooting of your Toastermaster Bread Machine, Model 1190. Please read this manual thoroughly before first use and retain it for future reference.

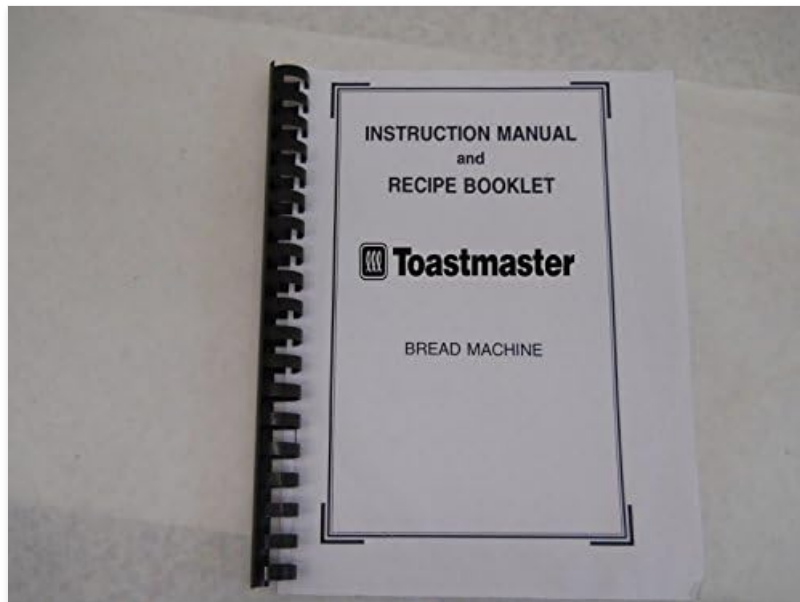


Image: Cover of the Toastermaster Bread Machine Instruction Manual, Model 1190. The cover displays "INSTRUCTION MANUAL and RECIPE BOOKLET" at the top, followed by the Toastermaster logo and "BREAD MACHINE" at the bottom, all within a decorative border. The manual is spiral-bound on the left side.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the bread machine.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.

PRODUCT COMPONENTS

Your Toastmaster Bread Machine Model 1190 includes the following main components:

- **Main Unit:** The primary housing containing the motor, heating element, and control panel.
- **Baking Pan:** A removable non-stick pan where ingredients are placed and bread is baked.
- **Kneading Paddle:** A removable paddle inside the baking pan used for mixing and kneading dough.
- **Measuring Cup:** For precise liquid measurements.
- **Measuring Spoon:** For precise dry ingredient measurements (e.g., yeast, salt).
- **Lid with Viewing Window:** Allows observation of the baking process.
- **Control Panel:** Features buttons for program selection, crust color, loaf size, and start/stop.

SETUP

1. **Unpacking:** Carefully remove the bread machine and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the exterior of the machine with a damp cloth. Wash the baking pan and kneading paddle with warm, soapy water, rinse thoroughly, and dry completely.
3. **Placement:** Place the bread machine on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Ensure the voltage of your power outlet matches the specifications of the bread machine. Plug the power cord into a grounded electrical outlet.
5. **Install Baking Pan:** Insert the baking pan into the main unit, ensuring it clicks securely into place. Attach the kneading paddle onto the shaft inside the pan.

OPERATING INSTRUCTIONS

Basic Bread Making Process

1. **Add Ingredients:** Add ingredients to the baking pan in the order specified by your recipe (typically liquids first, then dry ingredients, with yeast last and separate from liquids/salt).

2. **Select Program:** Close the lid. Use the control panel to select the desired bread program (e.g., Basic, Whole Wheat, French). Refer to the recipe booklet for program recommendations.
3. **Select Loaf Size and Crust Color:** Adjust the loaf size (e.g., 1.5 lb, 2 lb) and crust color (e.g., Light, Medium, Dark) settings according to your preference and recipe.
4. **Start Baking:** Press the "Start/Stop" button to begin the selected program. The machine will automatically mix, knead, rise, and bake the bread.
5. **Remove Bread:** Once the program is complete, the machine will beep. Unplug the machine. Using oven mitts, carefully remove the hot baking pan from the machine.
6. **Cooling:** Invert the baking pan to release the bread onto a wire rack. If the kneading paddle remains in the bread, carefully remove it. Allow the bread to cool for at least 30 minutes before slicing.

Control Panel Overview

The control panel typically includes:

- **Display Screen:** Shows program number, time remaining, and other indicators.
- **MENU Button:** Cycles through available bread programs.
- **LOAF SIZE Button:** Selects the desired loaf weight.
- **CRUST COLOR Button:** Chooses light, medium, or dark crust.
- **START/STOP Button:** Initiates or cancels a program. Press and hold to cancel a running program.
- **TIMER/DELAY Button:** Sets a delayed start time for baking.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your bread machine.

- **Before Cleaning:** Always unplug the bread machine from the power outlet and allow it to cool completely before cleaning.
- **Baking Pan and Kneading Paddle:** Remove the baking pan and kneading paddle. Wash them with warm, soapy water using a soft sponge. Do not use abrasive cleaners or metal scouring pads, as this can damage the non-stick coating. Rinse thoroughly and dry completely.
- **Main Unit Exterior:** Wipe the exterior of the bread machine with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
- **Interior:** Use a soft brush or damp cloth to remove any crumbs or flour residue from the interior of the baking chamber.
- **Lid:** Wipe the lid and viewing window with a damp cloth.
- **Storage:** Store the bread machine in a clean, dry place when not in use.

TROUBLESHOOTING

If you encounter issues with your Toastmaster Bread Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bread does not rise	Expired yeast, incorrect water temperature, too much salt/sugar, wrong flour type.	Check yeast expiration date. Use lukewarm water (105-115°F / 40-46°C). Ensure correct ingredient measurements.

Problem	Possible Cause	Solution
Bread is too dense	Too much flour, not enough liquid, old yeast.	Measure ingredients precisely. Ensure yeast is fresh.
Bread collapses during baking	Too much liquid, too much yeast, high humidity.	Reduce liquid slightly. Ensure correct yeast amount.
Machine does not start	Not plugged in, lid not closed, program not selected.	Check power connection. Ensure lid is fully closed. Select a program and press Start.
Kneading paddle stuck in bread	Common occurrence.	Allow bread to cool slightly, then carefully remove the paddle using a non-abrasive utensil.

SPECIFICATIONS

Key specifications for the Toastmaster Bread Machine Model 1190:

- **Model Number:** 1190
- **Brand:** Toastmaster
- **Material:** Plastic (housing)
- **Color:** White
- **Number of Programs:** 12
- **Loaf Sizes:** Typically 1.5 lb and 2 lb
- **Care Instructions:** Wipe with Damp Cloth (for exterior)

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support regarding your Toastmaster Bread Machine Model 1190, please refer to the official Toastmaster website or contact their customer service department. Specific warranty terms and contact details are typically provided with the original product packaging or on the manufacturer's official resources.

You can visit the official Toastmaster store on Amazon for more information:[Toastmaster Store](#)

