



Manuals.plus /

› **Bushnell** /

› Bushnell Neo Ghost Golf GPS Instruction Manual

Bushnell Neo Ghost

Bushnell Neo Ghost Golf GPS Instruction Manual

Model: Neo Ghost (Part Number: 368222)

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Bushnell Neo Ghost Golf GPS device. The Neo Ghost is a compact and easy-to-use device designed to enhance your golf game by providing accurate distance information to key points on the golf course.



Figure 1: Bushnell Neo Ghost Golf GPS device with active display. The screen shows current hole number, par, and distances to the front, center, and back of the green.

Key features include:

- Automatic course recognition and hole advancement.
- Clear display of distances to the front, center, and back of greens.
- Ability to set up to four custom hazard and layup distances per hole.
- Extended battery life for multiple rounds of golf.

2. GETTING STARTED: SETUP

2.1. Initial Charging

Before first use, fully charge your Neo Ghost device. Connect the device to a USB power source (such as a computer or a phone charger with a micro USB port) using the provided charging cable. A full charge typically takes approximately 4 hours.

2.2. Firmware and Course Updates

For optimal performance and access to the latest course data, it is recommended to connect your Neo Ghost to a computer and update its firmware and course database. Visit the official Bushnell Golf website for the necessary software and instructions.

2.3. Setting Time and Date

Upon initial power-on or after a reset, you may need to set the correct time and date. Follow the on-screen prompts or navigate through the device's menu to adjust these settings.



Figure 2: Rear view of the Bushnell Neo Ghost, highlighting the power, menu, shot, up, select, and down buttons, along with the model number.

3. OPERATING INSTRUCTIONS

3.1. Power On/Off

To power on the device, press and hold the **PWR** button located on the top. To power off, press and hold the **PWR** button again for a few seconds until the device shuts down.

3.2. Course Recognition and Selection

Once powered on, the Neo Ghost will automatically begin searching for available golf courses. It typically recognizes the course you are playing. If multiple courses are nearby, you may need to select the correct one from a list using the **UP** and **DOWN** buttons and confirming with **SELECT**.

3.3. Displaying Distances

The device will automatically advance to the current hole. The main display shows distances to the front, center, and back of the green. These distances are continuously updated as you move around the course.

3.4. Shot Distance Measurement

To measure the distance of your shot, press the **SHOT** button at your starting point. Walk to where your ball landed, and the device will display the distance traveled. Press **SHOT** again to reset for the next measurement.

3.5. Hazard and Layup Distances

The Neo Ghost can display distances to various hazards and layup points. Use the **MENU** button to access options for viewing these distances. You can customize up to four hazard/layup distances per hole via the device settings or through the Bushnell Golf app/website.

3.6. Changing Units of Measure

The device can display distances in yards or meters. To switch between units, navigate to the settings menu using the **MENU** button and select your preferred unit of measurement.

4. MAINTENANCE

4.1. Cleaning

Wipe the device with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the screen or casing. Ensure the charging port is free of debris.

4.2. Charging and Battery Care

Charge the device regularly, especially after each round, to maintain optimal battery performance. Avoid fully depleting the battery frequently. Store the device in a cool, dry place when not in use.

4.3. Storage

When storing the device for extended periods, ensure it is partially charged (around 50%) and kept in a protective case to prevent physical damage.

5. TROUBLESHOOTING

5.1. Device Not Finding Satellites/Courses

If the device continuously displays "Searching for satellites" or fails to find courses:

- Ensure you are in an open area with a clear view of the sky.
- Try restarting the device.
- Connect the device to your computer and re-sync it with the Bushnell Golf software. This can often resolve connectivity issues and update GPS data.

5.2. Short Battery Life

If the battery life seems shorter than expected:

- Ensure the device is fully charged before each use.
- Avoid using the backlight unnecessarily, as it consumes more power.
- The battery's capacity may decrease over time with extensive use.

5.3. Display Issues

If the display is dim or unresponsive, ensure the device is charged. If issues persist, a factory reset (if available in the menu) or contacting customer support may be necessary.

6. SPECIFICATIONS



Figure 3: Bushnell Neo Ghost Golf GPS shown alongside a golf ball to illustrate its compact size.

Bushnell Neo Ghost Golf GPS Technical Specifications

Feature	Detail
Brand	Bushnell
Model Name	Ghost
Part Number	368222
Color	White
Item Weight	0.1 Kilograms
Item Dimensions (LxWxH)	2.2 x 2.2 x 0.67 inches
Screen Size	1.4 Inches
Connectivity Technology	USB
Battery Life	Up to 10 Hours
Included Components	1 x Golf Ball Tracker (device), USB Charging Cable
Special Feature	Tournament legal

7. WARRANTY AND SUPPORT

7.1. Warranty Information

The Bushnell Neo Ghost Golf GPS typically comes with a one-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, refer to the documentation included with your product or visit the official Bushnell Golf website.

7.2. Customer Support

For technical assistance, troubleshooting, or warranty service, please contact Bushnell Customer Support. Contact information can usually be found on the Bushnell Golf website or in the product packaging. When contacting support, have your model number (Neo Ghost) and part number (368222) ready.