

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sony](#) /
- › [Sony ZS-S40 AUX CD Radio Instruction Manual](#)

Sony ZS-S40

Sony ZS-S40 AUX CD Radio Instruction Manual

Model: ZS-S40 | Brand: Sony

INTRODUCTION

Thank you for purchasing the Sony ZS-S40 AUX CD Radio. This compact audio system offers versatile playback options including CD, FM/AM/Wide FM radio, and an AUX input for external devices. Designed for ease of use and portability, this manual provides essential information for setting up, operating, and maintaining your device.



Figure 1: Front view of the Sony ZS-S40 AUX CD Radio.

PRODUCT FEATURES

- **Compact Design:** Measuring 300mm wide and 125mm high, this unit is designed for portability and fits easily into various spaces.
- **High-Quality Sound:** Equipped with 4W maximum output speakers, providing rich audio for CDs and radio.
- **Versatile Playback:** Supports music CDs, MP3, and WMA formats.

- **FM/AM/Wide FM Tuner:** Enjoy a wide range of radio broadcasts with clear reception.
- **Favorite Radio Station Buttons:** Register up to 3 frequently listened FM/AM stations for quick access.
- **Sleep Timer Function:** Automatically turns off the power after a set time (15/30/60/90 minutes), preventing power waste.
- **Audio Input Terminal (AUX):** Connect external audio devices like Walkman players or smartphones to play music through the unit's speakers.
- **Headphone Jack:** For private listening.
- **Integrated Handle:** For easy carrying.



Figure 2: Favorite radio station buttons for quick access to presets.

持ちやすい取っ手付き



※イメージはブラック色です

Figure 3: Sleep timer function automatically turns off the unit after a set duration.

スマホなどをつなぎ スピーカーとしても使える

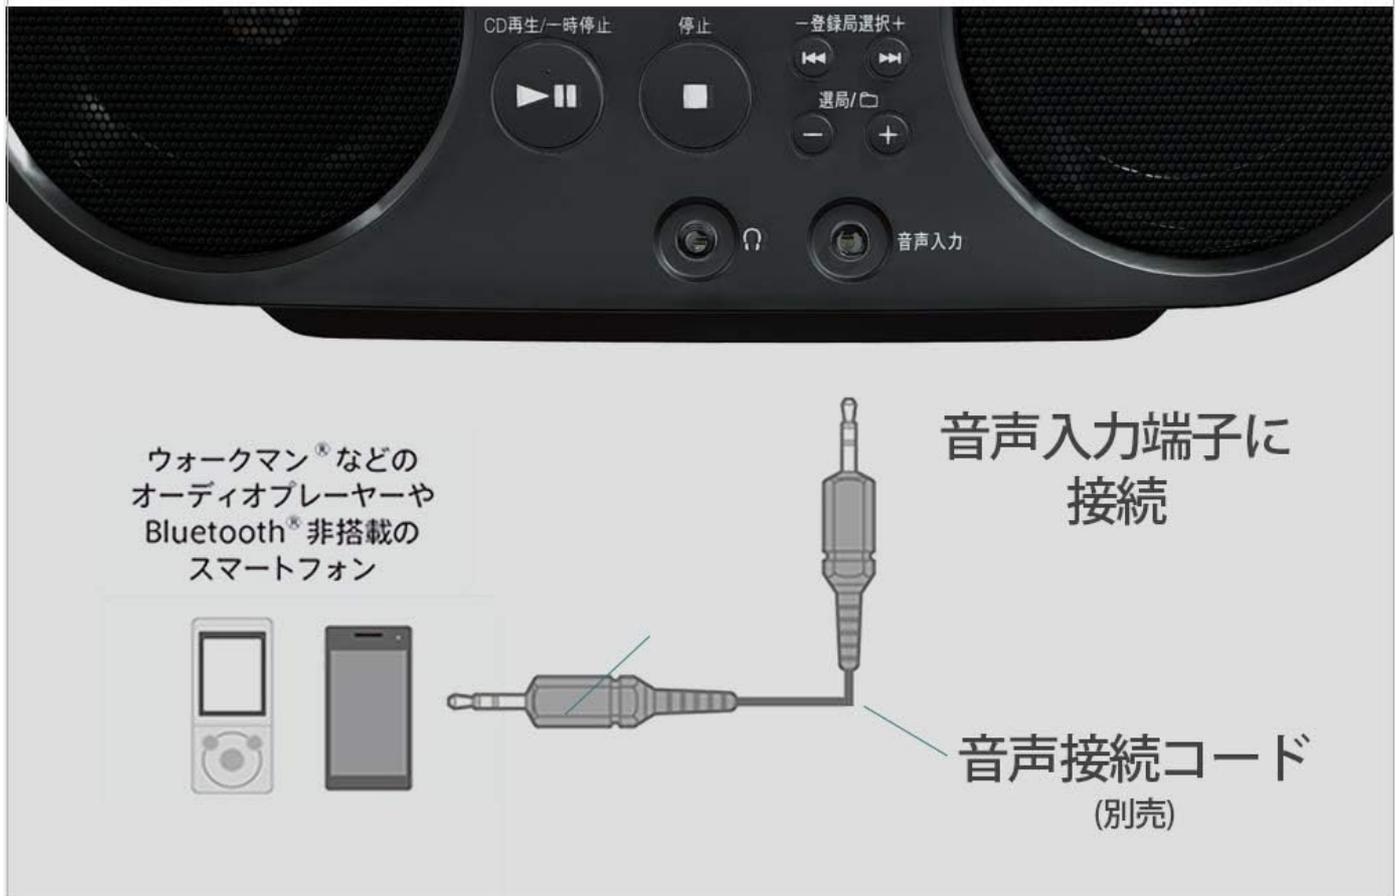


Figure 4: Audio input terminal for connecting external devices like smartphones.

電源の切り忘れを防ぐ おやすみタイマー



Figure 5: Integrated handle for easy portability of the unit.

SETUP

1. Power Connection

Connect the supplied AC power cord to the AC IN jack on the unit and then to a wall outlet. Alternatively, for portable use, insert 6 R14 (size C) batteries (not supplied) into the battery compartment on the bottom of the unit, ensuring correct polarity.

2. Antenna Setup

For FM reception, extend the telescopic antenna fully and adjust its direction for optimal signal. For AM reception, the unit has a built-in ferrite bar antenna. Rotate the unit itself for best AM reception.

OPERATING INSTRUCTIONS

1. Basic Operation

1. Press the **POWER** button to turn the unit on.
2. Press the **FUNCTION** button repeatedly to select the desired source (CD, FM, AM, AUX).
3. Adjust the volume using the **VOLUME +/-** buttons.

2. CD Playback

1. Open the CD compartment lid and place a CD with the label side up. Close the lid securely.
2. Press the **FUNCTION** button to select "CD".
3. Press the **PLAY/PAUSE** (▶/⏸) button to start playback.
4. To pause, press **PLAY/PAUSE** (▶/⏸) again. Press it once more to resume.
5. To stop playback, press the **STOP** (■) button.
6. To skip tracks, press the **FORWARD** (▶▶) or **BACK** (◀◀) buttons.
7. **Program Play:** You can program up to 25 tracks. Refer to the detailed instructions in the full user manual for programming steps.

3. Radio Operation (FM/AM/Wide FM)

1. Press the **FUNCTION** button to select "FM" or "AM".
2. Press the **TUNING +/-** buttons to manually tune to a station.
3. To automatically scan for the next available station, press and hold the **TUNING +/-** buttons until the frequency starts changing.
4. **Presetting Favorite Stations:**
 - Tune to the desired station.
 - Press and hold one of the **FAVORITE RADIO STATION (1, 2, or 3)** buttons until "PRESET" appears on the display. The station is now saved.
 - To recall a preset station, simply press the corresponding **FAVORITE RADIO STATION** button.

4. AUX Input

1. Connect an external audio device (e.g., smartphone, MP3 player) to the **AUDIO IN** jack on the unit using a stereo mini cable (not supplied).
2. Press the **FUNCTION** button to select "AUX".
3. Start playback on your connected external device. The audio will be output through the ZS-S40 speakers.
4. Adjust the volume using the unit's **VOLUME +/-** buttons and/or the volume control on your external device.

5. Sleep Timer

1. While the unit is on, press the **SLEEP** button repeatedly to cycle through the available sleep timer settings: 90 min → 60 min → 30 min → 15 min → OFF.
2. The unit will automatically turn off after the selected time has elapsed.

MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior with a soft, dry cloth. For stubborn stains, use a cloth lightly dampened with a mild detergent solution, then wipe dry. Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzene.
- **Cleaning the CD Lens:** Use a commercially available CD lens cleaner.
- **Battery Replacement:** If using batteries, replace all batteries with new ones when the power indicator dims or the unit stops functioning correctly. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

If you experience issues with your Sony ZS-S40, please refer to the following common problems and solutions before contacting support.

Problem	Solution
No power	Ensure the AC power cord is securely connected to both the unit and the wall outlet. If using batteries, check if they are inserted correctly and are not depleted. Replace if necessary.
No sound	Increase the volume level. If using AUX input, ensure the external device's volume is also turned up and the cable is securely connected. If headphones are connected, disconnect them to enable speaker output.
Poor radio reception	For FM, extend and adjust the telescopic antenna. For AM, rotate the unit itself for better reception. Move the unit away from other electronic devices that may cause interference.
CD does not play	Ensure the CD is inserted correctly with the label side up. Check if the CD is scratched or dirty. Clean it with a soft cloth if needed. Ensure the unit is in "CD" function mode.

SPECIFICATIONS

Feature	Detail
Model Number	ZS-S40
Brand	Sony
Tuner Type	AM, FM (Stereo), Wide FM (Stereo)
Number of Speakers	2 channels
Supported Media	Music CD, MP3, WMA
Program Play	25 tracks
Connectivity Technology	AUX (Audio Input)
Power Output	4W (2W + 2W)
Power Source	AC power or 6 x R14 (size C) batteries
Product Dimensions (L x W x H)	21 x 300 x 125 mm (approx. 2.11 x 30 x 12.5 cm)
Product Weight	Approx. 600 g
Color	Black

SAFETY INFORMATION

- Do not expose the unit to rain or moisture to reduce the risk of fire or electric shock.
- Do not open the cabinet. Refer servicing to qualified personnel only.
- Ensure proper ventilation. Do not block ventilation openings.

- Use only the specified power supply.
- Keep batteries out of reach of children. If swallowed, seek medical attention immediately.

WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Sony support website. For technical assistance or service inquiries, please contact Sony customer support.

You can find more information and support resources on the official Sony website: www.sony.net

