

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Newmowa](#) /

› [Newmowa 10000mAh Power Bank Handle Grip \(Model BMGP198-UK\) Instruction Manual](#)

Newmowa BMGP198-UK

Newmowa 10000mAh Power Bank Handle Grip (Model BMGP198-UK) Instruction Manual

Brand: Newmowa | Model: BMGP198-UK

INTRODUCTION

The Newmowa 10000mAh Power Bank Handle Grip is designed to provide extended power and stable handling for your photography and videography needs. Equipped with a high-density rechargeable Li-ion battery, it delivers 10000mAh of backup power, ensuring your devices remain charged during long shooting sessions. This versatile accessory supports PD/QC fast charging and offers dual output interfaces for simultaneous charging of multiple devices.

Its universal compatibility, ergonomic design, and integrated tripod functionality make it an ideal solution for various applications, including vlogging, live streaming, and general content creation.

SETUP

- Attaching Your Device:** The handle grip features a standard 1/4" screw thread at the top. Securely attach your DSLR, action camera, or smartphone holder (not included) to this thread.
- Connecting for Charging:** Use the appropriate USB-A or Type-C cable to connect your device to the power bank handle grip's output ports. Ensure a secure connection.
- Tripod Functionality:** The bottom of the grip includes a 1/4" screw hole. You can connect the included mini tripod or any compatible tripod/accessory to this hole for stable placement.

OPERATING

- Powering On/Off:** Press the power button on the side of the grip to activate or deactivate the power bank function.
- Checking Battery Level:** The power indicator lights (typically 4 LEDs) on the grip will show the remaining battery capacity. Each light usually represents 25% charge.
- Charging External Devices:** Connect your camera, smartphone, or other compatible device to either the USB-A or Type-C output port using a suitable cable. The power bank supports PD/QC fast charging up to 18W.
- Dual Device Charging:** Both the USB-A and Type-C interfaces can provide output simultaneously, allowing you to charge two devices at once.

- **Charging the Power Bank:** Use a Type-C cable to connect the power bank's Type-C input port to a power source. The Type-C interface supports two-way fast charging.
- **Direct Camera Power:** Action cameras can be directly powered by the grip without needing their internal battery, extending recording times significantly.

MAINTENANCE

- **Cleaning:** Wipe the grip with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, fully charge the power bank at least once every three months if not in regular use.

TROUBLESHOOTING

- **Device Not Charging:** Ensure the power bank is sufficiently charged. Check all cable connections for tightness. Try a different charging cable or port.
- **Power Bank Not Charging:** Verify the charging cable and power adapter are functional. Ensure the Type-C input port is clean and free of debris.
- **Unstable Mounting:** Ensure the 1/4" screw thread is securely tightened to your camera or accessory. If using the mini tripod, ensure its legs are fully extended and placed on a stable surface.

SPECIFICATIONS

Feature	Detail
Battery Capacity	10000mAh
Charging Type	PD/QC Fast Charging
Input Power	Up to 18W (Type-C)
Output Interfaces	USB-A, Type-C (simultaneous output supported)
Mounting	Standard 1/4" screw thread (top), 1/4" screw hole (bottom)
Material	Durable Aluminum Alloy and Silicone
Maximum Load Weight	3kg (6.6 lbs)
Dimensions	10.28 x 4.37 x 1.61 inches
Item Weight	14.9 ounces
Compatible Devices	DSLR Action Camera, GoPro Hero 7/6/5/4/3+/3, YI Sport Camera, DJI OSMO Action Camera OSMO Pocket, Smartphones

WARRANTY AND SUPPORT

Each Newmowa Power Bank Handle Grip comes with a 12-month warranty. For any issues or inquiries, please contact customer service. Our support team is committed to providing assistance within 24 hours.

PRODUCT IMAGES



The Newmowa Power Bank Handle Grip shown with an action camera, a 360 camera, and a smartphone, demonstrating its versatile mounting capabilities.

10000mAh Large Capacity
Support GoPro/Phone/Camera/OSMO Pocket

- GoPro Charging
- Phone Charging (Phone Holder is Not Included)
- Camera Charging
- OSMO Pocket Charging

An illustration highlighting the 10000mAh capacity and its ability to charge multiple device types, including GoPro, smartphones, and compact cameras.



Detailed view of the grip's features, including the 1/4" mounting screw, charging ports (USB-A and Type-C), power indicators, and the 1/4" screw hole at the base for additional accessories.

20W Output Supports Two-way Charging

USB-A and Type-C interfaces can be output at the same time, which can support dual mobile phones or different devices charging simultaneously.

Tips: Phone Holder is Not Included.



The grip in use, simultaneously charging a GoPro action camera and a smartphone, illustrating its 20W output and dual-device charging capability.



A collage of images showing the power bank handle grip being used in various scenarios such as outdoor vlogging, photography, YouTube video recording, and live streaming.



An overview of the product's dimensions and the accessories included in the package, such as the mini tripod, adapter, and wrist strap.



The power bank handle grip connected to an

action camera, demonstrating its capability to power the camera directly, bypassing the need for an internal battery.

PRODUCT VIDEOS

This video demonstrates the Newmowa 10000mAh Power Bank Handle Grip's features, including its compatibility with cameras and phones, fast charging capabilities, and ergonomic design. It highlights how the grip can extend shooting times and provide stable handling for various devices.