

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Daewoo](#) /

› [DAEWOO DSX-5055 Multifunctional Food Processor User Manual](#)

## Daewoo DSX-5055

# DAEWOO DSX-5055 Multifunctional Food Processor User Manual

Model: DSX-5055

[Safety](#) [Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the DAEWOO DSX-5055 Multifunctional Food Processor. Retain this manual for future reference.

### Electrical Safety

- This appliance is designed for operation with **220-240 Volt, 50 Hz** power supplies. It is intended for use outside North America. Ensure your power supply matches these specifications before connecting the appliance.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Always unplug the appliance from the power outlet before assembling, disassembling, cleaning, or when not in use.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

### General Safety

- Keep hands and utensils away from moving parts during operation to prevent injury.
- Ensure all attachments are securely locked in place before operating the appliance.
- Never feed food by hand when using the meat chopper. Always use the provided food pusher.
- Avoid contact with sharp blades and cutting discs. Handle with care.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Close supervision is necessary when any appliance is used by or near children.

---

## **2. PRODUCT OVERVIEW AND COMPONENTS**

The DAEWOO DSX-5055 is a versatile kitchen appliance designed for mixing, kneading, blending, and meat grinding. It features a powerful 1200W motor and a robust design.

### **Main Unit and Attachments**



Image 2.1: The DAEWO DSX-5055 Multifunctional Food Processor, showcasing the main unit with the meat grinder and blender attachments installed.

- **Motor Unit:** The main body housing the 1200W motor and control dial.
- **4.5 Liter Stainless Steel Mixing Bowl:** For mixing and kneading tasks.
- **Transparent Plastic Cover with Feed Chute:** Prevents splashes and allows adding ingredients during operation.
- **Mixing Attachments:**

- **Whisk:** For whipping cream, egg whites, and light batters.
- **Beater:** For mixing cakes, cookies, and general batters.
- **Dough Hook:** For kneading heavy doughs like bread and pizza.
- **Meat Chopper Attachment:** For grinding meat and making sausages.
  - **3 Sizes of Cutting Discs:** Fine, medium, and coarse grinding.
  - **Sausage Filler Head:** For preparing homemade sausages.
  - **Push Rod:** For safely feeding ingredients into the chopper.
- **1.5 Liter Glass Blender Jar:** For blending liquids, smoothies, and sauces.



Image 2.2: Close-up view of the 1.5-liter glass blender jar, 4.5-liter stainless steel mixing bowl, dough hook, beater, whisk, and transparent splash guard.



Image 2.3: Components of the meat chopper attachment, showing the auger, main housing, food pusher, and feeding tray.



Image 2.4: The three interchangeable cutting discs for the meat chopper, offering fine, medium, and coarse grinding options.

### 3. INITIAL SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Keep packaging materials for potential future transport or storage.

- Initial Cleaning:** Before first use, wash all detachable parts (mixing bowl, blender jar, mixing attachments, meat chopper components, etc.) in warm soapy water. Rinse thoroughly and dry completely. The main motor unit should only be wiped with a damp cloth.
- Placement:** Place the food processor on a stable, flat, and dry surface. Ensure there is adequate ventilation around the appliance.
- Power Connection:** Ensure the appliance is switched off (speed dial set to '0') before plugging it into a 220-240V, 50Hz power outlet.

---

## 4. OPERATING INSTRUCTIONS

The DAEWOO DSX-5055 offers 7 speed settings for precise control over various tasks.

### 4.1. Using the Stand Mixer (Mixing, Kneading, Whipping)

1. Ensure the appliance is unplugged.
2. Lift the mixer head by pressing the release button (if applicable, refer to diagram in physical manual).
3. Place the stainless steel mixing bowl onto the base and twist clockwise until it locks securely.
4. Attach the desired mixing tool (whisk, beater, or dough hook) by pushing it upwards into the attachment shaft and twisting until it locks.
5. Lower the mixer head until it clicks into place.
6. Add ingredients to the mixing bowl. You may attach the transparent splash guard.
7. Plug in the appliance. Turn the speed dial to the desired setting (1-7). Start with a lower speed and gradually increase as needed.
8. After use, turn the speed dial to '0' and unplug the appliance. Lift the mixer head, remove the attachment, and then remove the bowl.

### 4.2. Using the Meat Chopper

1. Ensure the appliance is unplugged.
2. Attach the meat chopper assembly to the front port of the motor unit. Secure it by twisting or locking as per the appliance design.
3. Assemble the meat chopper: Insert the auger, then the desired cutting disc, followed by the cutting blade, and finally secure with the locking ring. Place the feeding tray on top.
4. Prepare meat by cutting it into small pieces that fit into the feeding tube. Remove bones, gristle, and excessive fat.
5. Place a bowl or plate under the output of the meat chopper.
6. Plug in the appliance. Turn the speed dial to a medium-high setting (e.g., 4-6).
7. Carefully feed the meat into the feeding tube using the push rod. **Never use your fingers or other utensils.**
8. For sausage making, replace the cutting disc and blade with the sausage filler head before assembling.
9. After use, turn the speed dial to '0' and unplug the appliance. Disassemble the meat chopper for cleaning.

## 4.3. Using the Blender

1. Ensure the appliance is unplugged.
2. Place the 1.5-liter glass blender jar onto the top port of the motor unit and twist clockwise until it locks securely.
3. Add ingredients to the blender jar. Do not exceed the maximum fill line. Ensure the lid is securely in place.
4. Plug in the appliance. Turn the speed dial to the desired setting (e.g., 3-7 for blending).
5. For short bursts, use the pulse function (if available, refer to control panel).
6. After blending, turn the speed dial to '0' and unplug the appliance. Carefully remove the blender jar.

---

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Always unplug the appliance** before cleaning.
2. **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the motor unit in water.
3. **Mixing Bowl, Blender Jar, and Attachments:** Wash these parts in warm, soapy water. Rinse thoroughly and dry immediately. The 1.5-liter glass blender jar is dishwasher safe. However, the main unit and other metal attachments are generally not recommended for dishwasher use to preserve their finish and functionality.
4. **Meat Chopper Components:** Disassemble the meat chopper immediately after use. Wash all parts (auger, cutting discs, blade, housing, tray, push rod) in warm, soapy water. Use a brush to remove any food residue. Rinse and dry thoroughly to prevent rust, especially for metal parts.
5. **Storage:** Store the appliance and its accessories in a clean, dry place.

---

## 6. TROUBLESHOOTING

If you encounter issues with your DAEWOO DSX-5055, refer to the following common problems and solutions:

- **Appliance does not turn on:**
  - Ensure the power cord is securely plugged into a functioning 220-240V, 50Hz outlet.
  - Check that the speed dial is not set to '0'.
  - Verify that the mixer head is fully lowered and locked, or attachments are correctly installed and locked.
- **Motor stops during operation:**
  - The appliance may have overheated. Turn off, unplug, and allow it to cool down for at least 30 minutes before resuming use.
  - Check for excessive load. Reduce the amount of ingredients or cut them into smaller pieces.
- **Unusual noise or vibration:**
  - Ensure all attachments and bowls are correctly installed and locked.

- Check for any foreign objects in the bowl or attachments.
- **Meat chopper is clogged:**
  - Turn off and unplug the appliance. Disassemble the meat chopper and clear any blockages.
  - Ensure meat is cut into appropriate sizes and free of bones/gristle.

If the problem persists, please contact customer support or a qualified service technician.

## 7. PRODUCT SPECIFICATIONS

<b>Brand</b>	Daewoo
<b>Model Name</b>	DSX-5055 (DSX5055)
<b>Item Model Number</b>	263782
<b>Power</b>	1200 W
<b>Voltage / Frequency</b>	220-240 Volt / 50 Hz (For use outside North America)
<b>Number of Speeds</b>	7
<b>Mixing Bowl Capacity</b>	4.5 Liters (Stainless Steel)
<b>Blender Jar Capacity</b>	1.5 Liters (Glass)
<b>Included Components</b>	1.5 Liter Jar, 4.5 Liter Stainless Steel Bowl, Dough Hook, Meat Chopper, Whisk, Beater
<b>Product Dimensions</b>	14"D x 10"W x 10"H (Approx. 35.5 x 25.4 x 25.4 cm)
<b>Item Weight</b>	19.84 pounds (Approx. 9 kg)
<b>Color</b>	Silver
<b>Dishwasher Safe</b>	1.5 Liter Jar (Yes), Main Unit & other metal parts (No)

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. Daewoo provides customer support for its products.

You can visit the official Daewoo store for more product information:[Daewoo Store](#)


## Related Documents - DSX-5055

 <p>DAEWOO SAMURAI VERTI BLEND 500W BLENDER Perfect for smoothies any fruit, juice 3</p>	<p><a href="#">Daewoo Verti Blend 500W Blender User Manual and Safety Guide</a> Comprehensive user manual for the Daewoo Verti Blend 500W Blender (Model SDA2783), covering safety instructions, operation, maintenance, troubleshooting, and warranty information.</p>
 <p>DAEWOO DKB350BK KITCHEN BLENDER User Manual Bedienungsanleitung User Manual</p>	<p><a href="#">Daewoo DKB350BK Kitchen Blender User Manual</a> User manual for the Daewoo DKB350BK Kitchen Blender, providing safety instructions, parts list, operation guide, cleaning instructions, and specifications.</p>
 <p>DAEWOO SDA1578 1.7L 3KW PYRAMID KETTLE 3KW STAINLESS STEEL 1.7L PYRAMID KETTLE User Manual DAEWOO SAMURAI</p>	<p><a href="#">Daewoo SDA1578 1.7L 3KW Pyramid Kettle User Manual</a> Comprehensive user manual for the Daewoo SDA1578 1.7L 3KW Stainless Steel Pyramid Kettle. Includes safety instructions, operating guide, descaling, troubleshooting, and warranty information.</p>
 <p>DAEWOO KENSINGTON COLLECTION STAINLESS STEEL 4 SLICE TOASTER User Manual DAEWOO SAMURAI</p>	<p><a href="#">Daewoo SDA1587 Kensington Collection 4-Slice Toaster User Manual and Safety Guide</a> Comprehensive user manual for the Daewoo SDA1587 Kensington Collection 4-Slice Toaster, covering important safeguards, operating instructions for toasting, reheating, and defrosting, care and use, electrical connections, and technical specifications. Features a 2-year warranty.</p>



#### [Daewoo 6.5L Stainless Steel Slow Cooker SDA1788 User Manual](#)

User manual for the Daewoo 6.5L Stainless Steel Slow Cooker, model SDA1788. Includes safety instructions, operating guide, cleaning and maintenance, technical specifications, and recipes.

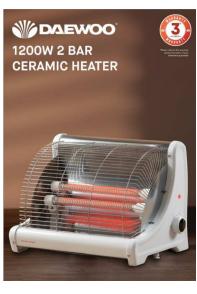

#### [Daewoo 1200W 2 Bar Ceramic Heater HEA1893 User Manual | Safety, Operation & Warranty](#)

Comprehensive user manual for the Daewoo HEA1893 1200W 2 Bar Ceramic Heater. Includes safety instructions, operating guidelines, technical specifications, ErP data, and warranty information.