

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hallmark](#) /

› [Hallmark More Moondog Audio CD User Guide \(Model PW 715802\)](#)

Hallmark PW 715802

Hallmark More Moondog Audio CD User Guide

Model: PW 715802

INTRODUCTION

This user guide provides essential information for the proper handling, playback, and care of your Hallmark "More Moondog" Audio CD. This album features compositions by Moondog, an artist known for his unique musical approach.

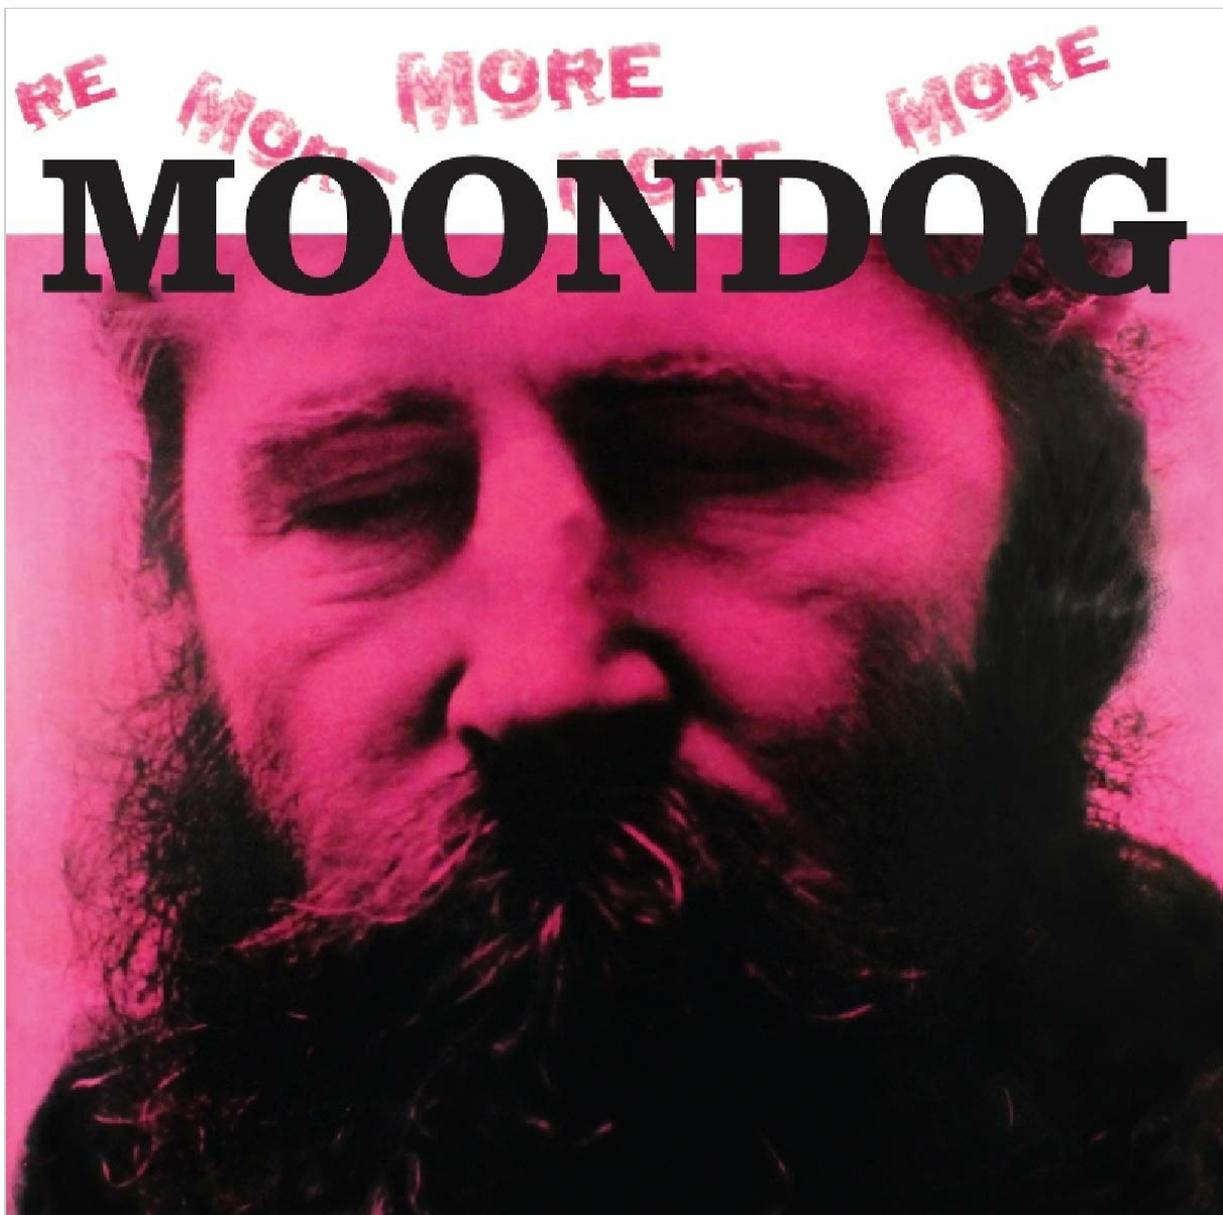


Image: Album cover for "More Moondog." The cover features a stylized image of Moondog's face, characterized by his distinctive beard and long hair, rendered in black and white with a vibrant pink overlay. The album title "MORE MOONDOG" is prominently displayed in large black capital letters across the top.

SETUP AND INITIAL HANDLING

1. **Unboxing:** Carefully remove the Audio CD from its packaging. Avoid touching the playing surface of the disc.
2. **Handling:** Always hold the CD by its edges or by placing a finger through the center hole. Do not touch the shiny side of the disc, as fingerprints can affect playback quality.
3. **Inspection:** Before first use, inspect the disc for any visible scratches or damage. A clean, undamaged disc ensures optimal performance.

OPERATING INSTRUCTIONS

To play your "More Moondog" Audio CD, follow these general steps:

1. **Insert Disc:** Open the disc tray of your CD player, car stereo, or computer's optical drive. Place the CD with the label side facing up (or as indicated by your device).
2. **Close Tray:** Gently close the disc tray. The device should automatically recognize the CD.
3. **Playback:** Most devices will begin playing the first track automatically. If not, press the "Play" button on your

device or remote control.

4. **Controls:** Use the standard controls on your CD player for functions such as Play, Pause, Stop, Skip Track (forward/backward), and Volume adjustment.

MAINTENANCE AND CARE

- **Cleaning:** If the CD becomes dirty, gently wipe the playing surface with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep discs away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Prevent scratches by handling the disc carefully and avoiding contact with rough surfaces.

TROUBLESHOOTING

- **Disc Not Playing:**
 - Ensure the disc is inserted correctly (label side up).
 - Check if the disc is clean and free of visible damage.
 - Verify that your CD player is powered on and functioning correctly.
- **Skipping or Stuttering:**
 - Clean the disc thoroughly as described in the Maintenance section.
 - Check for deep scratches or cracks on the playing surface.
 - Ensure the CD player is on a stable surface to prevent vibrations.
- **No Sound:**
 - Check the volume level on your CD player and connected audio system.
 - Ensure all audio cables are securely connected.

SPECIFICATIONS

Product Type	Audio CD
Artist	Moondog
Brand	Hallmark
Model Number	PW 715802
ASIN	B00SVEAHZA
Number of Discs	1
Language	English
Product Dimensions	4.92 x 5.51 x 0.39 inches
Item Weight	3.17 ounces
Original Release Date	2015

WARRANTY AND SUPPORT

For information regarding warranty coverage or product support, please refer to the packaging or contact the retailer where the product was purchased. As this is an audio CD, warranty typically covers manufacturing defects. Physical damage due to improper handling is generally not covered.