

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic SL-SV600J Portable CD Player Instruction Manual](#)

Panasonic SL-SV600J

Panasonic SL-SV600J Portable CD Player Instruction Manual

Model: SL-SV600J | Brand: Panasonic

INTRODUCTION

The Panasonic SL-SV600J is a portable CD player designed for on-the-go audio enjoyment. This CD Jogger model includes features for enhanced portability and listening flexibility, such as CD-R/RW playback, Extra Bass System (XBS), and a No Skip anti-skip system. It comes with essential accessories for immediate use.



Image: Panasonic SL-SV600J Portable CD Player, a compact black device with control buttons and a display screen.

WHAT'S IN THE BOX

- Panasonic SL-SV600J Portable CD Player
- Wired Remote Control
- Stereo Earbuds
- Soft Carry Case
- Belt Clip

SETUP

Powering the Device

The SL-SV600J is powered by batteries (not included) or an AC adapter (not included). Insert the required batteries into the battery compartment located on the underside of the player, ensuring correct polarity. Alternatively, connect a compatible AC adapter to the DC IN jack and a power outlet.

Loading a CD

1. Locate the OPEN/CLOSE switch or button on the CD compartment.
2. Gently press or slide the switch to open the CD compartment lid.
3. Place a CD (audio CD, CD-R, or CD-RW) onto the center spindle with the label side facing up.
4. Close the CD compartment lid firmly until it clicks into place.

OPERATING INSTRUCTIONS

Basic Playback

1. Ensure the CD player is powered on and a CD is loaded.
2. Press the **PLAY/PAUSE (▶/■)** button to start playback. The track number and elapsed time will appear on the display.
3. To pause playback, press the **PLAY/PAUSE (▶/■)** button again. Press it once more to resume.
4. To stop playback, press the **STOP (■)** button.

Volume Control

Adjust the volume using the **VOLUME (+/-)** buttons located on the player or the wired remote control. Increase volume by pressing + and decrease by pressing -.

Skipping Tracks

- To skip to the next track, press the **SKIP FORWARD (▶▶)** button.
- To go back to the beginning of the current track, press the **SKIP BACKWARD (◀◀)** button once. Press it twice to go to the previous track.

Using the Wired Remote Control

The included wired remote control allows for convenient operation without directly accessing the player. It typically features PLAY/PAUSE, STOP, SKIP, and VOLUME controls. Connect the remote to the designated jack on the CD player.

KEY FEATURES

CD-R/RW Playback

The SL-SV600J supports playback of both standard audio CDs and user-recorded CD-R and CD-RW discs, offering versatility for your music collection.

No Skip Anti-Skip System

Designed for active use, the No Skip anti-skip system helps prevent audio interruptions caused by bumps or vibrations, ensuring smooth playback during movement.

Extra Bass System (XBS)

Activate the XBS feature to enhance low-frequency sounds, providing a richer and fuller bass response for your audio.

Programmable Playback

Customize your listening experience by programming tracks to play in a specific order, repeat a single song, or repeat the entire disc. Consult the user manual for detailed programming instructions.

MAINTENANCE

Cleaning the CD Player

- Wipe the exterior of the player with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- To clean the lens, use a commercially available CD lens cleaner.
- Avoid touching the lens inside the CD compartment.

Battery Care

- Remove batteries if the player will not be used for an extended period to prevent leakage.
- Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

Problem	Solution
Player does not turn on.	Check battery installation or AC adapter connection. Ensure batteries are not depleted.
CD skips or stops playing.	Clean the CD. Ensure the CD is not scratched or damaged. Activate the No Skip anti-skip system. Avoid strong vibrations.
No sound from headphones.	Check headphone connection. Adjust volume. Ensure headphones are functional.
Remote control not working.	Check remote control connection to the player.

SPECIFICATIONS

Feature	Detail
Model Name	SL-SV600J
Brand	Panasonic
Disc Compatibility	CD, CD-R, CD-RW
Anti-Skip System	No Skip
Bass Boost	Extra Bass System (XBS)
Connectivity Technology	Wired (for headphones/remote)
Item Weight	1.25 pounds
Package Dimensions	16 x 12 x 2.4 inches

PRODUCT VIDEOS

A Closer Look at a Portable CD Player

Your browser does not support the video tag.

Video description: This short video provides a quick visual overview of a portable CD player, highlighting its compact design and basic features. While not the exact Panasonic SL-SV600J model, it demonstrates the general form factor and functionality of similar devices.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official Panasonic website or contact their customer service department. Keep your purchase receipt as proof of purchase.