

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SINGER](#) /
- › [SINGER Start 1306 Sewing Machine User Manual](#)

SINGER Start 1306

SINGER Start 1306 Sewing Machine User Manual

Model: Start 1306

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your SINGER Start 1306 Sewing Machine. Please read it thoroughly before using the machine to ensure proper setup, usage, and maintenance. The SINGER Start 1306 is designed for home sewing projects, featuring 6 built-in stitches, easy threading, and a 4-step buttonhole function.



2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the machine.
- Keep the machine away from water or wet surfaces.
- Unplug the machine from the electrical outlet when not in use, when servicing, or when changing accessories.
- Never operate the machine if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
- Use only accessories recommended by the manufacturer.
- Never drop or insert any object into any opening.

3. SETUP

3.1 Unpacking and Contents

Carefully remove the machine from its packaging. Retain all packaging materials for future transport or storage. Verify that all included components are present:

- All-Purpose Foot
- Zipper Foot
- Buttonhole Foot
- Darning Plate
- Pack of Needles
- Bobbins
- Spool Pin Felts
- Needle Plate Screwdriver
- Seam Ripper / Lint Brush
- Vinyl Dust Cover



Image 3.1: Included accessories and instruction manual.

3.2 Power Connection

Connect the power cord to the machine's power input socket and then plug it into a suitable electrical outlet (220V). Ensure the machine is switched off before connecting to power.



3.3 Threading the Machine

Correct threading is crucial for proper stitch formation.

3.3.1 Bobbin Winding

1. Place a spool of thread on the spool pin.
2. Guide the thread through the upper thread guide.
3. Wrap the thread clockwise around the bobbin winding tension disc.
4. Insert the thread through the small hole in the bobbin from the inside out.
5. Place the bobbin onto the bobbin winder spindle and push the spindle to the right.
6. Hold the thread end and press the foot pedal. Wind a few turns, then trim the excess thread.
7. Continue winding until the bobbin is full. The winder will stop automatically.
8. Push the bobbin winder spindle to the left and remove the bobbin.

3.3.2 Inserting the Bobbin

1. Open the bobbin cover plate.
2. Insert the wound bobbin into the bobbin case with the thread unwinding counter-clockwise.
3. Guide the thread into the tension spring slot and pull it firmly until it snaps into place.
4. Close the bobbin cover plate.

3.3.3 Upper Threading

1. Raise the needle to its highest position using the handwheel.
2. Raise the presser foot lifter.
3. Place a spool of thread on the spool pin.
4. Guide the thread through the upper thread guide.
5. Bring the thread down through the right channel, then up through the left channel, ensuring it passes through the take-up lever.
6. Thread the needle from front to back.



Image 3.3: Illustration of the upper threading path.

3.4 Needle Installation

To install or replace a needle:

1. Turn the handwheel to raise the needle to its highest position.
2. Loosen the needle clamp screw.
3. Remove the old needle.
4. Insert the new needle with the flat side facing the back of the machine. Push it up as far as it will go.
5. Tighten the needle clamp screw securely.



Image 3.4: Close-up of the needle and presser foot area.

4. OPERATING INSTRUCTIONS

4.1 Stitch Selection

The SINGER Start 1306 offers 6 built-in stitch patterns. Turn the stitch selector dial to choose your desired stitch. The available stitches include 4 basic, 1 decorative, and 1 buttonhole stitch.



Image 4.1: Stitch selector dial with various stitch patterns.

4.2 Sewing Basics

4.2.1 Starting a Seam

1. Place the fabric under the presser foot, aligning the edge with a seam guide on the needle plate.
2. Lower the presser foot.
3. Turn the handwheel to lower the needle into the fabric at the starting point.
4. Press the foot pedal gently to begin sewing.

4.2.2 Finishing a Seam

1. Sew to the end of your seam.
2. Press the reverse stitch lever to sew a few stitches backward to secure the seam.
3. Raise the needle to its highest position.
4. Raise the presser foot.
5. Pull the fabric away from the machine, then cut the threads using the thread cutter on the machine.

4.3 4-Step Buttonhole Function

The machine features a 4-step buttonhole function for creating buttonholes. Refer to the markings on the stitch selector dial for each step (1, 2, 3, 4). Use the buttonhole foot for best results.

4.4 Zipper Insertion

Attach the zipper foot to the machine. This foot allows you to sew close to the zipper teeth, ensuring a neat finish. Follow standard zipper insertion techniques, adjusting the needle position as needed.

4.5 Free Arm Usage

The removable free arm provides access to difficult-to-reach areas such as collars, sleeves, cuffs, and pant hems. To use, slide off the accessory storage compartment to expose the free arm.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning helps maintain machine performance. Always unplug the machine before cleaning.

- **Lint Removal:** Use the provided lint brush to remove lint and dust from the bobbin area and feed dogs.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

5.2 Needle Replacement

Replace needles regularly, especially when sewing different fabric types or if the needle becomes bent or dull. A damaged needle can cause skipped stitches or fabric damage. Refer to section 3.4 for needle installation instructions.

6. TROUBLESHOOTING

This section addresses common issues you might encounter. For problems not listed here, contact customer support.

Problem	Possible Cause	Solution
Skipped Stitches	Incorrect needle, bent needle, improper threading.	Replace needle, re-thread machine, ensure correct needle type for fabric.
Thread Breaking	Incorrect threading, tension too tight, damaged needle, poor quality thread.	Re-thread, adjust tension, replace needle, use good quality thread.
Bobbin Thread Jamming	Improperly wound bobbin, incorrect bobbin insertion, lint in bobbin case.	Re-wind bobbin, re-insert bobbin correctly, clean bobbin area.
Machine Not Starting	Power cord not connected, machine switched off, foot pedal not connected.	Check power connections, ensure switch is ON, connect foot pedal.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	SINGER
Model Number	Start 1306
Item Weight	4.3 kg
Product Dimensions (LxWxH)	35 x 18 x 29 cm
Voltage	220V
Wattage	70 Watts
Built-in Stitches	6 (4 basic, 1 decorative, 1 buttonhole)
Buttonhole Type	4-step automatic
Frame Material	Heavy Duty Metal
Included Components	All Purpose Foot, Zipper Foot, Buttonhole Foot, Darning Plate, Pack of Needles, Bobbins, Spool Pin Felts, Needle Plate Screwdriver, Seam Ripper / Lint Brush, Vinyl Dust Cover



Image 7.1: Product dimensions of the SINGER Start 1306 Sewing Machine.

 
8. WARRANTY AND SUPPORT

Your SINGER Start 1306 Sewing Machine comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration. For technical assistance, service, or to inquire about replacement parts, please contact SINGER customer support through their official website or the contact information provided in your warranty documentation.

© 2023 SINGER. All rights reserved.

Related Documents - Start 1306


	Singer Sewing Machine Parts Catalog: Models 404-1, 404-4, 404-5 Official parts catalog and ordering guide from The Singer Manufacturing Company for Singer sewing machine models 404-1, 404-4, and 404-5. Features detailed part listings, numbers, and instructions for maintenance and repair.
	Singer 401 Sewing Machine Instruction Manual Comprehensive guide to operating and maintaining the Singer 401 sewing machine, covering features, threading, bobbin winding, and stitch selection.
	Singer 500A Sewing Machine Parts List and Diagrams Explore the official parts list and detailed diagrams for the Singer 500A sewing machine, including electrical components for related models. Find part numbers for maintenance and repair.
  6199/6180/6160 KULLANIM KILAVUZU	Singer 6199/6180/6160 Dikiş Makinesi Kullanım Kılavuzu Singer 6199, 6180 ve 6160 ev tipi dikiş makineleri için kapsamlı kullanım kılavuzu. Bu belge, makinenin güvenli kurulumu, tüm dikiş fonksiyonlarının kullanımı, düzenli bakım ve sorun giderme adımları hakkında detaylı bilgiler sunar.
	Singer Slant-O-Matic 403 Special Sewing Machine Instructions Comprehensive instructions and guide for the Singer Slant-O-Matic 403 Special sewing machine, covering features, operation, threading, bobbin winding, and fabric/needle/thread selection. Learn to maximize your sewing experience with this classic machine.

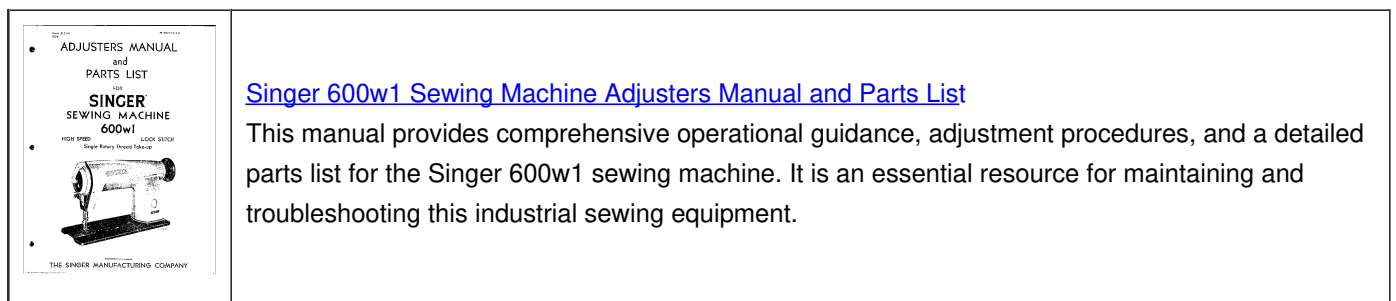

[Singer 600w1 Sewing Machine Adjusters Manual and Parts List](#)

This manual provides comprehensive operational guidance, adjustment procedures, and a detailed parts list for the Singer 600w1 sewing machine. It is an essential resource for maintaining and troubleshooting this industrial sewing equipment.

 Documents - SINGER – Start 1306

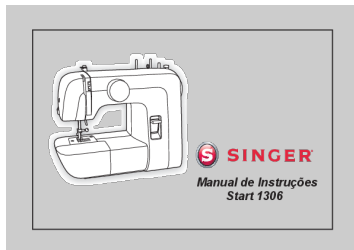

[\[pdf\]](#) User Manual


Start 1306 Vivo 1106 pt br V3 Singer Leia as instruções antes de usar a sua máquina costura Mantenha o manual em local adequado e perto da Certifique se Manual REV 15 03 09 static fnac multimedia PT Manual de Instrues **Start 1306** INSTRUES DE SEGURANA Esta mquina domstica est de acordo com a diretriz da CEE 89/336/EEC, abrangendo a supresso contra interferncia de rdio. IMPORTANTES INSTRUES DE SEGURANA Quando utilizar aparelho eltrico, algumas precaues bsicas devem ser seguidas: Leia as instrues... lang:pt **score:28** filesize: 2.51 M page_count: 34 document date: 2015-05-04



[\[pdf\]](#)

Maszyna do szycia Singer start 1306 Sklep internetowy stylem pl maszyna singer 50080 upload files product |||

 Maszyna do szycia Singer **start 1306** Indeks: 50080 Producent: Singer Kod producenta: Singer **start 1306** Cena: 490.77 zł Opis **SINGER START 1306** Maszyna do szycia Producent: Singer Cechy Typ dziurki guzika: Czterostopniowy Typ kontroli: obrotowy Liczba wzorw ciegw: 6 Wolne rami: Tak Automatyczny nawlek... lang:pl **score:27** filesize: 689.79 K page_count: 2 document date: 2022-08-03

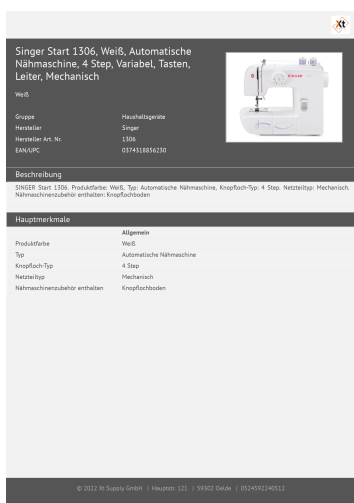

[\[pdf\]](#) Datasheet

Datenblatt Singer Sewing machine Start 1306 White Conrad datasheet 2265671 singer sewing start white asset conrad media10 add 160267 c1 de 841456074DS00 |||


Singer **Start 1306**, Wei, Automatische Nhmaschine, 4 Step, Variabel, Tasten, Leiter, Mechanisch Wei Gruppe Hersteller Hersteller Art. Nr. EAN/UPC Haushaltsgerte Singer 1306 0374318856230 Beschreibung **SINGER Start 1306**. Produktfarbe: Wei, Typ: Automatische Nhmaschine, Knop och-Typ: 4 Step. Netzteilt... lang:nl **score:25** filesize: 62.68 K page_count: 1 document date: 2022-10-26



[pdf]

Datenblatt Tehnični podatki 2265671 Singer šivalni stroj s prosto ramo Start 1306 bela MegaShop spletna trgovina Megashop si tehnicni singer sivalni start asset conrad media10 add 160267 c1 de 890570296DS00 |||

 Singer **Start 1306**, Wei, Automatische Nhmaschine, 4 Step, Variabel, Tasten, Leiter, Mechanisch Wei Gruppe Hersteller Hersteller Art. Nr. EAN/UPC Haushaltsgerte Singer 1306 0374318856230 Beschreibung SINGER **Start 1306**. Produktfarbe: Wei, Typ: Automatische Nhmaschine, Knopfloch-Typ: 4 Step. Netzteil... lang:de score:24 filesize: 87.37 K page_count: 1 document date: 2024-03-14

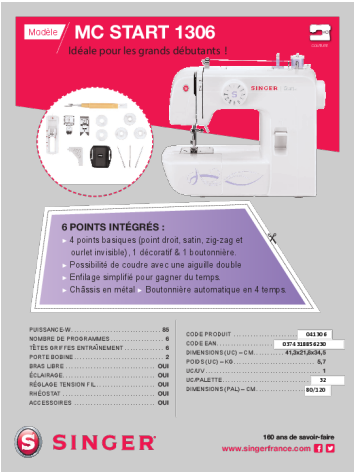


[pdf] Dimension Guide

Télécharger la fiche produit Pulsat SINGER MC START 1306 Machine à coudre 1000078103 b pulsat fr media |||

Modle MC **START 1306** COUTURE Idale pour les grands dbutants 6 POINTS INTGRS : 4 points basiques point droit, satin, zig-zag et ourlet invisible , 1 dcoratif 1 boutonnire. Possibilit de coudre avec une aiguille double Enfilage simplifi pour gagner du temps. Chssis en mtal Boutonniere automat... lang:pt score:18 filesize: 1.08 M page_count: 1 document date: 2016-10-14

[pdf] User Manual

 Start 1306 Vivo 1106 pt br V3 Manual de Instruções taQiPuxe suavemente a linha da agulha para trazer bobina cima através abertura chapa 2 Passe as duas linhas e de maquina costura singer start 1306taqi file general maquina srsltid AfrmBOop0jclw r5L3l0iOCGqpYeqHcwp0W65nOCIAN wqu0HvODpiRq4 taQiManual de Puxe 1306maquina AfrmBOoqbFjfpvIZY DPdhQmgNDqp2msggaPspPpIPTW95tdRG7R9Oe5taqi taQiSe for difícil verifique se não está presa A sapatilha quilt livre é um acessório opcional portanto esta faz parte Puxe

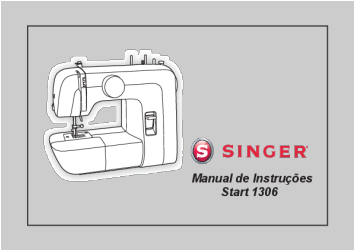

AfrmBOooNNA7rmcgl1sFJwCDjIMO05R0biXAFBHRisYOtve6GbX1joeNLtaqi de Para melhorar o resultado use agulhas originais SINGER® Substitua regularmente evitar falhas pontos ou quando ocorrerem quebrasmaquina wqu0HvODpiRq4taqi AfrmBOooka7 oHH3qusiJj8A4Qz1H5ojj8bq7XVrfq7XabDU2fnZLIURp quebrasEsse aparelho destina à utilização por pessoas inclusive crianças com capacidades físicas sensoriais mentais reduzidas com maquina oHH3qusiJj8A4Qz1H5ojj8bq7XVrfq7XabDU2fnZLIURptaqi AfrmBOoqliEgJcGQZs3uyAVavLa3VAskSWd38hKvCgVs9cY0l we8PBOq taQiclique baixarSe com Máquina Singermaquina 1306manual106663taqi we8PBOqblog eletrolar manuais manual106663 ||| Manual de Instrues **Start 1306** INSTRUES DE SEGURANA Esta mqina domstica est de acordo com a diretriz da CEE 89/336/EEC, abrangendo a supresso contra interferncia de rdio. IMPORTANTES INSTRUES DE SEGURANA Quando utilizar aparelho eltrico, algumas precaues bsicas devem ser seguidas: Leia as instrues... lang:pt score:18 filesize: 2.51 M page_count: 34 document date: 2015-05-04



[pdf]

Start 1306 singer pe 2021 06 |||

CARACTERSTICAS ELCTRICAS ...

lang:pt score:16 filesize: 140.33 K page_count: 1 document date: 2020-09-03



[pdf] Accessories Catalog

Catalogo Singer 2024 final cdr Martina Vigliotti Nuovo complete 1 singer it 04 |||

Catalogo Generale 2024 Benvenuta nella famiglia Singer. Se ti dedichi al quilting, al bricolage, a ... Serie MC Meccaniche 1507* 8280* M1500 M1600 M2100 M2400 M3200 M3300 M3500 M1005 SM024 M1155 M1255 **START 1306** Simple 3221 3232 3210 Simple 3223 Simple 3229 Simple Promise 1408 1409 1412 Promise Tradi...

lang:it score:14 filesize: 3.43 M page_count: 86 document date: 2024-04-18



[pdf] Catalog

Catalogo Singer 2024 final cdr Martina Vigliotti Nuevo Catálogo ES singer it 05 |||

Catlogo General 2024 Bienvenido a la familia Singer de accesorios para coser Si acolcha, elabora, ... Serie MC Meccaniche 1507* 8280* M1500 M1600 M2100 M2400 M3200 M3300 M3500 M1005 SM024 M1155 M1255 **START 1306** Simple 3221 3232 3210 Simple 3223 Simple 3229 Simple Promise 1408 1409 1412 Promise Tradi...

lang:es score:14 filesize: 7.68 M page_count: 84 document date: 2024-05-10



[Catalogo Generale Singer 2024: Macchine da Cucire, Accessori e Elettrodomestici](#)

Scopri il catalogo completo Singer 2024, con una vasta gamma di macchine da cucire, accessori innovativi, kit per quilting e ricamo, e la linea Singer Home Essentials per la casa. Trova gli strumenti perfetti per ogni progetto creativo.

lang:it score:12 filesize: 3.43 M page_count: 86 document date: 2024-05-29

Priskategori
800,-

[\[pdf\]](#) Decleration of Conformity

Priskategori Lomax OBH X pert 7 60 Essential Stangstøvsuger Vejl udsalgspris kr 2199 Page 19 Kath Andersen KA32 Kopkasse eg 2900 20 Daiwa 800 cdn lomax dk image upload v1749555623 doc ||| Gavebeviskatalog 2025 Priskategori 800,- Royal Copenhagen Hvid Bl Mega Riflet Fade, 2stk Vejl ud 1398,- Timberland Trailforce GPS Smartwatch 48mm Vejl udsalgspris kr. 1595,- Singer Symaskine **Start 1306** Vejl udsalgspris kr. 1499,- OBH X-pert 7.60 Essential Stangstvsuger Vejl udsalgspris kr...

lang:da **score:10** filesize: 21.07 M page_count: 24 document date: 2025-06-10



SINGER

Start. Instruction Manual

[Singer Start Sewing Machine Instruction Manual](#)

A comprehensive guide to operating and maintaining your Singer Start sewing machine. This manual covers setup, threading, basic stitches, advanced techniques, troubleshooting, and safety instructions.

lang:da **score:9** filesize: 3.69 M page_count: 36 document date: 2014-09-04