

## Amica WA 14655 W

# Amica WA 14655 W Washing Machine User Manual

Model: WA 14655 W

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Amica WA 14655 W washing machine. Please read these instructions carefully before using the appliance and keep them for future reference. This appliance is designed for household use only.

## 2. SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. Ensure the appliance is properly grounded. Do not allow children to play with the appliance. Disconnect the appliance from the power supply before cleaning or performing maintenance. Do not operate the appliance if it is damaged.

## 3. PRODUCT OVERVIEW AND FEATURES

---

The Amica WA 14655 W washing machine is a slim-line appliance with a depth of 47 cm and a 6 kg washing capacity. It offers a maximum spin speed of 1400 revolutions per minute (RPM) and is designed for under-counter installation. Key features include:

- **Program Selection:** Rotary dial with 16 programs.
- **Special Programs:** 15-minute quick wash, Baby Comfort, individual rinse.
- **Automatic Functions:** Load sensing, foam detection, unbalance system.
- **Display:** Red LED display for status and remaining time.
- **Safety Features:** AquaStop safety hose, overflow protection, door lock indicator, child lock.
- **Convenience:** Delay start function (1-24 hours).
- **Drum Design:** Soft Drum washing drum.

## 4. SETUP AND INSTALLATION

---

Before first use, ensure the washing machine is correctly installed and leveled. Remove all transport bolts from the rear of the appliance. Connect the water inlet hose to a cold water tap and the drain hose to a suitable drain. Plug the power cord into a grounded electrical outlet. For under-counter installation, ensure adequate ventilation and space.

**Important:** Refer to the separate installation guide for detailed instructions on connecting water, drainage, and electrical supply.

## 5. OPERATING INSTRUCTIONS

---

To operate your Amica WA 14655 W washing machine:

- Load Laundry:** Open the door and place laundry loosely into the drum, ensuring not to overload.
- Add Detergent:** Dispense appropriate detergent and fabric softener into the designated compartments in the detergent drawer.
- Select Program:** Turn the rotary dial to select the desired washing program (e.g., Cotton, Synthetics, Quick Wash 15', Baby Comfort).
- Adjust Settings:** Use the control buttons to adjust temperature (e.g., 20°C, 30°C, 40°C, 60°C, 90°C) and spin speed (e.g., 400, 600, 800, 1000, 1200, 1400 RPM) if needed.
- Start Cycle:** Press the Start/Pause button to begin the wash cycle. The LED display will show the remaining time.
- End of Cycle:** Once the cycle is complete, the machine will signal. The door lock indicator will turn off, allowing you to open the door and remove the laundry.

## 6. MAINTENANCE AND CLEANING

---

Regular maintenance ensures optimal performance and longevity of your washing machine.

- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- **Detergent Drawer:** Periodically remove and clean the detergent drawer under running water to prevent residue buildup.
- **Door Seal:** Wipe the rubber door seal after each wash to remove lint and moisture, preventing mold growth.
- **Drain Filter:** Clean the drain filter regularly (e.g., every few months) to remove foreign objects and lint. Refer to the full manual for instructions on accessing and cleaning the filter.
- **Drum Cleaning:** Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) periodically to clean the drum.

## 7. TROUBLESHOOTING

---

If you encounter issues with your washing machine, consult the following table before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected; Child lock active.	Check power connection; Close door firmly; Select a program; Deactivate child lock.
No water intake	Water tap closed; Inlet hose kinked; Water filter blocked.	Open water tap; Straighten hose; Clean water inlet filter.
Machine vibrates excessively	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry in the drum.
Water not draining	Drain hose kinked or blocked; Drain filter blocked.	Check and clear drain hose; Clean drain filter.

## 8. SPECIFICATIONS

---

Below are the technical specifications for the Amica WA 14655 W washing machine:

- **Model Number:** WA 14655 W
- **Manufacturer:** Amica
- **Dimensions (H x W x D):** 84.99 x 59.51 x 49.5 cm
- **Weight:** 56 kg (123.46 lbs)
- **Capacity:** 6 Kilograms
- **Loading Type:** Front-load
- **Maximum Spin Speed:** 1400 RPM
- **Temperature Regulation:** 20°C, 30°C, 40°C, 60°C, 90°C
- **Spin Speed Regulation:** 400, 600, 800, 1000, 1200, 1400 RPM
- **Energy Efficiency Class:** A+++
- **Reference Program:** Cotton 60 °C, 197 minutes
- **Interface:** Buttons

## 9. ENERGY EFFICIENCY INFORMATION

---

The Amica WA 14655 W washing machine is designed for energy and water efficiency. The following image displays the official energy label for this model, providing key performance indicators.



This image displays the energy label for the Amica WA 14655 W washing machine. It shows an energy efficiency class of A+++, an annual energy consumption of 153 kWh, and an annual water consumption of 8800 liters. The washing capacity is 6.0 kg. Noise levels are indicated as 58 dB during washing and 78 dB during spinning. The spin efficiency class is rated from A to G.

## 10. WARRANTY AND SUPPORT

For information regarding the warranty period and terms for your Amica WA 14655 W washing machine, please refer to the warranty card provided with your appliance at the time of purchase. For technical support, spare parts, or service requests, please contact Amica customer service or an authorized service center. Contact details can typically be found in the warranty documentation or on the official Amica website.

