

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bauknecht](#) /
- › [Bauknecht Super Eco 7415 Washing Machine User Manual](#)

Bauknecht Super Eco 7415

Bauknecht Super Eco 7415 Washing Machine

USER MANUAL

Product Overview

The Bauknecht Super Eco 7415 is a high-efficiency, front-loading washing machine designed for household use. It features a 7 kg capacity and a maximum spin speed of 1400 revolutions per minute, ensuring thorough cleaning and efficient water extraction. This appliance is equipped with advanced features to simplify laundry tasks and optimize performance.



Figure 1: Front view of the Bauknecht Super Eco 7415 washing machine, showing the control panel, detergent drawer, and drum door.

Safety Information

Before operating the appliance, please read all safety instructions carefully to prevent injury or damage. Keep this manual

for future reference.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the washing machine. This model includes a child lock feature for safety.
- Do not touch the appliance with wet hands.
- Unplug the appliance before performing any maintenance or cleaning.
- Do not overload the washing machine beyond its 7 kg capacity.

Setup and Installation

Proper installation is crucial for the optimal performance and longevity of your washing machine.

1. **Unpacking:** Carefully remove all packaging materials. Check for any transport damage.
2. **Location:** Place the washing machine on a firm, level surface. Ensure there is adequate space around the appliance for ventilation and access. The dimensions are approximately 59.5 cm (width) x 56.5 cm (depth) x 85 cm (height).
3. **Leveling:** Adjust the adjustable leveling feet until the machine is perfectly stable and level. This prevents excessive vibration and noise during operation.
4. **Water Connection:** Connect the water inlet hoses to the appropriate cold and hot water taps (if applicable) and to the machine's inlet valves. Ensure connections are tight to prevent leaks.
5. **Drainage:** Securely position the drain hose into a standpipe or laundry tub, ensuring it is not kinked or blocked.
6. **Electrical Connection:** Plug the power cord into a grounded electrical outlet. Do not use extension cords or adapters.



Figure 2: The washing machine with its front-loading door open, illustrating the drum and the accessibility for loading laundry.

Operating Instructions

Follow these steps for efficient and effective washing:

1. **Loading Laundry:** Open the door and load items loosely into the drum, ensuring not to exceed the 7 kg capacity. Close the door firmly.
2. **Adding Detergent:** Pull out the detergent drawer. Use the dosing assistant feature to add the correct amount of detergent and fabric softener to the designated compartments.
3. **Selecting a Program:** Turn the program selector knob to choose the desired wash program based on fabric type and soil level.
4. **Adjusting Settings:** Use the control panel buttons to adjust additional settings such as temperature, spin speed (up to 1400 RPM), and delay start, if available for the selected program. The integrated display will show the remaining time.
5. **Child Lock:** To activate the child lock, refer to the specific instructions in the control panel section of the full manual. This feature prevents accidental changes to settings during operation.
6. **Starting the Cycle:** Press the Start/Pause button to begin the wash cycle. The display will show the progress and remaining time.
7. **End of Cycle:** The machine will signal when the cycle is complete. Wait for the door lock indicator to turn off before opening the door and removing laundry.



Figure 3: Close-up view of the Bauknecht Super Eco 7415 control panel, showing the program selector, display, and function buttons.

Maintenance and Care

Regular maintenance ensures the longevity and efficiency of your washing machine.

- **Cleaning the Detergent Drawer:** Periodically remove and clean the detergent drawer to prevent residue buildup. Rinse with warm water and a brush.
- **Cleaning the Drum:** Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) monthly to clean the drum and remove any odors.
- **Cleaning the Filter:** Locate and clean the drain pump filter regularly (e.g., every few months) to remove lint and small objects. Refer to the full manual for exact location and procedure.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.

- **Door Seal:** After each wash, wipe the door seal dry to prevent mold and mildew growth. Leave the door slightly ajar when not in use to allow air circulation.

Troubleshooting

This section addresses common issues you might encounter. For more complex problems, contact customer support.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Door not closed properly; Child lock activated.	Check power connection; Ensure door is firmly shut; Deactivate child lock.
Excessive vibration/noise	Machine not level; Transport bolts not removed; Uneven load.	Adjust leveling feet; Ensure transport bolts are removed (during installation); Redistribute laundry evenly.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and straighten drain hose; Clean the drain pump filter.
Detergent residue in drawer	Insufficient water pressure; Detergent drawer clogged.	Check water supply; Clean the detergent drawer.

Specifications

Feature	Detail
Brand	Bauknecht
Model Name	Super Eco 7415
Product Model Number	858364803010
Type	Front-loading Washing Machine
Capacity	7 Kilograms
Maximum Spin Speed	1400 Revolutions per minute
Dimensions (W x D x H)	59.5 x 56.5 x 85 cm
Special Features	Child lock, Dosing assistant, Adjustable spin speed, Remaining time display, Built-in display, Adjustable leveling feet
ASIN	B00SWWTGHQ

© 2024 Bauknecht. All rights reserved.

For further assistance, please refer to the official Bauknecht website or contact customer support.