

[Manuals.plus](#) /

› [Hot Wheels](#) /

› Hot Wheels Spin Storm Track Set Instruction Manual

Hot Wheels CDL45

Hot Wheels Spin Storm Track Set

Model: CDL45

PRODUCT OVERVIEW

The Hot Wheels Spin Storm Track Set is designed for thrilling racing and crashing action. This motorized playset features multiple intersections and a powerful booster to keep cars speeding through loops and crash zones.



Image: The Hot Wheels Spin Storm Track Set box, showing the assembled track with cars in action.

PACKAGE CONTENTS

- 1 Hot Wheels Spin Storm Track Set (unassembled components)

- 1 Hot Wheels 1:64 Scale Toy Car
- Instruction Manual (this document)

Note: Additional cars are sold separately. Colors and decorations of the included car may vary.

SETUP INSTRUCTIONS

Follow these steps to assemble your Hot Wheels Spin Storm Track Set. Adult assembly is required.

1. Unpack Components

Carefully remove all track pieces, base units, and accessories from the packaging. Ensure all parts are present before beginning assembly.

2. Assemble the Base

Connect the main base sections as indicated in the diagrams. Ensure all connections are secure.

3. Attach Track Sections

Begin attaching the orange track pieces to the base and support structures. Pay close attention to the direction of the loops and curves.



Image: A fully assembled Hot Wheels Spin Storm Track Set on a wooden floor, surrounded by several Hot Wheels cars, demonstrating its complete form.

4. Install Motorized Booster

Locate the motorized booster unit and integrate it into the designated track section. This unit requires 4 D batteries (not included).

5. Insert Batteries

Open the battery compartment on the motorized booster. Insert 4 D batteries, ensuring correct polarity (+/-). Close the compartment securely.

6. Final Checks

Double-check all connections to ensure the track is stable and free of gaps that could impede car movement.

OPERATING THE TRACK SET

The Hot Wheels Spin Storm Track Set is designed for 1 or 2 players, offering dynamic racing and crashing experiences.

1. Power On

Locate the power switch on the motorized booster and turn it to the "ON" position. You will hear the motor begin to hum.

2. Place Cars

Place a Hot Wheels car (1:64 scale) onto one of the two launch gates.



Image: A close-up view of the track's central base, showing two hands positioning Hot Wheels cars on the launch gates, indicating it supports one or two players.

3. Launch Cars

Push the launch lever firmly to release the car onto the track. The motorized booster will propel the car through the loops and crash zones.



PUSH TO LAUNCH

Image: A hand pressing down on a yellow launch lever on the track, demonstrating the action required to start a car.

4. Engage in Crashing Action

The track features three crash zones where cars can collide spectacularly. The objective is often to be the last car racing.



SURVIVE THE CRASH ZONES!

Image: Multiple Hot Wheels cars are shown in mid-air and on the track within the crash zones, illustrating the dynamic collision feature of the playset.

Official Product Video

Your browser does not support the video tag.

Video: An official product demonstration of the Hot Wheels Spin Storm Playset, showcasing its motorized booster and crashing action with cars racing through the loops.

MAINTENANCE AND CARE

- **Cleaning:** Wipe down track surfaces and components with a dry, soft cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Replacement:** When the motorized booster's performance decreases, replace all 4 D batteries with new ones. Always use fresh batteries of the same type.
- **Storage:** Disassemble the track set for compact storage. Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cars not moving or moving slowly	Low batteries; Track connections loose; Obstruction on track.	Replace batteries; Check all track connections; Remove any debris from the track.
Cars frequently crashing or derailling	Too many cars on track; Incorrect car type; Track not fully assembled.	Reduce number of cars; Ensure using 1:64 scale Hot Wheels cars; Verify all track pieces are securely connected.
Motor not working	No batteries; Batteries inserted incorrectly; Power switch off.	Insert 4 D batteries; Check battery polarity; Turn power switch to "ON".

PRODUCT SPECIFICATIONS

- **Model Number:** CDL45
- **Product Dimensions:** 3.4 x 32.67 x 25.98 inches
- **Item Weight:** 4.38 pounds
- **Recommended Age:** 5 years and up
- **Batteries Required:** 4 D batteries (not included)
- **Manufacturer:** Mattel
- **Release Date:** January 5, 2015

WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Manufacturer: [Mattel](#)

For additional resources, you may visit the official [Hot Wheels Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question