

Barbie CJT42

Barbie Pop-Up Camper Instruction Manual

Model: CJT42

1. SAFETY INFORMATION

WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.

Always supervise children during play to ensure safe use of all components.

2. SETUP AND TRANSFORMATION

The Barbie Pop-Up Camper transforms from a compact vehicle into a multi-level playset. Follow these steps for setup:

- Initial Vehicle Mode:** The camper is designed as a glam vehicle with two front seats and seatbelts.
- Transforming to Playset:** To convert the camper into a three-story playset, gently lift the handle located on the top of the camper. The camper will pop up and expand.
- Front Cab to Bathroom:** Remove the front seats to reveal a toilet underneath. Flip the steering wheel to convert it into a sink.
- Rear Cab to Kitchen:** Flip over the spare tire cover at the back of the cab to reveal a fire pit. Open the back door to access the kitchen area, which includes a fridge, sink, oven, and stove.
- Bedroom Area:** The center room features a double bed and a hanging hammock.
- Pool and Slide:** Slide the swimming pool out from the bottom of the camper. Connect the blue slide, which starts from the second floor, to the pool.
- Second Floor Living Room:** This area includes a couch and a television.
- Third Floor Dining Area:** Set up the dining table and chairs on the third-floor terrace patio.



Image 2.1: The Barbie Pop-Up Camper fully transformed into its three-story playset configuration, showcasing various play areas and accessories.

3. OPERATING THE FEATURES

Once the camper is set up, explore its interactive features:

- **Driving:** In vehicle mode, the camper can be rolled for imaginative travel.
- **Bathroom Use:** Dolls can use the toilet and sink in the converted front cab.
- **Kitchen Activities:** Utilize the fridge, sink, oven, and stove for cooking play. Accessories like cookware, food, and place settings enhance the experience.
- **Sleeping Areas:** Dolls can rest on the double bed or in the hammock in the central room.
- **Pool Fun:** Fill the pull-out pool with water for dolls to slide into from the second-floor slide.
- **Living Room Relaxation:** Dolls can relax on the sofa and watch the pretend TV.
- **Dining Outdoors:** Use the table and chairs on the third-floor patio for outdoor meals.
- **Campfire:** Use the fire pit with roasting sticks and marshmallows for a camping experience.



Image 3.1: Detailed view of the camper's kitchen area, showing a Barbie doll and a Chelsea doll engaging in cooking play with various accessories.



Image 3.2: The camper's bathroom setup, featuring a Barbie doll at the sink and a Chelsea doll on the toilet, demonstrating the functional design.



Image 3.3: The bedroom section of the camper, showing several Barbie dolls and pets comfortably situated on the bed and hammock.

4. MAINTENANCE

To ensure the longevity of your Barbie Pop-Up Camper, follow these simple maintenance guidelines:

- **Cleaning:** Wipe down the camper and accessories with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these may damage the plastic.
- **Drying:** Ensure all parts, especially the pool area, are completely dry before storing to prevent mold or mildew.
- **Storage:** Store the camper in a clean, dry place away from direct sunlight and extreme temperatures to prevent warping or fading.

5. TROUBLESHOOTING

If you encounter any issues with your Barbie Pop-Up Camper, refer to the following common solutions:

- **Camper Not Expanding/Retracting Smoothly:** Check for any obstructions or misaligned parts. Ensure the handle is lifted or pushed down firmly and evenly.
- **Missing Accessories:** Refer to the "What's Included" section in the product packaging. If items are missing upon purchase, contact customer support.
- **Parts Not Staying in Place:** Ensure all transforming parts are fully extended or retracted and clicked into their designated positions.

6. SPECIFICATIONS

Brand	Barbie
Model Number	CJT42
Age Range	36 months - 7 years
Item Dimensions (L x W x H)	7.99 x 22.52 x 13.46 inches
Item Weight	1.5 kg
Material	Plastic
Included Components	Camper, fire pit, roasting sticks with marshmallows, cookware, food, place settings, sofa, bed, blanket, table, two chairs, tire cover/fire pit-campfire, popcorn in bowl, juice bottle, egg carton, milk carton, frying pan, spatula, soap bottle, toothpaste, toothbrush, towel, plates, cups, two bed pillows. (Dolls sold separately)
UPC	704022971408, 634154125441, 751109694200, 798257186256, 094829004219, 740647773553, 751195338989, 887961105087, 673424431493, 787793147807, 793945683772, 714547236357, 781493176716, 742359282712, 783149918763, 759455257070

7. WARRANTY INFORMATION

This product comes with a **1-year warranty against manufacturer defects** from the date of purchase. Please retain your proof of purchase for warranty claims. This warranty does not cover damage resulting from misuse, accident, unauthorized modification, or normal wear and tear.

8. CUSTOMER SUPPORT

For further assistance, questions, or to report any issues, please contact Barbie Customer Service:

- **Website:** Visit the official Barbie website for support resources.
- **Phone:** Refer to the contact information provided on the product packaging or the official Barbie website for your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00T03UAEY>

More documents and user manuals: <https://manuals.plus/>