

ESPRIT Anteros EL101281F05

ESPRIT Collection Anteros Chronograph Quartz Watch Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your ESPRIT Collection Anteros Chronograph Quartz Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. This watch features a precise quartz movement, chronograph functionality, and is designed for daily wear.

PACKAGE CONTENTS

Upon opening your ESPRIT Collection Anteros watch box, you should find the following items:

- ESPRIT Collection Anteros Chronograph Quartz Watch
- Instruction Manual (this document)
- Warranty Card (if applicable)
- Presentation Box



The ESPRIT watch presentation box, open to reveal the watch cushion inside. The box is dark brown with 'ESPRIT collection' logo.



The ESPRIT watch presentation box, closed, showing the 'ESPRIT collection' logo on the side.

SETUP

1. Initial Time Setting

1. Pull the crown (B) out to position 2. The second hand will stop.
2. Rotate the crown (B) to set the hour and minute hands to the correct time.
3. Push the crown (B) back to position 1. The second hand will resume movement.

2. Date Setting

1. Pull the crown (B) out to position 1.
2. Rotate the crown (B) clockwise or counter-clockwise to set the correct date.
3. Push the crown (B) back to the normal operating position.

Note: To avoid setting the date during the automatic date change period (typically between 9 PM and 3 AM), it is recommended to set the date outside of these hours. If the date changes at noon, advance the time by 12 hours.

3. Bracelet Adjustment

The stainless steel bracelet can be adjusted by removing or adding links. This procedure typically requires specialized tools and is best performed by a qualified jeweler or watch technician to ensure proper fit and avoid damage to the bracelet or clasp.



Front view of the ESPRIT Collection Anteros Chronograph Quartz Watch, featuring a black dial, silver-tone stainless steel case, and matching bracelet. The crown (B) and pushers (A, C) are visible on the right side of the case.

OPERATING THE WATCH

Timekeeping

Your ESPRIT Anteros watch is powered by a quartz movement, providing accurate timekeeping. The main hands display hours, minutes, and seconds.

Chronograph Function

The chronograph allows for precise measurement of elapsed time.

1. **Start:** Press pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping the chronograph, press pusher (C) to reset all chronograph hands to their zero positions.
4. **Intermediate Time (Split Time):** While the chronograph is running, press pusher (C) to measure an intermediate time. The chronograph hands will stop to show the split time. Press pusher (C) again to resume chronograph measurement.

Water Resistance

This watch is water resistant up to 100 meters (10 ATM). This rating makes it suitable for swimming and snorkeling, but not for high-impact water sports or diving. Ensure the crown is fully pushed in before any contact with water. Do not operate the crown or pushers while the watch is wet or submerged.

Luminous Features

The hands and markers of your watch are treated with a luminous material, allowing for readability in low-light conditions after exposure to light.

MAINTENANCE

Cleaning

Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dirt and moisture. For stainless steel, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners or abrasive materials.

Battery Replacement

The watch is powered by a standard watch battery. When the battery is depleted, the watch will stop running. Battery replacement should be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

Water Resistance Checks

It is recommended to have the water resistance of your watch checked annually, especially if it is frequently exposed to water, or after any battery replacement or service that involves opening the watch case.

Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight and extreme temperatures. The original presentation box is ideal for storage.

TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Incorrect time/date:** Refer to the "Setup" section for instructions on how to correctly set the time and date.

- **Chronograph hands not resetting to zero:** This may require a chronograph reset procedure. Consult a watch technician if the issue persists after attempting to reset the chronograph using pusher (C).
- **Condensation under crystal:** This indicates a loss of water resistance. Avoid further contact with water and have the watch inspected by a professional immediately.

SPECIFICATIONS

Brand	ESPRIT
Model Name	Anteros
Manufacturer Part Number	EL101281F05
Movement Type	Quartz
Display Format	Chronograph
Case Material	Stainless Steel
Band Material	Stainless Steel
Crystal Type	Mineral Crystal
Case Diameter	45 mm
Case Thickness	11 mm
Band Width	24 mm
Band Length	20 cm
Water Resistance	100 Meters (10 ATM)
Special Features	Luminous, Chronograph
Power Source	Battery
Clasp Type	Butterfly
Dial Color	Black
Case/Band Color	Silver-black (Stainless Steel)

WARRANTY AND SUPPORT

Your ESPRIT Collection Anteros watch is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the separate warranty card included with your purchase for specific terms, conditions, and duration of the warranty.

For technical support, service, or warranty claims, please contact ESPRIT customer service or an authorized service center. Contact information can typically be found on the warranty card or the official ESPRIT website.

