

Melissa & Doug S

Melissa & Doug Hammer and Saw Tool Bench (Model S) User Manual

Model: S | Brand: Melissa & Doug

[Instructions](#) [Safety Information](#) [What's in the Box](#) [Setup](#) [Operating](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for choosing the Melissa & Doug Hammer and Saw Tool Bench. This wooden toy is designed to provide hours of imaginative play and help develop fine motor skills, hand-eye coordination, and basic problem-solving abilities. Please read this manual carefully before assembly and use to ensure safe and enjoyable play.

SAFETY INFORMATION

WARNING! Choking hazard due to small parts. Not suitable for children under 3 years. Adult supervision is recommended during play, especially with smaller components.

- Ensure all parts are securely fastened before play.
- Regularly inspect the toy for any damage or loose parts. Discontinue use if damage is found.
- Keep packaging materials away from children to prevent suffocation.

WHAT'S IN THE BOX

Your Melissa & Doug Hammer and Saw Tool Bench package includes the following components:

- 1 x Wooden tool bench with handles
- 6 x Wooden bolts
- 6 x Wooden nuts
- 2 x Wooden nails
- 1 x Saw block

- 11 x Building pieces
- 1 x C-clamp
- 1 x Hammer
- 1 x Saw
- 1 x Screwdriver
- 1 x Wrench



Image: All components of the Melissa & Doug Hammer and Saw Tool Bench as they appear in the packaging.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the workbench and all accessories from its packaging.
2. **Clean:** Wipe all detachable parts with warm, soapy water and allow them to dry completely before use.
3. **Assemble Workbench:** The workbench is largely pre-assembled. Use the included "miniwb" tools (hammer, screwdriver, wrench) to secure any loose parts or attach minor components as indicated in the diagrams (if applicable, no diagrams provided in data, so general instruction).
4. **Organize:** Place the tools and building components neatly on and around the workbench, ready for play.



Image: A child engaging with the tool bench, demonstrating initial setup and play.

OPERATING INSTRUCTIONS

The Melissa & Doug Hammer and Saw Tool Bench encourages creative and constructive play. Here are some ways to interact with the toy:

- **Hammering:** Use the wooden hammer to tap the wooden nails into the designated holes on the workbench.
- **Sawing:** Place the saw block between the self-adhesive tabs on the workbench. Use the wooden saw to mimic a sawing motion, "cutting" the wood.
- **Building:** Utilize the 26 building pieces, wooden bolts, and nuts to construct various shapes and structures. The screwdriver and wrench can be used to tighten and loosen the bolts and nuts.
- **C-Clamp:** The C-clamp can be used to hold pieces in place on the workbench, simulating real construction tasks.
- **Educational Play:** This toy helps children learn to sort pieces by shape and color, match corresponding parts, and count the various components.



Image: A child demonstrating the use of the wooden screwdriver with the tool bench.



Image: An example of a creative construction using the included building pieces.

MAINTENANCE

- **Cleaning:** Wipe the wooden parts with a damp cloth and mild soap as needed. Avoid harsh cleaners or excessive water, which can damage the wood finish.
- **Drying:** Ensure all parts are thoroughly dry before storing to prevent mold or warping.
- **Storage:** Store the toy in a dry place away from direct sunlight and extreme temperatures. The workbench itself can serve as a storage box for the smaller pieces.
- **Inspection:** Periodically check for any signs of wear and tear, such as splinters, cracks, or loose components. Tighten any loose screws or bolts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Nuts or bolts do not engage properly.	Threads may be stripped or parts may be slightly misaligned.	Try a different nut/bolt combination. Ensure parts are aligned before twisting. If consistently problematic, contact customer support.
Tool heads (e.g., hammer, saw handle) become loose.	Repeated impact or general wear.	If the part is designed to be reattached, do so. For wooden parts, a small amount of non-toxic wood glue can be used by an adult for repair, ensuring it is fully dry before returning to play.
Wooden pieces appear rough or splintered.	Normal wear or minor manufacturing imperfection.	Lightly sand the affected area with fine-grit sandpaper (adult supervision required). Ensure no loose splinters remain. Discontinue use if severe.

SPECIFICATIONS

- **Model:** S (Small)
- **Material:** Durable wood construction
- **Approximate Dimensions (Workbench):** 8.4 inches (21 cm) in height. Other dimensions are proportional to the "S" size.
- **Included Pieces:** 26 building pieces, 5 tools, 1 workbench. Total 31 pieces.
- **Recommended Age:** 3+ years

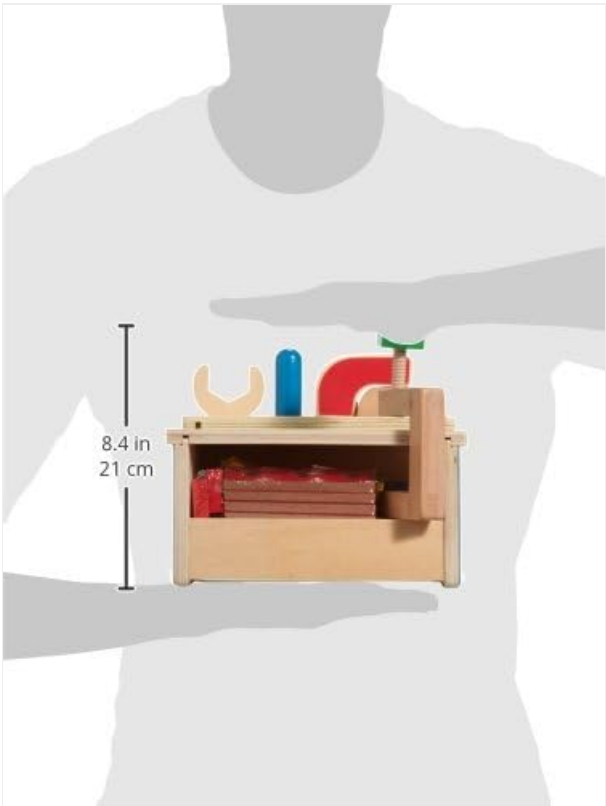


Image: Side view of the tool bench showing its approximate height.

WARRANTY AND SUPPORT

Specific warranty information for the Melissa & Doug Hammer and Saw Tool Bench is not provided in the product data. For details regarding warranty coverage, returns, or customer support, please refer to the retailer's policy where the

product was purchased or visit the official Melissa & Doug website.

Official Website: www.melissaanddoug.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question