

[manuals.plus](#) /› [Nikon](#) /› [Nikon COOLPIX S7000 Digital Camera Instruction Manual](#)**Nikon S7000**

Nikon COOLPIX S7000 Digital Camera Instruction Manual

Model: S7000

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Nikon COOLPIX S7000 Digital Camera. Please read it thoroughly before using the camera and keep it handy for future reference. The Nikon COOLPIX S7000 is a 16.0 Megapixel digital camera featuring a 20x optical zoom lens, 40x Dynamic Fine Zoom, and built-in Wi-Fi and Near Field Communication (NFC) technology for seamless photo sharing. It supports Full HD 1080/60i video recording with stereo sound and offers 4-axis Hybrid Vibration Reduction (VR) for stable footage.



Image: Nikon COOLPIX S7000 Digital Camera (Black)

2. WHAT'S IN THE Box

Your Nikon COOLPIX S7000 package includes the following items:

- COOLPIX S7000 Digital Camera (Black)
- EN-EL19 Rechargeable Li-ion Battery
- UC-E21 USB Cable
- AN-CP19 Strap
- EH-71P Charging AC Adapter

3. SETUP

3.1. Charging the Battery

1. Insert the EN-EL19 Rechargeable Li-ion Battery into the EH-71P Charging AC Adapter.
2. Plug the EH-71P Charging AC Adapter into a power outlet.
3. The charging indicator will illuminate during charging and turn off when complete.

3.2. Inserting the Battery and SD Card

1. Open the battery/SD card compartment cover on the camera.
2. Insert the charged EN-EL19 battery, ensuring correct orientation as indicated inside the compartment.
3. Insert a compatible SD, SDHC, or SDXC memory card into the card slot until it clicks into place.
4. Close the compartment cover securely.

3.3. Attaching the Camera Strap

Thread the AN-CP19 strap through the strap eyelet on the camera body and secure it firmly to prevent accidental drops.

4. OPERATING THE CAMERA

4.1. Power On/Off

Press the **ON/OFF** button located on the top of the camera to power it on or off. The lens will extend when powered on.

4.2. Taking Photos

1. Point the camera at your subject.
2. Press the shutter-release button halfway down to focus. The focus area will illuminate green when focus is achieved.
3. Press the shutter-release button all the way down to take the picture.

4.3. Recording Videos

Press the dedicated **Movie Record** button to start and stop video recording. The camera records Full HD 1080/60i videos with stereo sound.

4.4. Zoom Function

Use the zoom control lever around the shutter-release button to adjust the optical zoom (20x) and Dynamic Fine Zoom (40x) for closer or wider shots.

4.5. Scene Modes and Image Effects

The camera offers 18 Scene Modes (e.g., Beach, Snow, Night Portrait, Sunset) to optimize settings for various shooting conditions. Select **Easy Auto Mode** for automatic scene detection. Experiment with fun Image Effects to add creative touches to your photos and videos.

4.6. Target Finding AF

The Target Finding AF feature automatically detects and focuses on your intended subject, reducing out-of-focus shots.

4.7. Wi-Fi and NFC Connectivity

Utilize the built-in Wi-Fi and Near Field Communication (NFC) technology to wirelessly transfer photos to a compatible smartphone (NFC feature for Android v 4.0 or later smart devices only).

5. MAINTENANCE

- Keep the camera clean by wiping it with a soft, dry cloth.

- Avoid exposing the camera to extreme temperatures, humidity, or dust.
- Regularly back up your photos and videos to a computer using the UC-E21 USB Cable.
- Store the camera in a protective case when not in use.

6. TROUBLESHOOTING

6.1. Camera Does Not Turn On

- Ensure the battery is fully charged and correctly inserted.
- Try using a different charged battery if available.

6.2. Images Are Blurry

- Ensure the lens is clean and free from smudges.
- Confirm that the camera has focused correctly before fully pressing the shutter-release button.
- Check lighting conditions; use flash or adjust ISO if necessary.

6.3. Cannot Transfer Photos

- Verify Wi-Fi or NFC connection is active and properly configured on both the camera and the smart device.
- Ensure the UC-E21 USB Cable is securely connected to both the camera and the computer.

7. SPECIFICATIONS

- **Product Dimensions:** 3.9 x 1.06 x 2.36 inches
- **Item Weight:** 5.8 ounces
- **Item Model Number:** 26483
- **Batteries:** 1 Lithium Ion battery required (included)
- **Image Stabilization:** Optical
- **Optical Zoom:** 20x
- **Maximum Focal Length:** 500 Millimeters
- **Maximum Aperture:** 90 f
- **Expanded ISO Minimum:** 100
- **Photo Sensor Technology:** CMOS
- **Supported File Format:** JPEG, RAW
- **Metering Description:** Multi, Center-weighted, Spot

8. WARRANTY AND SUPPORT

Your Nikon COOLPIX S7000 Digital Camera comes with a manufacturer's warranty. Please refer to the warranty card included in your package for details on coverage and duration.

For technical support, service, or additional information, please visit the official Nikon website or contact their customer service department. Keep your purchase receipt and product serial number handy when seeking support.

