

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Nikon](#) /
- > [Nikon COOLPIX S6900 Digital Camera User Manual](#)

## Nikon S6900

# Nikon COOLPIX S6900 Digital Camera User Manual

Model: 26473

## INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Nikon COOLPIX S6900 Digital Camera. Designed for ease of use and versatility, this camera is ideal for capturing high-quality photos and videos, especially self-portraits and vlogs, thanks to its unique features.

Key features include a 16 MP sensor for sharp, vibrant photos, a 12x optical zoom lens, a swiveling Vari-angle LCD display, a convenient front shutter button, Gesture Control, and built-in Wi-Fi and NFC for easy sharing.



Figure 1: Front view of the Nikon COOLPIX S6900 Digital Camera, showcasing the lens, flash, and Nikon COOLPIX branding.

## SETUP

## Package Contents

Before beginning, ensure all items listed below are present in your package:

- Nikon COOLPIX S6900 Digital Camera (Black)
- EN-EL19 Rechargeable Li-ion Battery
- EH-71P AC Adapter/Charger
- AN-CP19 Strap
- UC-E21 USB Cable

## Inserting the Battery and Memory Card

The camera uses an EN-EL19 Rechargeable Li-ion Battery and supports SD/SDHC/SDXC memory cards (up to 64 GB recommended). Follow these steps to prepare your camera for use:

1. Locate the battery/memory card compartment cover on the bottom of the camera.
2. Slide the cover latch to open the compartment.
3. Insert the EN-EL19 battery into the battery slot, ensuring the correct orientation as indicated inside the compartment.
4. Insert a compatible SD/SDHC/SDXC memory card into the memory card slot until it clicks into place.
5. Close the compartment cover securely until it latches.



Figure 2: Rear view of the camera, showing the LCD screen. The battery and memory card compartment is located on the bottom edge (not visible in this specific image, but implied by the setup instructions).

## OPERATING THE CAMERA

### Powering On/Off

Press the **ON/OFF** button located on the top of the camera to power it on or off.

## Capturing Selfies and Vlogs

The COOLPIX S6900 is optimized for self-portraits and video blogging:

- **Vari-angle LCD Display:** The 3-inch LCD screen can be flipped forward to face the subject, allowing for easy framing of self-portraits and video recordings.
- **Front Shutter Button:** A dedicated shutter button is located on the front of the camera, providing a convenient way to capture photos when holding the camera facing yourself.
- **Built-in Kickstand:** A small kickstand allows the camera to be propped up on a flat surface for hands-free shooting.
- **Gesture Control:** Utilize hand gestures to trigger the shutter or start/stop video recording from a distance. Refer to the on-screen guide for specific gestures.



Figure 3: The Vari-angle LCD display of the COOLPIX S6900 shown in various positions, demonstrating its flexibility for self-portraits and unique angles.

## Zoom Functionality

The camera features a NIKKOR glass lens with 12x optical zoom, covering a focal length equivalent to 25-300mm in 35mm format. For extended reach, the 24x Dynamic Fine Zoom function effectively doubles your zoom capability while maintaining image quality.

## Wi-Fi and NFC Connectivity

Built-in Wi-Fi and Near Field Communication (NFC) technology enable seamless sharing of photos and videos to compatible smartphones or tablets. NFC is supported on Android v 4.0 or later smart devices.

- Activate Wi-Fi on the camera via the menu settings.
- Use the Nikon SnapBridge app on your smart device to connect and transfer files.
- For NFC, simply tap the camera to a compatible NFC-enabled smart device to establish a connection.

## Scene Modes and Target Finding AF

- **19 Scene Modes:** The camera offers 19 optimized scene modes (e.g., Beach, Snow, Night Portrait, Sunset) to automatically adjust settings for various shooting conditions. Select the appropriate mode or use **Scene Auto Selector** to let the camera choose.
- **Target Finding AF:** This intelligent autofocus system automatically detects and focuses on your intended subject, ensuring sharp and clear images without manual intervention.

## Video Recording

Record stunning Full HD 1080p videos with stereo sound. A dedicated video record button allows for quick initiation of

video capture. Connect the camera to an HDTV (optional cable required) to view your videos on a larger screen.

## MAINTENANCE

### Battery Charging

Charge the EN-EL19 battery using the supplied EH-71P AC Adapter/Charger and UC-E21 USB Cable. Connect the camera to the AC adapter, and then plug the adapter into a power outlet. The charging indicator will show the charging status.

### Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a lens brush or a blower to remove dust, followed by a lens cleaning cloth if necessary. Avoid touching the lens surface with your fingers.
- Do not use organic solvents such as paint thinner or benzene to clean the camera.

### Storage

When not in use for extended periods, remove the battery and store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

If you encounter issues with your camera, consider the following common solutions:

- **Camera does not turn on:** Ensure the battery is fully charged and correctly inserted.
- **Cannot take pictures:** Check if a memory card is inserted and has sufficient free space. The battery might also be low.
- **Images are blurry:** Ensure the lens is clean and the camera is properly focused on the subject. Check lighting conditions.
- **Wi-Fi/NFC connection issues:** Ensure Wi-Fi is enabled on the camera and your smart device. For NFC, confirm your device supports NFC and is running Android v 4.0 or later.

For more detailed troubleshooting, please refer to the Nikon support website.

## SPECIFICATIONS

Feature	Specification
Brand	Nikon
Model Name	Nikon COOLPIX S6900
Model Number	26473
Photo Sensor Resolution	16 MP
Optical Zoom	12x

Digital Zoom	4x
Video Resolution	Full HD 1080p
Screen Size	3 Inches
Display Type	LCD (Vari-angle)
Connectivity	Wi-Fi, NFC, USB, HDMI
Image Stabilization	Optical
Battery Type	EN-EL19 Rechargeable Li-ion
Item Weight	6.4 ounces
Dimensions (approx.)	Height: 2.28 inches (other dimensions not specified in input)

## WARRANTY AND SUPPORT

### Warranty Information

Your Nikon COOLPIX S6900 Digital Camera comes with a 1-year warranty covering parts and labor. This warranty does not apply to the batteries and software driver that accompany this product.

### Customer Support

For further assistance, technical support, or warranty claims, please contact Nikon customer service or visit the official Nikon support website. Keep your purchase receipt and camera serial number (if applicable) ready when contacting support.