

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nikon](#) /

› [Nikon COOLPIX S3700 Digital Camera User Manual](#)

## Nikon S3700

# Nikon COOLPIX S3700 Digital Camera User Manual

Model: S3700

## INTRODUCTION

The Nikon COOLPIX S3700 is a compact digital camera designed for ease of use and high-quality imaging. It features a 20-megapixel sensor, an 8x optical zoom NIKKOR lens, and the ability to record 720p HD videos. Built-in Wi-Fi and Near Field Communication (NFC) technology allow for wireless transfer of photos to compatible smart devices. This manual provides essential information for setting up, operating, and maintaining your camera.

## WHAT'S IN THE Box

Verify that all the following items are included with your Nikon COOLPIX S3700 camera:

- COOLPIX S3700 Digital Camera (Silver)
- AN-CP19 Strap
- UC-E16 USB Cable
- EN-EL19 Rechargeable Li-ion Battery
- EH-70P AC Adapter/Charger



Front view of the Nikon COOLPIX S3700 Digital Camera in silver, showcasing its compact design and lens.

## SETUP

### 1. Installing the Battery

1. Open the battery chamber cover located on the bottom of the camera.
2. Insert the EN-EL19 rechargeable Li-ion battery into the chamber, ensuring the correct orientation as indicated by the markings.
3. Close the battery chamber cover securely.

### 2. Inserting a Memory Card

The COOLPIX S3700 uses SD memory cards (Micro SD compatible). A memory card is required to store photos and videos and is sold separately.

1. Open the memory card slot cover, usually located next to the battery chamber.
2. Insert the SD memory card with the contacts facing the correct direction until it clicks into place.
3. Close the memory card slot cover securely.

### 3. Charging the Battery

1. Connect the camera to the EH-70P AC Adapter/Charger using the UC-E16 USB cable.
2. Plug the AC adapter into a power outlet. The charging indicator light will illuminate.
3. Charging is complete when the indicator light turns off.

### 4. Initial Power On and Settings

1. Press the power button to turn on the camera.
2. Follow the on-screen prompts to set the date, time, and language.

## OPERATING THE CAMERA

### Basic Photography

To take a photo, simply point the camera at your subject and press the shutter button halfway to focus, then press it fully to capture the image. The 8x optical zoom allows you to get closer to distant subjects, while the 16x Dynamic Fine Zoom extends this reach digitally.

### Scene Modes and Scene Auto Selector

The camera offers 16 Scene Modes (e.g., Beach, Snow, Night Portrait, Sunset) to optimize settings for various shooting conditions. Select the appropriate Scene Mode from the menu. Alternatively, use the Scene Auto Selector, which automatically detects the scene and applies the best settings.

### Image Effects

Enhance your photos with various Image Effects available in the camera's menu. Options like Selective Color or Nostalgic Sepia can add creative touches directly to your images without external software.

### Video Recording

To record a video, press the dedicated movie button. The camera will start recording 720p HD video in widescreen format, capturing audio through its built-in microphone. Press the button again to stop recording.

### Wi-Fi and NFC Connectivity

The COOLPIX S3700 features built-in Wi-Fi and NFC (Near Field Communication) for wireless image transfer. Use these features to send photos to a compatible smartphone or tablet. NFC functionality is available for Android v4.0 or later smart devices. Refer to the camera's on-screen guide or the full manual for detailed instructions on connecting to smart devices using Nikon SnapBridge.

## MAINTENANCE

- **Cleaning the Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, lightly dampen the cloth with water. Avoid using organic solvents.
- **Cleaning the Lens:** Use a lens brush to remove dust, then gently wipe with a lens cleaning cloth. Avoid touching the lens surface with your fingers.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid extreme temperatures. Charge the battery fully before extended storage and periodically during storage to maintain its life.
- **Storage:** When storing the camera for long periods, remove the battery and memory card. Store the camera in a dry, well-ventilated area away from direct sunlight and high humidity.

## TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common solutions:

- **Camera does not turn on:** Ensure the battery is correctly inserted and fully charged.
- **Cannot take pictures:** Check if a memory card is inserted and has sufficient free space. Ensure the lens cap is removed (if applicable) and the camera is not in a mode that prevents shooting.
- **Images are blurry:** Ensure the lens is clean. Check lighting conditions and use the flash if necessary. Hold the camera steady or use a tripod.
- **Wi-Fi/NFC connection issues:** Ensure Wi-Fi and NFC are enabled on both the camera and the smart device. Check compatibility requirements for NFC (Android v4.0 or later).
- **Battery drains quickly:** Reduce screen brightness, turn off Wi-Fi/NFC when not in use, and limit continuous shooting or video recording.

For more detailed troubleshooting, please consult the comprehensive online manual available on the Nikon support website.

## SPECIFICATIONS

Feature	Detail
Model Name	Nikon COOLPIX S3700
Photo Sensor Resolution	20 MP
Optical Zoom	8x
Digital Zoom	4x (16x Dynamic Fine Zoom)
Video Resolution	HD 720p
Image Stabilization	Digital, Optical
Connectivity	Wi-Fi, NFC
Screen Size	2.7 Inches LCD
Memory Storage Capacity	25 MB (internal), expandable via SD card
Battery Type	EN-EL19 Rechargeable Li-ion Battery
Dimensions (Approx.)	95.9 x 58.0 x 20.1 mm (3.8 x 2.3 x 0.8 in.) (excluding projections)
Weight (Approx.)	118 g (4.2 oz) (including battery and memory card)

## WARRANTY AND SUPPORT

### Warranty Information

The Nikon COOLPIX S3700 camera comes with a 1-year warranty covering labor and parts. This warranty does not apply to the batteries and software drivers that accompany this product. Please retain your proof of purchase for warranty claims.

### Customer Support

For further assistance, technical support, or to download the full product manual, please visit the official Nikon support website. You can also find FAQs and contact information for customer service there.

Official Nikon Store: [Visit the Nikon Store on Amazon](#)