

Marea B25107/5

Marea Digital Watch User Manual

MODEL: B25107/5

Introduction

Thank you for choosing the Marea Digital Watch B25107/5. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your watch. Please read these instructions carefully before using your watch to ensure optimal performance and longevity.

Setup

Before initial use, ensure the watch is powered on. If the display is blank, the battery may need activation or replacement.

1. Setting the Time

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **ADJUST** button to select the hour, minute, or second digits you wish to change.
3. Use the **SET** or **START/STOP** button to increase the selected value. Hold the button to advance rapidly.
4. Once the time is set, press the **MODE** button to exit the setting mode.

2. Setting the Date

1. Navigate to the date setting mode using the **MODE** button. This is often combined with the time setting or a separate mode.
2. Use the **ADJUST** button to select the year, month, or day.
3. Use the **SET** or **START/STOP** button to change the selected value.
4. Press the **MODE** button to confirm and exit.

3. Setting the Alarm

1. Press the **MODE** button until the alarm setting mode is displayed.
2. Use the **ADJUST** button to select the hour or minute digits.
3. Use the **SET** or **START/STOP** button to set the desired alarm time.

4. Press the **MODE** button to activate the alarm and exit the setting mode. An alarm icon will typically appear on the display.

Operating Instructions

1. Mode Switching

Press the **MODE** button to cycle through different functions: Time Display, Date Display, Alarm, Stopwatch, etc. The order of modes may vary.

2. Using the Stopwatch

1. Navigate to the Stopwatch mode using the **MODE** button.
2. Press the **START/STOP** button to begin timing.
3. Press **START/STOP** again to pause or stop the timer.
4. Press the **RESET** or **ADJUST** button (depending on model) to clear the stopwatch to zero.

3. Using the Alarm

When the alarm sounds, press any button to silence it. The alarm will typically sound for a set duration (e.g., 20 seconds) if not manually silenced.

4. Backlight Function

Press the **LIGHT** button (if available) to illuminate the display for a few seconds, improving visibility in low-light conditions.

Maintenance

1. Cleaning

Wipe the watch case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, as they may damage the watch's finish or seals.

2. Battery Replacement

The watch is powered by a battery. When the display becomes dim or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

3. Water Resistance

This watch has a specific water resistance rating. Refer to the specifications section for details. Avoid pressing buttons underwater unless the watch is specifically designed for such operation. Exposure to hot water, steam, or sudden temperature changes can compromise water resistance.

Troubleshooting

- **Watch not displaying time:** Check if the battery needs replacement. Ensure no buttons are stuck.
- **Buttons unresponsive:** The watch might be in a locked mode or the battery is low. Try pressing the **RESET** button (if available) or replacing the battery.
- **Incorrect time/date:** Re-enter the time and date settings as described in the Setup section. Ensure you are in the correct 12-hour or 24-hour format.

- **Alarm not sounding:** Verify that the alarm is activated and set to the correct time. Check the volume settings if applicable.

Specifications

- **Brand:** Marea
- **Model Number:** B25107/5
- **Case Shape:** Round
- **Case Diameter:** 34 Millimeters
- **Case Thickness:** 11.9 Millimeters
- **Strap Width:** 16 Millimeters
- **Power Source:** Battery
- **Manufacturer:** Marea Relojos

Warranty Information

Your Marea Digital Watch B25107/5 is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please retain your proof of purchase for warranty claims. For detailed warranty information, refer to the documentation provided with your purchase or contact Marea customer support.

Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact Marea customer support. Contact details can typically be found on the official Marea website or on the packaging of your product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question