

Marea B41099-1

Marea B41099-1 Analog-Digital Quartz Watch Instruction Manual

Model: B41099-1

INTRODUCTION

Thank you for choosing the Marea B41099-1 Analog-Digital Quartz Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

SAFETY INFORMATION

- **Water Resistance:** This watch is water-resistant up to 50 meters (5 ATM). It is suitable for short periods of recreational swimming but not for diving or snorkeling. Do not operate buttons underwater.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for extended periods, as this may affect accuracy and battery life.
- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and cosmetics, as they may damage the case, band, or gaskets.
- **Impact:** Protect the watch from strong impacts and shocks.
- **Battery:** Do not attempt to open the watch case or replace the battery yourself. Refer to a qualified watch technician for battery replacement.

WATCH COMPONENTS

Familiarize yourself with the main components of your Marea B41099-1 watch:

- **Crown:** Used for setting the analog time.
- **Buttons (A, B, C, D):** Used for operating digital functions (mode, adjust, light, start/stop). Specific button functions may vary by mode.
- **Analog Display:** Traditional hour, minute, and second hands.
- **Digital Display:** Shows time, date, and other digital functions.

- **Case:** Stainless steel housing for the watch movement.
- **Band:** Rubber strap with a buckle clasp.



Image 1: Front view of the Marea B41099-1 watch, showing the analog and digital displays, crown, and control buttons.

INITIAL SETUP

Setting Analog Time

1. Pull the crown out to the first click position.
2. Rotate the crown to set the hour and minute hands to the desired time.
3. Push the crown back into its normal position to start the analog timekeeping.

Setting Digital Time and Date

The digital display typically has multiple modes, including Timekeeping, Alarm, Stopwatch, and sometimes a Second Time Zone. Refer to the specific button labels on your watch (e.g., MODE, ADJUST, START/STOP, LIGHT).

1. Press the **MODE** button repeatedly until the digital time display starts flashing (indicating setting mode).
2. Use the **ADJUST** button to cycle through the settings (seconds, hour, minute, year, month, day).
3. Use the **START/STOP** button to increase the flashing value. Hold it down to advance rapidly.
4. Once all settings are correct, press the **MODE** button again to exit the setting mode.

OPERATING INSTRUCTIONS

Using Digital Modes

Press the **MODE** button to cycle through the different digital functions:

- **Timekeeping Mode:** Displays current digital time, day, and date.

- **Alarm Mode:** Set and activate daily alarms.
 - a. In Alarm Mode, press **ADJUST** to select hour/minute.
 - b. Use **START/STOP** to change the value.
 - c. Press **MODE** to confirm and exit.
 - d. Press **START/STOP** to toggle alarm ON/OFF.
- **Stopwatch Mode:** Measure elapsed time.
 - a. In Stopwatch Mode, press **START/STOP** to start/pause.
 - b. Press **ADJUST** to reset to zero.

Using the Backlight

Press the **LIGHT** button (usually located on the top left) to illuminate the digital display for a few seconds in low-light conditions.

MAINTENANCE

Cleaning Your Watch

- Wipe the watch case and band regularly with a soft, dry cloth to remove dust and dirt.
- For rubber bands, you can use a slightly damp cloth with mild soap, then rinse thoroughly and dry completely.
- Avoid using harsh chemicals or abrasive materials, which can damage the watch's finish.

Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the analog hands stop or the digital display becomes dim, it indicates a low battery. Battery life typically ranges from 1 to 3 years, depending on usage.

- Do not attempt to replace the battery yourself, as this may compromise the watch's water resistance and void the warranty.
- Take your watch to an authorized Marea service center or a reputable watch repair shop for battery replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Analog hands not moving.	Low battery or crown is pulled out.	Push the crown back in. If still not moving, replace the battery at a service center.
Digital display is blank or dim.	Low battery.	Replace the battery at a service center.
Incorrect time/date on digital display.	Settings need adjustment.	Follow the "Setting Digital Time and Date" instructions in the Setup section.
Watch fogging up internally.	Exposure to extreme temperature changes or compromised water resistance.	Avoid sudden temperature changes. If fogging persists, have the watch inspected by a service center.

SPECIFICATIONS

- **Model Number:** B41099-1
- **Brand:** Marea

- **Display Type:** Analog-Digital
- **Movement Type:** Quartz
- **Case Material:** Stainless Steel
- **Band Material:** Rubber
- **Clasp Type:** Buckle
- **Water Resistance Depth:** 50 Meters (5 ATM)
- **Case Shape:** Round
- **Band Color:** Black
- **Dial Color:** Grey

WARRANTY AND SUPPORT

Marea watches are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Marea website. Keep your proof of purchase for warranty claims.

For technical support, service, or inquiries regarding your Marea B41099-1 watch, please contact Marea customer service through their official channels. Contact information can typically be found on the Marea website or on the warranty documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question