

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Garrett Metal Detectors](#) /
- › [Garrett Pro-Pointer A.T. Pinpointer Metal Detector User Manual](#)

Garrett Metal Detectors Pro-Pointer AT

Garrett Pro-Pointer A.T. Pinpointer Metal Detector

Model: Pro-Pointer AT | Brand: Garrett Metal Detectors

1. INTRODUCTION

The Garrett Pro-Pointer A.T. is a versatile and robust pinpointer metal detector designed for all-terrain use, including underwater environments. This device is engineered to precisely locate small metallic objects, making it an essential tool for treasure hunters and metal detecting enthusiasts. Its waterproof design allows for submersion up to 20 feet, expanding your search capabilities to beaches, rivers, and other wet conditions. The Pro-Pointer A.T. features 360-degree detection, a pinpointing tip, and an integrated LED flashlight for enhanced visibility in low-light conditions.

Key features include:

- Fully waterproof up to 20 feet (6 meters)
- All-terrain capability for diverse environments
- Precise pinpointing tip and 360-degree detection
- Integrated LED flashlight for improved visibility
- Adjustable sensitivity for optimal performance

2. IMPORTANT SAFETY INFORMATION

WARNING: To prevent injury or damage to the device, please read and adhere to all safety instructions.

- **Water Immersion:** Do not submerge the Garrett Pro-Pointer A.T. beyond 20 feet (6 meters). Ensure the battery cap is securely tightened before any water immersion.
- **Battery Handling:** Follow proper battery handling and disposal procedures. Use only the specified battery type (1 AA battery). Do not mix old and new batteries, or different types of batteries. Remove batteries if the device will not be used for an extended period.
- **Environmental Conditions:** Avoid exposing the device to extreme temperatures or direct sunlight for prolonged periods.
- **Children:** Keep the device out of reach of small children.
- **Sharp Objects:** Exercise caution when digging to avoid injury from sharp objects or buried hazards.

3. SETUP GUIDE

3.1 Unboxing and Components

Upon opening the package, verify that all components are present:

- Garrett Pro-Pointer A.T. Pinpointer
- Woven Belt Holster
- 9V Battery (included)



Figure 3.1: The Garrett Pro-Pointer A.T. package contents, including the pinpointer, holster, and battery.

3.2 Battery Installation

The Pro-Pointer A.T. operates on one 9V battery (included). To install the battery:

1. Locate the battery cap at the rear end of the pinpointer.

2. Unscrew the battery cap by turning it counter-clockwise.
3. Insert the 9V battery into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Screw the battery cap back on clockwise until it is finger-tight. For waterproof operation, ensure the cap is securely sealed to prevent water ingress.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To turn the Pro-Pointer A.T. on, press and hold the power button located on the side of the device until you hear a short series of beeps. To turn it off, press and hold the power button again until the device powers down.

4.2 Sensitivity Adjustment and Retuning

The Pro-Pointer A.T. features adjustable sensitivity to optimize performance in various ground conditions and to narrow the detection field for precise pinpointing. To adjust sensitivity or retune the device:

- **Automatic Retuning:** A quick press of the power button will instantly retune the device, narrowing the detection field and allowing for more precise target location. This is useful for eliminating the effects of mineralized ground or large targets.
- **Sensitivity Levels:** The device has three sensitivity levels. To cycle through them, press and hold the power button for approximately 2 seconds until you hear a series of beeps indicating the new level. Repeat to cycle through all levels.



Figure 4.1: The Pro-Pointer A.T. features 360-degree detection, a pinpointing tip, and an LED flashlight for precise target identification.

4.3 Pinpointing and Detection

Once powered on, sweep the tip of the Pro-Pointer A.T. over the area where a target is suspected. The device will emit an audible beep and vibrate with increasing intensity as it approaches a metallic object. The 360-degree side-scan detection allows for broad area scanning, while the precise tip is ideal for pinpointing the exact location of the target within the hole.

Find Treasure Faster

PINPOINT YOUR TARGET



Figure 4.2: Using the Pro-Pointer A.T. to accurately locate a target buried in the soil.



Figure 4.3: The Pro-Pointer A.T. is effective for finding a variety of metallic treasures such as coins, gold nuggets, historical relics, and jewelry.

4.4 Waterproof Operation

The Pro-Pointer A.T. is designed for use in wet environments and is fully submersible up to 20 feet (6 meters). Ensure the battery cap is securely tightened before any water immersion. After use in saltwater, rinse the device thoroughly with fresh water to prevent corrosion.



Figure 4.4: The Pro-Pointer A.T. is waterproof up to 20 feet, allowing for effective searching in aquatic environments.

4.5 LED Flashlight

The integrated LED flashlight automatically illuminates when the device is powered on, providing visibility in low-light conditions or when searching in dark holes. This feature cannot be turned off independently of the device's power.

5. CARE AND MAINTENANCE

5.1 Cleaning

After each use, especially in dirty or wet conditions, clean the Pro-Pointer A.T. with a damp cloth. If used in saltwater, rinse the entire device with fresh water immediately to prevent salt buildup and corrosion. Do not use abrasive cleaners or solvents.

5.2 Storage

Store the device in a cool, dry place when not in use. If storing for an extended period (more than 30 days), remove the 9V battery to prevent leakage and potential damage to the electronics.

5.3 Battery Care

Always use fresh, high-quality 9V alkaline batteries. If the device exhibits weak performance or inconsistent operation, replace the battery. Dispose of used batteries responsibly according to local regulations.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Dead or improperly installed battery.	Check battery orientation. Replace with a fresh 9V battery.
Weak or inconsistent detection.	Low battery; highly mineralized ground; large metallic object nearby.	Replace battery. Retune the device by quickly pressing the power button. Adjust sensitivity. Move away from large metal objects.
Constant beeping/vibration.	Device is too close to a metal object; highly mineralized ground; interference.	Move the device away from metal. Retune the device. Try a lower sensitivity setting.
Water inside battery compartment.	Battery cap not securely tightened.	Immediately remove battery. Dry compartment thoroughly. Ensure cap is fully tightened before next use.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Garrett Metal Detectors
Model	Pro-Pointer AT
Color	Orange
Dimensions (L x W x H)	9"L x 2.5"W x 2.5"H (approximate)
Item Weight	8 ounces (0.5 Pounds)
Power Source	1 x 9V Battery (included)
Material	Acrylonitrile Butadiene Styrene (ABS)
International Protection Rating	IP68 (Waterproof up to 20 feet / 6 meters)
Operating Frequency	7 KHz

Feature	Specification
Recommended Use	Metal Detection

8. WARRANTY AND SUPPORT

Garrett Metal Detectors provides a manufacturer's warranty for the Pro-Pointer A.T. against defects in materials and workmanship. For specific warranty terms, duration, and claim procedures, please refer to the warranty card included with your product or visit the official Garrett Metal Detectors website.

For additional support, frequently asked questions, or to explore other Garrett products, please visit the official Garrett Metal Detectors store on Amazon or their corporate website:

[Visit the Garrett Metal Detectors Amazon Store](#)