

Manuals.plus /

› Insignia /

› Insignia Remote Wireless Shutter Control (NS-WSCN-C)

Insignia NS-WSCN

Insignia Wireless Shutter Control

Model: NS-WSCN

Brand: Insignia

INTRODUCTION

This manual provides essential information for the safe and effective operation of your Insignia Wireless Shutter Control (Model NS-WSCN). This device is designed to remotely trigger the shutter of compatible Nikon digital SLR cameras, helping to minimize camera shake and improve image clarity, especially for long exposure photography or self-portraits.

Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY INFORMATION

- Do not expose the device to water or excessive moisture.
- Avoid extreme temperatures.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Keep out of reach of children.
- Dispose of batteries properly according to local regulations.

PACKAGE CONTENTS

- Insignia Wireless Shutter Control (NS-WSCN)
- User Manual (this document)
- *Note: Batteries may or may not be included depending on the retail package. Check packaging for details.*



Image shows the Insignia Wireless Shutter Control device, a small black remote with a silver shutter button, displayed within its retail packaging. The packaging indicates compatibility with Nikon cameras.

SETUP

1. Battery Installation

The Insignia Wireless Shutter Control typically uses a CR2025 lithium button cell battery. Locate the battery compartment on the back of the remote. Use a small coin or screwdriver to open the compartment. Insert the battery with the positive (+) side facing up, then close the compartment securely.

2. Camera Setup (Nikon DSLR)

To use the wireless remote, your Nikon DSLR camera must be set to remote control mode. The exact steps may vary slightly by camera model, but generally involve:

1. Turn on your camera.
2. Access the camera's menu or drive mode settings.
3. Select the "Remote Control" or "Remote" option. This is often found under the "Release Mode" or "Drive Mode" settings. Some cameras may have a dedicated remote control icon.
4. Ensure the camera's infrared receiver (usually on the front of the camera body) is unobstructed.

Refer to your camera's instruction manual for specific details on enabling remote control mode.

OPERATING INSTRUCTIONS

Taking a Photo

Once your camera is set to remote control mode:

1. Point the Insignia Wireless Shutter Control towards the infrared receiver on your camera. The remote works best when pointed directly at the receiver within a range of approximately 5-10 meters (16-33 feet).
2. Press the large circular button on the remote.

3. The camera's shutter will activate, taking a photo.

For cameras with a delayed remote mode (e.g., 2-second delay), pressing the button once will trigger the delay, and the photo will be taken after the set time.

MAINTENANCE

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

Storage

Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, it is recommended to remove the battery to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not trigger camera.	Camera not in remote mode. Battery is dead or incorrectly installed. Remote not pointed at camera's IR receiver. Obstruction between remote and camera. Out of range.	Set camera to remote control mode (refer to camera manual). Replace battery or ensure correct polarity. Ensure remote is pointed directly at the camera's IR receiver. Remove any obstructions. Move closer to the camera.
Intermittent operation.	Weak battery. Environmental interference (e.g., strong light sources).	Replace battery. Try using the remote in a different environment or adjust your position relative to the camera.

SPECIFICATIONS

Feature	Detail
Model Number	NS-WSCN
Connectivity Technology	Wireless (Infrared)
Compatible Devices	Most Nikon Digital SLR Cameras
Max Number of Supported Devices	1 (one camera at a time)
Power Source	Button Cell Battery (e.g., CR2025)
Dimensions (approx.)	15.5 x 6.9 x 0.8 cm (6.1 x 2.7 x 0.3 inches)
Weight (approx.)	5.67 g (0.2 oz)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your

purchase or visit the official Insignia website. Keep your proof of purchase for warranty claims.

Note: Specific warranty terms and support contact details may vary by region and retailer.

Official Brand Website: www.insigniaproducts.com