

[Manuals.plus](#) /

› [Exmark](#) /

› Exmark 116-8181-S Extreme Blade Lazer Z Pioneer DS E S X Series Instruction Manual

Exmark 116-8181-S

Exmark 116-8181-S Extreme Blade Instruction Manual

For Lazer Z, Pioneer, DS, E, S, X Series Mowers

1. INTRODUCTION

This manual provides essential information for the safe and effective use, installation, and maintenance of the Exmark 116-8181-S Extreme Blade. This genuine Exmark replacement part is designed for specific Exmark Lazer Z, Pioneer, DS, E, S, and X Series lawn mowers. Please read this manual thoroughly before attempting any installation or maintenance procedures.

2. SAFETY INFORMATION

Your safety and the safety of others are extremely important. Always observe the following safety precautions when handling or installing the blade:

- **Personal Protective Equipment (PPE):** Always wear heavy-duty gloves and eye protection when handling the blade. The edges are sharp and can cause severe injury.
- **Machine Lockout:** Before performing any work on the mower, ensure the engine is off, the spark plug wire is disconnected, and the key is removed (if applicable). This prevents accidental starting.
- **Stable Surface:** Work on a flat, stable surface. Use appropriate lifting equipment or stands to safely elevate the mower deck if necessary.
- **Blade Orientation:** Pay close attention to the blade's orientation during removal and installation. Incorrect installation can lead to poor cutting performance or damage.
- **Tightening Torque:** Ensure all fasteners are tightened to the manufacturer's specified torque to prevent the blade from loosening during operation.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

3. PRODUCT OVERVIEW

The Exmark 116-8181-S is a genuine replacement blade designed for optimal cutting performance on Exmark Lazer Z, Pioneer, DS, E, S, and X Series mowers. It is an "EXTREME 2" blade, known for its durability and efficient cutting.







Figure 3.1: Front view of the Exmark 116-8181-S Extreme Blade, showing its overall shape and central mounting hole.

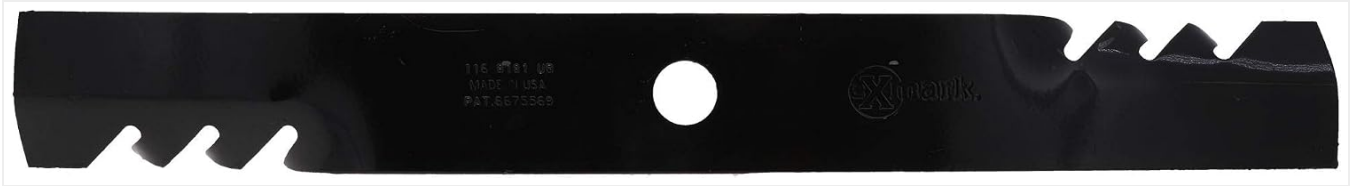


Figure 3.2: Top view of the blade, clearly displaying the part number 116-8181-S and manufacturer markings.



Figure 3.3: Side view of the blade, illustrating the upward curve (lift) at the ends, which helps create airflow for efficient grass discharge.

4. SETUP (INSTALLATION)

Follow these steps to safely replace your mower blade. Refer to your mower's specific owner's manual for detailed instructions and torque specifications.

1. **Prepare the Mower:** Park the mower on a flat, level surface. Turn off the engine, remove the ignition key, and disconnect the spark plug wire to prevent accidental starting.
2. **Access the Blades:** Depending on your mower model, you may need to raise the front of the mower or remove the mower deck to access the blades. Use appropriate lifting equipment or stands for safety.
3. **Secure the Blade:** To prevent the blade from turning while loosening the nut, wedge a block of wood between the blade and the mower deck.
4. **Remove Old Blade:** Using a wrench, loosen and remove the blade mounting nut. Note the direction of rotation for the nut (often reverse threaded). Carefully remove the old blade, noting its orientation.
5. **Inspect Components:** Inspect the blade mounting area, including the spindle and washer, for any damage or wear. Clean any accumulated grass or debris.
6. **Install New Blade:** Position the new Exmark 116-8181-S blade onto the spindle, ensuring the cutting edge faces the correct direction (usually towards the ground, with the curved ends pointing upwards). The blade should sit flush against the spindle flange.
7. **Tighten Nut:** Reinstall the washer and blade mounting nut. Tighten the nut securely using a torque wrench to the manufacturer's specified torque setting. Refer to your mower's manual for the exact torque value. Overtightening or undertightening can cause issues.
8. **Reassemble Mower:** Reattach the mower deck (if removed) and lower the mower. Reconnect the spark plug wire.
9. **Test Operation:** Start the mower briefly to ensure the blade spins freely and without excessive vibration. Listen for any unusual noises.

5. OPERATING

The Exmark 116-8181-S Extreme Blade is designed to provide a clean and efficient cut when properly installed on compatible Exmark mowers. Once installed, the blade operates as an integral part of your mower's cutting system. Always refer to your mower's owner's manual for general operating procedures, safety guidelines, and recommended mowing practices.

Ensure the blade is sharp and balanced for optimal performance. A dull or unbalanced blade can lead to uneven cuts, excessive vibration, and increased wear on your mower's components.

6. MAINTENANCE

Regular inspection and maintenance of your mower blade are crucial for safety and performance.

- **Inspect Regularly:** Before each mowing session, inspect the blade for signs of wear, damage, or bending. Check for cracks, nicks, or excessive dullness.
- **Clean After Use:** After each use, clean grass clippings and debris from the blade and the underside of the mower deck. This prevents buildup that can affect cutting performance and lead to rust.
- **Sharpening:** While this blade is designed for durability, it will eventually dull. Sharpening should be done by a qualified technician or with appropriate tools, ensuring the blade remains balanced. An unbalanced blade can cause severe vibration and damage to the mower.
- **Replacement:** Replace the blade if it is bent, cracked, severely worn, or if sharpening no longer restores its cutting edge. Always use genuine Exmark replacement parts like the 116-8181-S to ensure compatibility and performance.
- **Storage:** If storing the mower for an extended period, clean and lightly oil the blade to prevent rust.

7. TROUBLESHOOTING

If you experience issues related to your mower's cutting performance, consider the following troubleshooting steps:

- **Uneven Cut:**
 - *Possible Cause:* Dull or bent blade.
 - *Solution:* Inspect the blade for sharpness and straightness. Sharpen or replace if necessary.
 - *Possible Cause:* Incorrect blade installation.
 - *Solution:* Ensure the blade is installed with the correct orientation and tightened to specifications.
- **Excessive Vibration:**
 - *Possible Cause:* Unbalanced blade.
 - *Solution:* If the blade has been sharpened, ensure it is properly balanced. Replace if balancing is not possible or if the blade is bent.
 - *Possible Cause:* Loose blade mounting nut.
 - *Solution:* Check and tighten the blade mounting nut to the specified torque.
- **Poor Grass Discharge/Clogging:**
 - *Possible Cause:* Dull blade or excessive grass buildup.
 - *Solution:* Clean the underside of the deck and the blade. Sharpen or replace the blade.

8. SPECIFICATIONS

Key specifications for the Exmark 116-8181-S Extreme Blade:

Attribute	Value
Manufacturer	Exmark
Model Number	116-8181-S

Attribute	Value
Part Number	116-8181-S
Blade Type	EXTREME 2
Product Dimensions	22 x 4 x 3 inches
Item Weight	2.65 pounds
Compatibility	Exmark Lazer Z, Pioneer, DS, E, S, X Series Mowers

9. WARRANTY AND SUPPORT

For specific warranty information regarding the Exmark 116-8181-S Extreme Blade, please refer to the warranty documentation provided with your original purchase or contact Exmark customer support directly. Warranty terms typically cover manufacturing defects.

For additional support, product information, or to explore other genuine Exmark parts, please visit the official Exmark store or website:

[Visit the Exmark Store on Amazon](#)

© 2024 Exmark. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00TD3VS5G>

More documents and user manuals: <https://manuals.plus/>