

[Manuals.plus](#) /

> [PAWISE](#) /

> Pawise Dog Transport Crate Instruction Manual (Model 2076720, 62 x 43.5 x 50 cm)

PAWISE 2076720

Pawise Dog Transport Crate Instruction Manual

Model: 2076720 | Size: 62 x 43.5 x 50 cm

INTRODUCTION

This manual provides instructions for the safe and proper assembly, operation, and maintenance of your Pawise Dog Transport Crate. Please read this manual thoroughly before using the product and retain it for future reference. This crate is designed for the temporary containment and transport of dogs and cats.

IMPORTANT SAFETY INFORMATION

- Always ensure the crate is fully assembled and all latches are securely closed before placing an animal inside.
- Do not leave pets unattended in the crate for extended periods.
- Ensure the crate size is appropriate for your pet, allowing them to stand, turn around, and lie down comfortably.
- Keep fingers and clothing clear of moving parts during assembly and folding.
- This crate is for animal use only. Do not use for human containment.
- Regularly inspect the crate for any damage, loose parts, or sharp edges. Discontinue use if damaged.
- Do not modify the crate in any way.

PACKAGE CONTENTS

Verify that all components are present before assembly:

- Wire Dog Crate (Pre-assembled, folded)
- Removable Plastic Tray
- Instruction Manual (This document)



Image: The product packaging box, featuring the Pawise logo, a puppy, and an illustration of the wire dog crate. The box indicates "Fully assembled! Unfold and set-up in seconds!" and highlights features like "Wire construction allows maximum ventilations & visibility" and "Includes carrying handle & plastic tray."

SETUP AND ASSEMBLY

The Pawise Dog Transport Crate is designed for quick and easy setup. It comes pre-assembled and folds flat for storage.

1. **Unfold the Crate:** Place the folded crate on a flat, stable surface. Unclip any securing latches that hold the crate in its folded position. Carefully lift the top panel and unfold the side panels outwards until they form a rectangular shape.
2. **Secure the Side Panels:** Ensure the side panels are locked into place. There are usually clips or hooks on the top or sides that secure the panels to the front and back sections.
3. **Attach the Top Panel:** Lower the top panel and secure it to the side panels using the integrated latches or hooks.
4. **Insert the Tray:** Slide the removable plastic tray into the bottom of the crate. Ensure it sits flat and securely.



Image: A fully assembled black wire dog crate with a black plastic tray at the bottom, positioned on a wooden floor. A golden retriever dog is lying comfortably next to the crate, demonstrating its intended use and scale.

OPERATING INSTRUCTIONS

Using the Door

- **Opening:** Locate the cam lock on the door. Slide the latch mechanism to unlock and open the door.
- **Closing:** Swing the door shut and slide the latch mechanism back into place to secure it. Ensure the door is firmly latched before leaving your pet unattended.

Pet Acclimation

Introduce your pet to the crate gradually. Place familiar bedding or toys inside to make it a comfortable and positive space. Never use the crate as a form of punishment.

Folding for Storage/Transport

1. Remove your pet and any contents from the crate.
2. Remove the plastic tray.
3. Unlatch the top panel and fold it inwards.
4. Unsecure the side panels and fold them inwards until the crate is flat.
5. Secure the folded crate with any integrated latches or clips for compact storage.

CARE AND MAINTENANCE

- **Cleaning the Crate:** The wire frame can be wiped down with a damp cloth and mild, pet-safe detergent. Rinse thoroughly and dry completely to prevent rust.
- **Cleaning the Tray:** The slide-out polyethylene floor tray can be easily removed for cleaning. Wash with soap and water, rinse, and dry before reinserting.
- **Regular Inspection:** Periodically check all welds, latches, and wire connections for signs of wear or damage. Address any issues promptly to ensure the safety of your pet.
- **Storage:** When not in use, store the folded crate in a dry place to prevent rust and prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Crate does not unfold or fold easily.	Securing latches are still engaged or panels are misaligned.	Ensure all latches are released. Gently adjust panels to align them correctly. Do not force.
Door does not latch securely.	Latch mechanism is obstructed or bent.	Check for any debris or foreign objects. Inspect the latch for damage; if bent, attempt to gently straighten or contact support.
Crate appears unstable.	Panels are not fully locked into place.	Verify that all side and top panel latches are securely fastened.

SPECIFICATIONS

Model Number: 2076720

Dimensions (L x W x H): 62 x 43.5 x 50 cm

Material: Alloy Steel

Weight: Approximately 1 Kilogram

Animal Type: Dog, Cat

Features: Heavy-duty welded steel wire, front access door with cam lock, slide-out polyethylene floor tray.

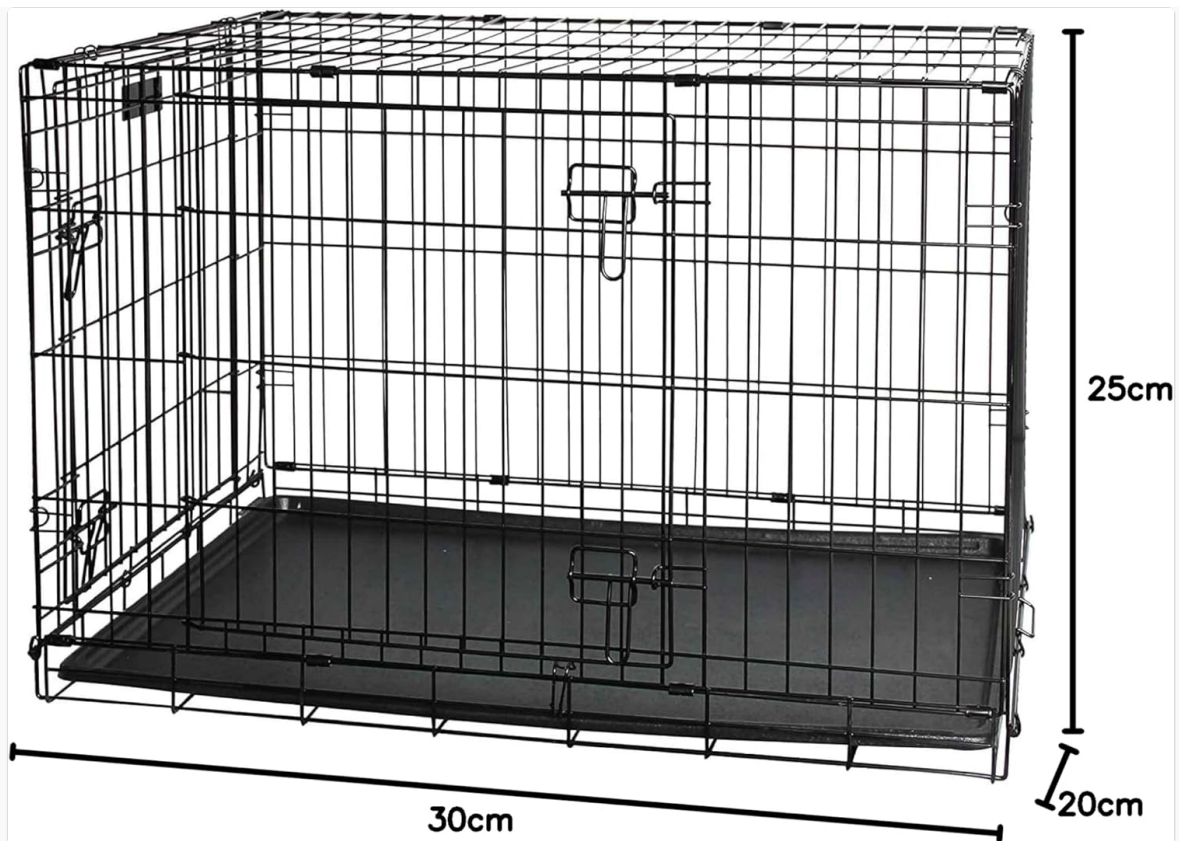


Image: A diagram illustrating the dimensions of a wire dog crate. The image shows example measurements for length, width, and height, indicating where these measurements are taken on a crate. Note that the specific dimensions shown in this illustrative image (e.g., 30x20x25cm) may differ from the actual product dimensions of 62 x 43.5 x 50 cm.

WARRANTY AND SUPPORT

Specific warranty information for this Pawise product is not detailed in the provided product data. For warranty claims or technical support, please contact the retailer where you purchased the product or visit the official PAWISE website for their customer service contact information.

When contacting support, please have your product model number (2076720) and purchase details readily available.