Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Clarity /
- > Clarity D702 Cordless Phone User Manual

Clarity D702 + (1) D702HS

Clarity D702 Cordless Phone User Manual

Model: D702 + (1) D702HS

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Clarity D702 Cordless Phone system. Designed for individuals with moderate hearing loss, this phone utilizes DECT 6.0 technology to deliver clear, interference-free communication. Please read this manual thoroughly before using your phone.

PACKAGE CONTENTS

Verify that all items are present in your package:

- · Clarity D702 Base Unit
- Clarity D702 Handset
- Clarity D702HS Expandable Handset (if included in your package)
- AC Power Adapter
- Telephone Line Cord
- Rechargeable Batteries (for handset)
- User Manual (this document)

SETUP

1. Installing the Batteries

The handset requires 4 AA batteries (included). Ensure correct polarity when inserting the batteries into the handset's battery compartment.

2. Connecting the Base Unit

- 1. Connect one end of the telephone line cord to the TEL LINE jack on the base unit.
- 2. Connect the other end of the telephone line cord to a telephone wall jack.
- 3. Connect the AC power adapter to the POWER jack on the base unit.
- 4. Plug the AC power adapter into a standard electrical outlet.



Image: The Clarity D702 cordless phone handset resting in its charging base. The base features the "CLARITY" brand logo and a "FIND" button. The handset displays large, easy-to-read numeric keypad buttons.

3. Charging the Handset

Place the handset in the base unit. The charge indicator light on the handset should illuminate, indicating that it is charging. Allow the handset to charge for at least 12 hours before initial use to ensure optimal battery performance.

OPERATING INSTRUCTIONS

Making a Call

- 1. Pick up the handset or press the **TALK** button.
- 2. Dial the desired phone number using the large, backlit keypad.
- 3. Press the TALK button again or place the handset back in the base to end the call.

Answering a Call

When the phone rings, pick up the handset or press the TALK button.

Adjusting Volume and Tone

During a call, use the volume control buttons on the side of the handset to adjust the listening volume. The phone offers four (4) tone settings to customize your listening experience. Refer to the handset's menu for tone adjustment options.

Using the Speakerphone

To activate the speakerphone during a call, press the **SPEAKER** button. Press it again to return to handset mode.

Caller ID

The large font and high contrast caller ID screen displays incoming call information. The keypad and CID display also light up as a super bright visual ringer.

Finding a Lost Handset

If you misplace your handset, press the FIND button on the base unit. The handset will emit a paging tone.

MAINTENANCE

- Clean the phone surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the phone to excessive moisture, direct sunlight, or extreme temperatures.
- Ensure the handset's charging contacts are clean for proper charging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Telephone line cord is disconnected.	Ensure the telephone line cord is securely connected to the base unit and the wall jack.
Handset not charging	Handset not properly seated in base; dirty charging contacts.	Reseat the handset in the base. Clean the charging contacts on both the handset and base with a dry cloth.
Poor sound quality / Static	Interference from other electronic devices; handset too far from base.	Move the base unit away from other electronic devices. Ensure the handset is within range of the base.
Handset not ringing	Ringer volume is off or set too low.	Adjust the ringer volume setting on the handset.

SPECIFICATIONS

Model: D702 + (1) D702HS

Brand: Clarity

Dimensions (Base Unit): 9.1 x 7.7 x 5.8 inches

Item Weight: 2.6 pounds
Telephone Type: Cordless
Technology: DECT 6.0

Power Source: Corded Electric

Batteries: 4 AA batteries (for handset)

Color: Off-White Material: Plastic

Answering System: Digital

© 2023 Clarity. All rights reserved.

For further assistance, please visit the official Clarity website or contact customer support.

Related Documents - D702 + (1) D702HS

Clarity XLC3.4 User Guide: Extra Loud Cordless Speakerphone This comprehensive user guide for the Clarity XLC3.4 extra loud cordless speakerphone details installation, setup, features like Caller ID and ClarityLogic, battery management, volume and tone adjustments, and troubleshooting. Learn to optimize its use for clear and accessible conversations. clarity Visit clarityproducts.com for more information. Clarity Chat+ Hearing Aid Quick Start Guide - Setup and Usage 71-45-4 Comprehensive quick start guide for Clarity Chat+ hearing aids (model JH-DW3F). Learn how to activate, fit, charge, connect via Bluetooth, and use the app for these OTC hearing devices. clarity. Clarity E814CC Amplified Big Button Cordless Phone User Guide User guide for the Clarity E814CC amplified big button cordless phone with corded digital answering machine. Learn about setup, features, and safety instructions. clarity Clarity TL200 TV Listener User Guide Comprehensive user guide for the Clarity TL200 TV Listener, detailing setup, operation, safety, and technical specifications for enhanced TV audio. TL200 TV Listener Clarity SempreMini Bluetooth Headset User Guide Comprehensive user guide for the Clarity SempreMini Bluetooth headset, covering setup, pairing, usage, troubleshooting, and safety instructions. Learn how to connect, manage calls, and optimize your audio experience. clarity IV35 Clarity JV35 Talking Phone User Guide

Comprehensive user guide for the Clarity JV35 Talking Phone, detailing installation, features, and

operation for enhanced communication.