

[Manuals.plus](#) /

> [XOXO](#) /

> [XOXO Women's Silver-Tone Bracelet Watch \(Model XO172\) Instruction Manual](#)

XOXO XO172

XOXO Women's Silver-Tone Bracelet Watch (Model XO172) Instruction Manual

Your guide to setting up, operating, and maintaining your XOXO timepiece.

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for choosing the XOXO Women's Silver-Tone Bracelet Watch, Model XO172. This timepiece combines classic design with reliable quartz movement, making it a suitable accessory for various occasions. This manual provides essential information for the proper setup, operation, and care of your watch.



Image: Front view of the XOXO Women's Silver-Tone Bracelet Watch, showcasing the silver-tone finish, crystal-accented bezel, and multi-dial face.

1. Unpacking

Carefully remove the watch from its packaging. The watch is typically presented in an official XOXO branded gift box.



Image: The XOXO Women's Watch presented inside its black branded gift box with white interior.

2. Setting the Time

1. Locate the crown (the small knob on the side of the watch case).
2. Pull the crown out gently to the time-setting position. You may feel a slight click.
3. Turn the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
4. Once the time is set, push the crown back into its original position against the watch case. This will start the watch movement.

3. Adjusting the Bracelet

The alloy link bracelet features an adjustable fold-over clasp designed for a secure and comfortable fit. If the bracelet is too loose, it may require professional adjustment to remove links. It is recommended to visit a qualified jeweler for this service to avoid damage to the watch or bracelet.



Image: The XOXO Women's Silver-Tone Bracelet Watch worn on a wrist, demonstrating its fit and appearance.

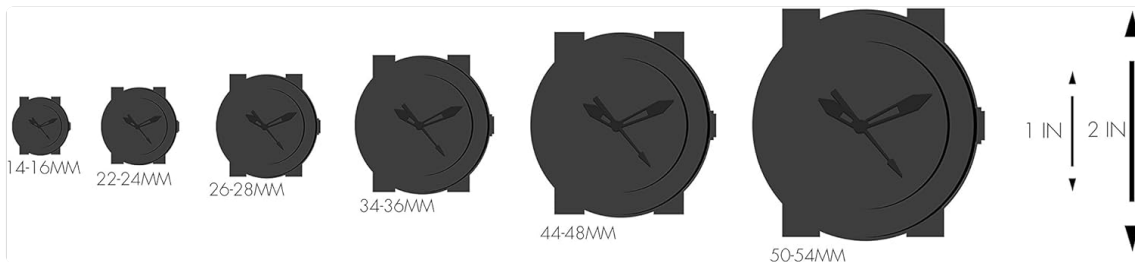


Image: A visual guide illustrating different watch case diameters, with the XOXO watch (37mm) falling into the medium-large category for women's watches.

OPERATION

Timekeeping

Your XOXO watch is powered by a reliable quartz movement, providing accurate analog time display. The watch features hour, minute, and second hands.

Decorative Subdials

Please note that the smaller dials (subdials) on the watch face are decorative and do not have functional timekeeping capabilities. They are integrated into the design for aesthetic purposes.

MAINTENANCE

Cleaning

- To clean the watch case and bracelet, use a soft, dry cloth.
- For stubborn dirt, a slightly damp cloth can be used, followed immediately by a dry cloth.

- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish and crystal.

Water Resistance

Important: This watch is **NOT water resistant**. Avoid exposure to water, including showering, swimming, or heavy rain, as this can cause internal damage to the movement.

Battery Replacement

The watch is powered by one product-specific battery (included). When the watch stops or the second hand begins to skip, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and function.

Storage

When not in use, store your watch in a dry place, away from direct sunlight and extreme temperatures. The original gift box can serve as a suitable storage container.

TROUBLESHOOTING

- **Watch Not Running:**
 - Ensure the crown is fully pushed in against the watch case.
 - The battery may need replacement. Refer to the "Battery Replacement" section under Maintenance.
- **Incorrect Time:**
 - Reset the time as described in the "Setting the Time" section under Setup.
 - If the time continues to be inaccurate after resetting, the watch may require servicing.
- **Bracelet Discomfort:**
 - If the bracelet is too tight or too loose, consider having links added or removed by a professional jeweler.

SPECIFICATIONS

Feature	Detail
Model Number	XO172
Movement	Quartz Analog
Case Material	Metal Alloy
Case Diameter	37 mm
Dial Window Material	Glass
Bezel Accents	Rhinestone
Bracelet Material	Alloy
Clasp Type	Push-button fold-over clasp
Water Resistance	Not Water Resistant

Battery	1 Product Specific (included)
Manufacturer	Accutime Watch Corp.
Package Dimensions	4.17 x 3.43 x 3.03 inches
Item Weight	2.47 ounces

WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or service inquiries, please refer to the documentation included with your purchase or contact the manufacturer directly. Manufacturer: Accutime Watch Corp.

Please retain your proof of purchase for warranty purposes.