

## GM C02003

# GM D Pot Programmable Pressure Cooker Model C02003 User Manual

Your Guide to Safe and Efficient Operation

## 1. INTRODUCTION

Thank you for choosing the GM D Pot Programmable Pressure Cooker Model C02003. This appliance is designed to simplify your cooking process with its advanced features, including a 6-liter capacity, 24-hour programmability, 9 cooking menus, and dual pressure settings. Please read this manual thoroughly before first use to ensure safe operation and optimal performance. Keep this manual for future reference.

### Important Safety Instructions

- Always ensure the lid is properly closed and locked before operating.
- Do not fill the inner pot beyond the MAX fill line to prevent overfilling and potential pressure buildup issues.
- Exercise extreme caution when opening the lid after cooking, as hot steam will escape. Always release pressure completely before opening.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Use only GM authorized accessories and replacement parts.

## 2. PRODUCT OVERVIEW

Familiarize yourself with the components of your GM D Pot Pressure Cooker.



**Figure 2.1:** Front view of the GM D Pot Programmable Pressure Cooker, showing the main unit, control panel with digital display, and lid with pressure release valve.

## Components

- **Main Unit:** Houses the heating element and control panel.
- **Inner Pot:** Non-stick cooking pot, removable for cleaning.
- **Lid:** Features a sealing ring, pressure release valve, and float valve.
- **Control Panel:** Digital display and various function buttons.
- **Condensation Collector:** Gathers excess moisture.



**Figure 2.2:** The GM D Pot Programmable Pressure Cooker displayed with its standard accessories, including a cooking basket, measuring cup, spoon, and a recipe book.

## Included Accessories

- Cooking Basket
- Measuring Cup
- Serving Spoon
- Steaming Rack
- User Manual/Recipe Book

## 3. SETUP

### Unpacking

1. Carefully remove all components from the packaging.
2. Remove any protective film or stickers from the appliance.
3. Retain packaging materials for future storage or transport.

### Initial Cleaning

1. Wash the inner pot, lid (including the sealing ring), cooking basket, measuring cup, and spoon with warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. Ensure all parts are dry before assembly.

### First Use (Water Test)

It is recommended to perform a water test before cooking food to familiarize yourself with the pressure cooker's operation and ensure all components are working correctly.

1. Add 2-3 cups of water to the inner pot.
2. Place the inner pot into the main unit.
3. Close the lid, ensuring it is properly locked. Set the pressure release valve to the 'Sealing' position.
4. Plug in the appliance. Select a basic cooking program (e.g., 'Rice' or 'Soup') and let it run for 5-10 minutes.
5. Once the cooking cycle is complete, carefully release the pressure using the pressure release valve.
6. Once all pressure is released and the float valve drops, open the lid. Discard the water and dry the inner pot.

## 4. OPERATING INSTRUCTIONS

### Basic Operation

1. Place the inner pot into the main unit. Ensure the exterior of the inner pot and the interior of the main unit are clean and dry.
2. Add ingredients and liquid to the inner pot. Do not exceed the MAX fill line.
3. Close the lid by aligning the arrow on the lid with the arrow on the main unit handle, then rotate clockwise until it locks into place.
4. Ensure the pressure release valve is set to the 'Sealing' position for pressure cooking.
5. Plug the power cord into a grounded electrical outlet. The display will show 'OFF'.

### Selecting Cooking Programs

The GM D Pot features 9 pre-set cooking menus. Press the 'Menu' button repeatedly to cycle through the available programs. The selected program will be indicated on the digital display.

### Setting Pressure Levels

This appliance offers both low and high pressure cooking options. After selecting a cooking program, use the

'Pressure' button to toggle between low and high pressure settings if the program allows.

## Using the 24-Hour Programmable Timer

To delay the start of cooking, use the 'Timer' or 'Delay Start' function. After selecting your desired cooking program and settings, press the 'Timer' button and use the '+' and '-' buttons to set the desired delay time in hours. The cooker will automatically start cooking after the set delay.

## Voice Prompts

The GM D Pot is equipped with a voice prompt system to guide you through various stages of operation, such as lid locking, pressure building, and cooking completion. Pay attention to these prompts for a smoother cooking experience.

## Opening the Lid Safely

1. Once cooking is complete, the cooker will automatically switch to 'Keep Warm' mode.
2. To open the lid, first ensure all pressure has been released. You can do this by carefully turning the pressure release valve to the 'Venting' position (Natural Release) or by using the Quick Release method (consult specific recipe instructions).
3. Wait until the float valve drops down, indicating that all internal pressure has dissipated.
4. Rotate the lid counter-clockwise to unlock and lift it away from your face to avoid hot steam.

## 5. CARE AND MAINTENANCE

### Cleaning

- **Inner Pot:** Wash with warm, soapy water and a non-abrasive sponge. Rinse thoroughly. The inner pot is **not dishwasher safe**.
- **Lid:** Remove the sealing ring and wash it, along with the lid, in warm, soapy water. Clean the pressure release valve and float valve to ensure they are free of food debris. Reinstall the sealing ring correctly after cleaning.
- **Main Unit:** Wipe the exterior with a damp cloth. Never immerse the main unit in water.
- **Condensation Collector:** Empty and clean after each use.

### Storage

Ensure the appliance is clean and dry before storing. Store in a cool, dry place away from direct sunlight. Do not place heavy objects on top of the cooker.

## 6. TROUBLESHOOTING

- **Cooker not building pressure:** Check if the lid is properly closed and locked. Ensure the sealing ring is correctly installed and not damaged. Verify the pressure release valve is set to 'Sealing'.
- **Steam leaking from lid:** This often indicates an improperly seated sealing ring or food debris preventing a proper seal. Clean and re-seat the sealing ring.
- **Food not cooking properly:** Ensure sufficient liquid was added. Verify the correct cooking program and time were selected.
- **Error codes on display:** Refer to the specific error code in the full manual (if available) or contact customer

support.

## 7. SPECIFICATIONS

Feature	Specification
Model Number	C02003
Capacity	6 Liters
Power	1200 Watts
Voltage	220 Volts
Control Method	Voice (Voice Prompts)
Special Feature	Programmable (24-hour delay)
Pressure Settings	Low and High
Weight	5 Kilograms
Approximate Dimensions (Package)	35.4 x 31.8 x 31.8 cm
Dishwasher Safe (Inner Pot)	No

## 8. WARRANTY AND SUPPORT

For warranty information, technical support, or to inquire about replacement parts, please refer to the contact details provided with your purchase documentation or visit the official GM product support website. Please have your model number (C02003) and purchase date available when contacting support.