

Hermle 22986002100

Hermle Fremont 22986002100 Clock Instruction Manual

Model: 22986002100

INTRODUCTION

This manual provides comprehensive instructions for the Hermle Fremont 22986002100 Clock. This elegant brass office clock features a precise quartz time-only movement and a clear white dial with distinct Arabic numerals. Designed for indoor tabletop placement, this clock is a product of German craftsmanship. Please read these instructions carefully before setting up and operating your clock to ensure proper function and longevity.

SETUP

1. Unpacking

- Carefully remove the clock from its packaging.
- Inspect the clock for any signs of damage during transit. If damage is found, contact your retailer immediately.
- Retain the packaging for future transport or storage.

2. Battery Installation

The Hermle Fremont clock requires two (2) AA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover by sliding or gently prying it open.
3. Insert two fresh AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover securely.

3. Setting the Time

1. Locate the time-setting knob, typically a small wheel or crown, on the back of the clock's movement mechanism.
2. Gently turn the knob clockwise or counter-clockwise to move the clock hands to the correct time.
3. Avoid forcing the hands directly; always use the setting knob.



Figure 1: Hermle Fremont 22986002100 Clock. This image displays the Hermle Fremont 22986002100 Clock, highlighting its brass casing, clear crystal glass, and white dial with distinct Arabic numerals. The clock is designed for tabletop placement.

OPERATING THE CLOCK

The Hermle Fremont 22986002100 is a time-only clock, meaning its primary function is to display the current time accurately. Once the batteries are installed and the time is set, the clock will operate continuously.

- **Timekeeping:** The quartz movement ensures accurate timekeeping.
- **No Alarms or Chimes:** This model does not feature alarm functions or chimes.

MAINTENANCE

Cleaning

- To clean the clock's brass casing and crystal glass, use a soft, dry, lint-free cloth.
- For stubborn marks on the glass, a slightly damp cloth followed by a dry cloth can be used. Avoid abrasive cleaners or chemical sprays, as these can damage the finish.
- Do not immerse the clock in water or expose it to excessive moisture.

Battery Replacement

Replace the batteries annually or when the clock begins to lose time or stops functioning. Refer to the "Battery Installation" section for detailed steps.

- Always use fresh, high-quality AA batteries.
- Remove depleted batteries promptly to prevent leakage, which can damage the movement.

General Care

- Place the clock on a stable, level surface away from direct sunlight, extreme temperatures, and high humidity.
- Avoid exposing the clock to strong magnetic fields, which can affect timekeeping accuracy.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock is not running.	• Batteries are depleted or incorrectly installed. • Movement mechanism is jammed.	• Check battery orientation and replace with fresh AA batteries. • Gently check if hands are obstructed. If not, contact support.
Clock is losing or gaining time.	• Batteries are low. • Exposure to extreme temperatures or strong magnetic fields. • Movement mechanism issue.	• Replace batteries with fresh ones. • Relocate the clock to a stable environment. • Contact support if the issue persists after battery replacement and relocation.
Hands are not moving smoothly.	• Low battery power. • Dust or debris in the movement.	• Replace batteries. • Do not attempt to open the movement. Contact support.

SPECIFICATIONS

Brand	Hermle
Model Number	22986002100
Movement Type	Quartz, Time Only
Display Type	Analog
Dial Color	White with Arabic Numerals
Power Source	Battery Powered (2 x AA batteries required, not included)

Material	Brass (Frame), Crystal Glass, Wood (Base/Internal structure, if applicable)
Mounting Type	Tabletop
Indoor/Outdoor Usage	Indoor
Item Weight	2.7 Pounds
Origin	Made in Germany

WARRANTY AND SUPPORT

Warranty Information

The Hermle Fremont 22986002100 Clock is covered by a **3-year manufacturer's warranty**. This warranty typically covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or visit the official Hermle website.

Customer Support

If you encounter any issues not covered in the troubleshooting section, or require further assistance, please contact Hermle customer support or your authorized retailer. When contacting support, please have your model number (22986002100) and proof of purchase readily available. For the most up-to-date contact information, please visit the official Hermle website:www.hermle-clocks.com

© 2024 Hermle. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question