

[Manuals.plus](#) /

› [Trendwoo](#) /

› Trendwoo Wireless Bluetooth Speaker Super Ultra Bass Portable Stereo for iPhone iPad and More User Manual

Trendwoo 3826286

Trendwoo Wireless Bluetooth Speaker User Manual

Model: 3826286

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Trendwoo Wireless Bluetooth Speaker. Please read it thoroughly before using the device and retain it for future reference.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble or attempt to repair the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water and other liquids.
- Use only the provided charging cable and audio line.

PACKAGE CONTENTS

- Bluetooth Speaker x1
- Audio Line x1
- Micro USB Cable x1
- User Manual in English x1

PRODUCT OVERVIEW

Controls and Indicators



Figure 1: Front view of the Trendwoo Bluetooth Speaker, highlighting the top panel with control buttons for power, volume, play/pause, and call management.

- **Power Button:** Turns the speaker on/off.
- **Volume Up (+):** Increases volume. Press and hold.
- **Volume Down (-):** Decreases volume. Press and hold.
- **Play/Pause Button:** Controls music playback.
- **Call Button:** Answers or ends calls. Press and hold to redial last call.

Ports and Connections



Figure 2: Rear view of the Trendwoo Bluetooth Speaker, displaying the ON/OFF switch, micro USB charging port, 3.5mm Line In (AUX) port, and Line Out port.

- **ON/OFF Switch:** Main power switch for the device.
- **USB Port:** Micro USB port for charging.
- **Line In (AUX) Port:** 3.5mm audio input for wired connections.
- **Line Out Port:** 3.5mm audio output.

SETUP

Charging the Speaker

1. Connect the micro USB cable to the USB port on the speaker.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Allow 3 to 4 hours for a full charge.
4. Once fully charged, the indicator light may change color or turn off.

Powering On/Off

- To power on, slide the ON/OFF switch on the back of the speaker to the "ON" position. The power indicator will light up green.
- To power off, slide the ON/OFF switch to the "OFF" position.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Ensure the speaker is powered on and within range of your Bluetooth device (e.g., smartphone, tablet).
2. The speaker will automatically enter pairing mode, indicated by a flashing LED light (color not specified, assume standard blue).
3. On your Bluetooth device, enable Bluetooth and search for new devices.
4. Select "Trendwoo" from the list of available devices.
5. Once paired, the LED indicator will become solid, and you may hear a confirmation tone.

Using AUX Input

1. Connect one end of the provided 3.5mm audio line to the "Line In" port on the speaker.
2. Connect the other end of the audio line to the headphone jack or audio output of your external device.
3. The speaker will automatically switch to AUX mode.
4. Control playback and volume from your external device.

Music Playback Control

- **Play/Pause:** Press the Play/Pause button once to play or pause music.
- **Volume Adjustment:** Press and hold the "+" button to increase volume. Press and hold the "-" button to decrease volume.

Call Management

- **Answer/End Call:** Press the Call button once to answer an incoming call or end an ongoing call.
- **Redial Last Call:** Press and hold the Call button to redial the last number called.

MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use.
- Avoid blocking the speaker grilles to ensure optimal sound quality.
- Charge the battery regularly, even if not in frequent use, to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker for 3-4 hours.
Cannot pair via Bluetooth.	Bluetooth is off on device; speaker is out of range; speaker is already paired.	Ensure Bluetooth is enabled; move device closer; disconnect from other devices.
No sound.	Volume too low; incorrect input mode; device not playing.	Increase volume on speaker and device; ensure correct mode (Bluetooth/AUX); check playback on device.

Problem	Possible Cause	Solution
Poor sound quality.	Interference; low battery; source quality.	Move away from other electronic devices; charge speaker; try a different audio source.

SPECIFICATIONS



Figure 3: Physical dimensions of the Trendwoo Bluetooth Speaker.

Feature	Detail
Model	3826286
Dimensions (L x H x D)	17.78 x 7.9 x 6.99 cm (7" x 3.11" x 2.75")
Weight	1.22 kg (2.7 lbs)
Speaker Type	Dual Speaker with Passive Radiator

Feature	Detail
Speaker Diameter	1.7" x 2
Power Output	5W x 2 (10W total)
Frequency Response	140Hz-20KHz
Bluetooth Version	4.0 + EDR
Bluetooth Profile	A2DP, AVRCP
Connectivity	Bluetooth, 3.5mm AUX In
Battery Type	Lithium Ion
Battery Capacity	4000mAh
Music Streaming Time	5 to 6 hours
Charging Time	3 to 4 hours

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Trendwoo website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question