

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Proctor Silex](#) /

› Proctor Silex Electric Immersion Hand Blender 59738A User Manual

## Proctor Silex 59738A

# Proctor Silex Electric Immersion Hand Blender

MODEL: 59738A

## Introduction

---

The Proctor Silex Electric Immersion Hand Blender, Model 59738A, is a versatile kitchen tool designed for blending, mixing, pureeing, and whipping. Featuring 150 watts of power and a durable stainless steel blade, this appliance is engineered for efficiency and ease of use. Its ergonomic grip ensures comfortable handling, and the extra-long 5 ft cord provides flexibility during operation.

## Important Safeguards

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions before operating the appliance.
2. To protect against electrical shock, do not immerse the motor body, cord, or electrical plug in water or other liquids.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. The blade is sharp. Handle with care.

## Parts and Features

---

- **Motor Body:** Contains the motor and control buttons.
- **Blending Stick:** Detachable shaft with stainless steel blade.
- **Two-Speed Control Buttons:** Allows selection between two blending speeds.
- **Power Cord:** Extra-long 5 ft cord for convenient reach.



The Proctor Silex Immersion Hand Blender, showing the motor body, blending stick, and power cord.



A hand holding the blender, highlighting the ergonomic grip and the two-speed control buttons for easy operation.

## Setup

Before first use, wash the blending stick in warm, soapy water. Rinse thoroughly and dry. The motor body should be wiped clean with a damp cloth. Ensure all parts are completely dry before assembly.

1. Align the blending stick with the motor body.

2. Twist the blending stick clockwise until it locks securely into place.
3. Ensure the blender is unplugged before assembly or disassembly.

## Operating Instructions

---

The Proctor Silex Immersion Hand Blender features two speeds for various blending tasks.

1. **Prepare Ingredients:** Cut larger ingredients into smaller pieces for easier blending.
2. **Immerse Blender:** Plug the blender into a standard electrical outlet. Immerse the blending stick into the food mixture, ensuring the blade guard is fully submerged to prevent splashing.
3. **Select Speed:** Press and hold the desired speed button (I for low, II for high) on the motor body to begin blending.
4. **Blend:** Move the blender up and down and in a circular motion to ensure all ingredients are thoroughly blended. Continue blending until the desired consistency is achieved.
5. **Stop Blending:** Release the speed button to stop the blender.
6. **Remove Blender:** Wait for the blade to stop completely before removing the blending stick from the food mixture.

### Tips for Best Results:

- For best results, use the blender in a deep container to prevent splashing.
- Do not operate the blender continuously for more than 1 minute. Allow it to rest for a few minutes between uses to prevent overheating.
- When blending hot liquids, use caution and ensure the container is stable.



The immersion blender is suitable for preparing a variety of foods, from smoothies to soups and sauces.

## Cleaning and Maintenance

Proper cleaning and maintenance will extend the life of your immersion blender.

1. **Unplug:** Always unplug the blender from the electrical outlet before cleaning.
2. **Detach Blending Stick:** Twist the blending stick counter-clockwise to detach it from the motor body.

3. **Clean Blending Stick:** The detachable blending stick is dishwasher safe. Alternatively, wash it in warm, soapy water, rinse thoroughly, and dry immediately. Handle the stainless steel blade with extreme care as it is very sharp.
4. **Clean Motor Body:** Wipe the motor body with a damp cloth. Do not immerse the motor body in water or any other liquid.
5. **Storage:** Store the blender in a dry place.



The detachable blending stick is easy to clean under running water or in a dishwasher.

## Troubleshooting

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in. Power outlet not working.	Ensure the blender is securely plugged into a working electrical outlet. Test the outlet with another appliance.
Food is not blending smoothly.	Ingredients are too large or too dense. Not enough liquid.	Cut ingredients into smaller pieces. Add more liquid to the mixture. Move the blender up and down to circulate ingredients.
Blender overheats.	Continuous operation for too long.	Do not operate for more than 1 minute continuously. Allow the blender to cool down for several minutes before resuming use.

## Specifications

<b>Brand</b>	Proctor Silex
<b>Model Number</b>	59738A
<b>Color</b>	White
<b>Special Feature</b>	Multiple Speeds
<b>Product Dimensions</b>	4"D x 15.25"W x 6.12"H
<b>Included Components</b>	User manual
<b>Recommended Uses</b>	Blending
<b>Power Source</b>	Corded Electric
<b>Number of Speeds</b>	2
<b>Blade Material</b>	Stainless Steel
<b>Item Weight</b>	1.4 pounds
<b>Material</b>	Plastic (body), Stainless Steel (blade)

## Warranty and Support

This Proctor Silex appliance comes with a limited warranty. For specific warranty details, registration, or technical support, please refer to the warranty card included with your product or visit the official Proctor Silex website. Do not attempt to repair the appliance yourself; contact authorized service personnel for assistance.

