

[Manuals.plus](#) /

› [Preethi](#) /

› Preethi Blu Flame Jumbo Glass Top 4-Burner Gas Stove Instruction Manual

Preethi 19000011

Preethi Blu Flame Jumbo Glass Top 4-Burner Gas Stove

Model: 19000011

INTRODUCTION

Thank you for choosing the Preethi Blu Flame Jumbo Glass Top 4-Burner Gas Stove. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read these instructions carefully before using the gas stove and retain them for future reference.

UNMATCHED PERFORMANCE WITH ULTIMATE CONVENIENCE

COOKING MADE EASY



This image shows the complete Preethi Blu Flame Jumbo Glass Top 4-Burner Gas Stove, highlighting its sleek design and four distinct burners.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, or injury to persons.

- Ensure proper ventilation in the kitchen area during operation.
- Do not store flammable materials near the gas stove.
- Keep children and pets away from the appliance during use.
- Always use appropriate cookware for the burner size.
- Do not leave the gas stove unattended while cooking.
- In case of a gas leak, immediately turn off the gas supply, open windows, and do not operate any electrical switches.

- Regularly check gas hoses and connections for any signs of wear or damage.

PRODUCT FEATURES

The Preethi Blu Flame Jumbo Gas Stove is designed for efficiency and durability.

Burners and Cooktop



Detail view illustrating the robust jumbo brass burner and the durable 8mm thermally toughened glass cooktop, designed for efficient cooking.

- **Jumbo Brass Burners:** Equipped with high-efficiency brass burners for even heat distribution and faster cooking. The stove includes one large, two medium, and one small burner.
- **8mm Thermally Toughened Glass:** The cooktop features an 8mm thick thermally toughened glass surface, providing durability and a sleek appearance.

Safety and Durability

TOUGH & DURABLE

COOKING MADE EASY



**HEAVY DUTY
BRASS BURNER**



**LEAK-PROOF
SAFETY VALVE**



**ANT GUARD
JET**



An illustration detailing key safety and durability components: the heavy-duty brass burner, the leak-proof safety valve, and the ant guard jet, ensuring safe and reliable operation.

- **Heavy Duty Brass Burners:** Constructed from durable brass for long-lasting performance.
- **Leak-Proof Safety Valve:** Designed to prevent gas leaks, enhancing user safety.
- **Ant Guard Jet:** Protects the gas flow system from insect interference, ensuring consistent performance.

Convenience

CONVENIENCE+

COOKING MADE EASY



NIGHT GLOW KNOBS

EASY TO SPOT KNOB
POSITION EVEN IN DARKNESS



REMOVABLE DRIP TRAY

EASY SPILL
COLLECTION
& CLEANING



This image highlights user convenience features, including night glow knobs for easy visibility in low light and a removable drip tray for effortless cleaning and spill management.

- **Night Glow Knobs:** Control knobs that glow in the dark, making it easy to locate and adjust settings even in low light conditions.
- **Removable Drip Tray:** Easy-to-remove stainless steel drip trays facilitate quick cleaning of spills and food residue.
- **Removable Steel Plates:** The steel plates under the burners are removable for thorough cleaning.

INSTALLATION AND SETUP

Proper installation is crucial for the safe and efficient operation of your gas stove. It is recommended that installation be performed by a qualified technician.

1. **Unpacking:** Carefully remove the gas stove from its packaging. Inspect for any damage during transit.
2. **Placement:** Place the stove on a stable, level, and heat-resistant surface. Ensure adequate clearance from walls and overhead cabinets as per local regulations.

- 3. **Gas Connection:** Connect the gas stove to a suitable gas supply (LPG/PNG) using an approved gas hose and regulator. Ensure all connections are tight and leak-free. Use a soap solution to check for leaks; bubbles indicate a leak.
- 4. **Burner Assembly:** Place the burner components (burner caps, pan supports) correctly on their respective positions.
- 5. **Ventilation:** Ensure the kitchen area has proper ventilation, such as an exhaust fan or open windows, to dissipate combustion by-products.

OPERATING YOUR GAS STOVE

Follow these steps for safe and effective operation:

- 1. **Gas Supply:** Ensure the main gas supply valve is open.
- 2. **Ignition:** Push and turn the desired burner knob counter-clockwise to the 'Ignite' position. Simultaneously, use an external lighter or matchstick to ignite the gas. Hold the knob for a few seconds after ignition to allow the thermocouple (if present) to heat up and keep the flame lit.
- 3. **Flame Adjustment:** Once ignited, adjust the flame intensity by rotating the knob between the 'High' and 'Simmer' positions.
- 4. **Turning Off:** To turn off a burner, rotate the knob clockwise to the 'OFF' position. Ensure the flame is completely extinguished.
- 5. **After Use:** After cooking, ensure all burner knobs are in the 'OFF' position and consider closing the main gas supply valve for added safety.

CARE AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your gas stove and ensure safe operation.

- **Daily Cleaning:** After each use, allow the stove to cool down. Wipe the glass top and stainless steel body with a soft, damp cloth and mild detergent.
- **Burner Cleaning:** Periodically remove the burner caps and pan supports. Wash them with warm soapy water, rinse, and dry thoroughly before reassembling. Ensure burner holes are not clogged.
- **Drip Tray Cleaning:** Remove the drip trays and clean them with soap and water to remove food spills.
- **Glass Top Care:** Avoid using abrasive cleaners or scourers on the glass top as they can scratch the surface. For stubborn stains, use a specialized glass cooktop cleaner.
- **Gas Hose Inspection:** Regularly inspect the gas hose for cracks, cuts, or signs of wear. Replace immediately if any damage is found.
- **Ant Guard Jet:** Ensure the ant guard jet remains clear of obstructions.

TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Burner not igniting	No gas supply; clogged burner holes; faulty igniter.	Check gas cylinder/pipeline; clean burner holes; use external lighter.

Problem	Possible Cause	Solution
Irregular flame	Clogged burner holes; improper burner assembly.	Clean burner holes; ensure burner caps are correctly placed.
Gas smell	Gas leak from hose or connections.	Immediately turn off gas supply, ventilate area, check for leaks with soap solution, tighten connections or replace hose. Contact technician if leak persists.
Knob difficult to turn	Dirt or debris under the knob.	Remove knob and clean the area underneath.

TECHNICAL SPECIFICATIONS

- **Model:** 19000011
- **Brand:** Preethi
- **Type:** 4-Burner Gas Stove
- **Cooktop Material:** 8mm Thermally Toughened Glass
- **Burner Material:** Heavy Duty Brass
- **Body Material:** Stainless Steel
- **Item Weight:** Approximately 12.5 kg (12500 g)
- **Features:** Jumbo Brass Burners, Leak-Proof Safety Valve, Ant Guard Jet, Night Glow Knobs, Removable Drip Tray, Removable Steel Plates.

WARRANTY AND CUSTOMER SUPPORT

UNMATCHED QUALITY

COOKING MADE EASY



Visual representation of the product's warranty information, including a 5-year warranty on glass and burners, a 2-year product warranty, and lifelong free service.

Preethi provides comprehensive support for your gas stove:

- **Glass & Burner Warranty:** 5 Years
- **Product Warranty:** 2 Years
- **Service:** Lifelong Free Service

For any queries, service requests, or technical assistance, please contact Preethi customer support. Refer to your purchase documentation or the official Preethi website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question