

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CLAM](#) /

› [CLAM Pop Up Screen Tent, Outdoor Camping Gazebo Canopy, Pavilion, 12.5', Brown - Heavy-Duty Portable Screened Shelter with Netting for Beach, Patio, and Backyard Brown Built In Wind Panels - 12.5' x 12.5'](#)

CLAM CLAM-PV-9882

CLAM Quick-Set Pavilion Screen Tent Instruction Manual

Brand: CLAM | Model: CLAM-PV-9882

INTRODUCTION

The CLAM Quick-Set Pavilion Screen Tent is a heavy-duty, portable screened shelter designed for outdoor use, providing comfort and protection from elements and insects. Its innovative pop-up design allows for rapid setup, making it an ideal solution for camping, backyard gatherings, beach trips, and patio use. This manual provides essential information for the safe and effective use, setup, maintenance, and troubleshooting of your screen tent.



Figure 1: The CLAM Quick-Set Pavilion Screen Tent, showcasing its robust design and spacious interior.

SAFETY INFORMATION

Please read and understand all safety warnings before setting up or using your CLAM Quick-Set Pavilion Screen Tent. Failure to follow these instructions may result in injury or damage to the product.

- **General Safety Warnings for Freestanding Shelters:** Always secure the tent with all provided stakes and tie-down ropes, especially in windy conditions, to prevent it from blowing away or collapsing.
- Do not use the tent near open flames or heat sources. The fabric is not fireproof and can melt or burn.
- Avoid setting up the tent under trees with dead branches that could fall.
- Ensure proper ventilation when using any heating or cooking appliances inside or near the tent to prevent carbon monoxide buildup.
- Do not leave children unattended inside or around the tent.
- In severe weather conditions (heavy winds, thunderstorms, heavy snow), disassemble the tent and seek appropriate shelter.
- Inspect the tent for damage before each use. Do not use if any components are broken or compromised.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- CLAM Quick-Set Pavilion Screen Tent (1 unit)
- Tent Stakes (7 units)

- Tie-Down Ropes (5 units)
- Oversize Carry Bag (1 unit)

SETUP INSTRUCTIONS

The CLAM Quick-Set Pavilion is designed for a rapid 60-second setup. Follow these steps for quick and easy assembly:

1. **Step 1: Stand Shelter Up on the Center Hub.** Remove the tent from its carry bag. Stand the collapsed shelter upright, resting it on its central hub.
2. **Step 2: Open with Roof Facing Up with Poles on the Inside.** Gently unfold the tent, ensuring the roof section is facing upwards and the support poles are positioned on the inside of the structure.
3. **Step 3: Reach Handle at Panel Center and Pull Each Panel.** With the poles on the inside, reach for the handle located at the center of each panel. Pull each panel outwards while holding the roof line with your opposite hand until it locks into place.
4. **Step 4: Enter Through Door and Push Roof Center Hub Up.** Enter the tent through the designated door. From inside, push the roof's central hub upwards until it is fully extended and locked, creating the full height of the pavilion.
5. **Secure the Tent:** Once fully erected, use the provided tent stakes to secure the base of the tent to the ground through the built-in corner grommets. Utilize the tie-down ropes and I-bolts to secure external tie-down straps for added stability, especially in breezy conditions.



COMFORT & CONVENIENCE IN 60 SECONDS!

STEP 1

STAND SHELTER UP ON THE CENTER HUB.



STEP 2

OPEN WITH ROOF FACING UP WITH POLES ON THE INSIDE.



STEP 3 WITH POLES ON THE INSIDE, REACH HANDLE AT PANEL CENTER AND PULL EACH PANEL WHILE HOLDING ROOF LINE WITH OPPOSITE HAND.



STEP 4 ENTER THROUGH DOOR AND PUSH ROOF CENTER HUB UP UNTIL ERECT.

Figure 2: Visual guide illustrating the four-step quick setup process.



SETUP DIMENSIONS



Figure 3: Setup dimensions, including height, width, and footprint, for optimal placement.

OPERATING THE TENT

Your CLAM Quick-Set Pavilion is designed for versatility and comfort:

- Wind Panels:** The tent features built-in wind panels that can be rolled up, down, and zipped on the sides. This allows you to adjust for privacy, sun protection, or weather conditions.
- Mesh Windows:** Mesh windows are integrated into the wind panels, providing ventilation while keeping insects out.
- Extra-Wide Skirt:** An extra-wide skirt around the base helps to keep bugs out and provides additional protection from ground-level elements.
- Capacity:** The tent comfortably accommodates up to 8 people and can fit standard camping tables and chairs.



LARGE CAPACITY
FITS UP TO 8 PEOPLE

NO-SEE-UM MESH SCREEN
KEEP THE BUGS OUT

NO ASSEMBLY REQUIRED
SET UP IN 60 SEC.

WATER-RESISTANT TENT ROOF
TAPED ROOF PANEL

Figure 4: The spacious interior of the tent, ideal for group activities and dining.



Figure 5: Tent with all wind panels closed, providing privacy and protection from elements.

MAINTENANCE

Proper maintenance will extend the life of your CLAM Quick-Set Pavilion Screen Tent:

- **Cleaning:** Clean the tent fabric with mild soap and water. Do not use harsh detergents or bleach, as these can damage the fabric's water-resistant coating. Rinse thoroughly.
- **Drying:** Always ensure the tent is completely dry before packing it away. Storing a damp tent can lead to mildew, mold, and fabric degradation.
- **Storage:** Store the tent in its oversize carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Zipppers:** Keep zippers clean and lubricated with a silicone-based spray to ensure smooth operation.
- **Seam Sealing:** Periodically inspect the seams for wear. Applying a seam sealer can help maintain the tent's water resistance over time.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Tent collapses or is unstable in wind.	Insufficient staking or improper use of guy lines.	Ensure all 7 tent stakes are firmly driven into the ground. Use all 5 tie-down ropes and l-bolts to secure the tent, especially in windy conditions. Consider using longer, heavy-duty galvanized stakes for increased stability.
Water seepage through seams.	Normal wear and tear on seam sealing, or manufacturing variation.	Apply a quality seam sealer to all stitched seams, particularly in the corners and around the roof hub, to enhance water resistance.
Difficulty zipping panels.	Dirt/debris in zipper teeth or lack of lubrication.	Clean zipper teeth with a brush and apply a silicone-based zipper lubricant. Ensure fabric is not caught in the zipper.
Tent is difficult to pack back into the carry bag.	Improper folding technique or air trapped inside.	Ensure all air is expelled from the tent as you fold it. Follow the reverse of the setup instructions for folding. The carry bag is oversized to assist with packing.

SPECIFICATIONS

Key specifications for the CLAM Quick-Set Pavilion Screen Tent:

Brand: CLAM

Model Number: CLAM-PV-9882

Material: 210 Denier Poly-Oxford fabric, No-See-Um Mesh Screening, Fiberglass poles

Color: Brown

Product Dimensions (L x W x H): 150" x 150" x 94" (12.5 ft x 12.5 ft x 7.8 ft)

Floor Area: 156.25 Square Feet

Item Weight: 39 Pounds

Occupancy: 8 Person

Shape: Hexagonal

Water Resistance Level: Water Resistant (Roof with taped seams)

Assembly Required: No (Pop-up design)

UPC: 719921098828

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official CLAM Outdoors resources:

- User Guide (PDF):** An official user guide is available for download [here](#).
- Protection Plans:** Extended protection plans may be available for purchase. Please check with your retailer for details.
- Customer Support:** For any product-related inquiries, technical assistance, or warranty claims, please contact CLAM Outdoors customer support.

