

BLACK+DECKER CM100N

BLACK+DECKER CM100N Nylon Trimmer Wagon

User Manual for GCM18N Cordless Nylon Trimmer

1. INTRODUCTION

Thank you for purchasing the BLACK+DECKER CM100N Nylon Trimmer Wagon. This accessory is designed to convert your BLACK+DECKER GCM18N Cordless Nylon Trimmer into a wheeled lawn trimming device, allowing for more uniform cutting height and easier operation over larger areas. Please read this manual carefully before assembly and operation to ensure safe and efficient use.

2. SAFETY INFORMATION

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury when using this product. Keep this manual for future reference.

- **Read all instructions:** Familiarize yourself with the controls and proper use of the trimmer wagon and your GCM18N trimmer.
- **Wear appropriate safety gear:** Always wear eye protection, long pants, and sturdy footwear. Consider hearing protection.
- **Keep children and bystanders away:** Do not allow children or untrained persons to operate the trimmer wagon. Maintain a safe distance from others during operation.
- **Inspect the work area:** Before starting, clear the area of any objects that could be thrown by the trimmer line, such as rocks, sticks, or debris.
- **Secure the trimmer:** Ensure the GCM18N trimmer is securely attached to the CM100N wagon before use.
- **Maintain balance:** Be aware of the product's balance, especially when attaching or detaching the trimmer.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- BLACK+DECKER CM100N Nylon Trimmer Wagon (Main Unit)
- Instruction Manual

Note: The GCM18N Cordless Nylon Trimmer is sold separately and is required for use with this wagon.

4. ASSEMBLY

The CM100N Nylon Trimmer Wagon requires minimal assembly. Follow these steps to prepare your wagon for use with the GCM18N trimmer:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Attach Trimmer to Wagon:**
 - Ensure your GCM18N trimmer is turned off and the battery is removed.
 - Align the head of the GCM18N trimmer with the designated slot on the CM100N wagon.
 - Press down firmly on the trimmer until it clicks securely into place. Some models may require pressing a release lever on the wagon with your foot to insert the trimmer.
3. **Verify Secure Attachment:** Gently pull on the trimmer to ensure it is firmly seated in the wagon and will not detach during operation.



Image: A foot pressing a lever on the wagon base, indicating the mechanism for attaching or detaching the trimmer unit.

5. OPERATING INSTRUCTIONS

Once the GCM18N trimmer is securely attached to the CM100N wagon, you can begin operation.

5.1. Adjusting Cutting Height

The CM100N wagon allows for two cutting height adjustments:

- **Height 1:** 40mm
- **Height 2:** 60mm

To adjust the cutting height, locate the adjustment mechanism on the wagon (refer to the diagram below). Rotate or slide the mechanism to select the desired height setting. Ensure both sides are set to the same height for an even cut.

特長

■ ワゴンタイプで広範囲の作業もラクラク！

■ 回転数自動調節機能付き！長時間の効率的な作業が可能！

■ 刈込高さは2段階に調節可能

■ ワゴンで安全な作業が可能



仕様

ワゴン使用時切断高さ

40mm/60mm

付属品

ナイロントリマーワゴン

※ワゴンは、GLC1825LN/GLC36Nではご使用できません。

Image: A diagram illustrating the two cutting height options (40mm and 60mm) and other features of the CM100N wagon.

5.2. General Operation

1. **Insert Battery:** Insert a fully charged battery into your GCM18N trimmer.
2. **Start Trimmer:** Engage the power switch on your GCM18N trimmer. The wagon's design facilitates automatic rotation speed adjustment for efficient work.
3. **Maneuver the Wagon:** Push the wagon across the area to be trimmed, similar to a lawnmower. The wheels provide stability and help maintain a consistent cutting height.
4. **Work in sections:** For best results, work in overlapping rows.
5. **Stop Trimmer:** Release the power switch on the GCM18N trimmer when finished or when moving to another area. Remove the battery for safety during breaks or when storing.



Image: A person operating the BLACK+DECKER CM100N Trimmer Wagon with a GCM18N trimmer attached, cutting grass in a garden.



Image: The CM100N Trimmer Wagon in action, demonstrating its ability to maintain a uniform cutting height on a lawn.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your CM100N Trimmer Wagon.

- **Cleaning:** After each use, remove the GCM18N trimmer from the wagon. Use a brush or cloth to clean any grass clippings, dirt, or debris from the wagon's wheels, cutting height adjustment mechanism, and housing. Do not use water directly on the trimmer.
- **Inspection:** Periodically inspect the wagon for any signs of wear, damage, or loose parts. Ensure the wheels rotate freely.
- **Storage:** Store the trimmer wagon in a clean, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your CM100N Trimmer Wagon, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not attach securely to wagon.	Incorrect alignment; debris in attachment point; incompatible trimmer model.	Ensure proper alignment and clear any debris. Verify you are using a BLACK+DECKER GCM18N trimmer.
Uneven cutting height.	Cutting height adjustment not set uniformly on both sides; uneven terrain.	Check and adjust both sides of the wagon to the same cutting height. Operate on relatively even ground.
Wagon is difficult to push.	Wheels are clogged with debris; grass is too tall or dense.	Clean wheels and clear any obstructions. For very tall grass, consider a higher cutting height or multiple passes.

For issues not listed here, please contact BLACK+DECKER customer support.

8. SPECIFICATIONS

Model: CM100N
Compatible Trimmer: BLACK+DECKER GCM18N Cordless Nylon Trimmer
Cutting Height Settings: 40mm, 60mm (2 stages)
Item Weight: 2.1 kg
Color: Black
Assembly Required: Yes
Country of Origin: China

9. COMPATIBILITY

This CM100N Nylon Trimmer Wagon is specifically designed for use with the **BLACK+DECKER GCM18N Cordless Nylon Trimmer**.
Important: This wagon is NOT compatible with BLACK+DECKER models GLC1825LN or GLC36N.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please refer to the documentation included with your BLACK+DECKER GCM18N Cordless Nylon Trimmer or visit the official BLACK+DECKER website for your region. Keep your proof of purchase for warranty claims.

© 2023 BLACK+DECKER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question