

[manuals.plus](#) /› [KRUPS](#) /› **KRUPS Quattro Force Automatic Espresso Maker 1450 W Red EA825511 with Integrated Mill, Auto On/Off System**

KRUPS EA825511

KRUPS Quattro Force Automatic Espresso Maker EA825511 User Manual

Model: EA825511

INTRODUCTION

Welcome to the user manual for your new KRUPS Quattro Force Automatic Espresso Maker, model EA825511. This fully automatic espresso machine is designed to provide a professional-level coffee experience at home, optimizing every step from grinding to brewing. With its integrated mill, automatic cleaning system, and intuitive LCD display, you can easily prepare a variety of coffee and milk-based beverages. Please read this manual carefully before first use to ensure safe operation and optimal performance of your appliance.



The KRUPS Quattro Force Automatic Espresso Maker in red, shown with various coffee beverages.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when dispensing hot water or steam.

COMPONENTS OVERVIEW

Familiarize yourself with the different parts of your KRUPS Espresso Maker.



Key components of the KRUPS Espresso Maker.

1.7L Water Tank: Located on the side, provides ample capacity for multiple beverages.

260g Bean Hopper: Top-mounted, holds coffee beans for fresh grinding.

LCD Screen: Front panel display for selecting recipes and controlling settings.

Coffee Grounds Container: Collects used coffee pucks, capacity for up to 9 cups.

Drip Tray: Collects excess liquid, removable for cleaning.

Coffee Spouts: Dispenses coffee, allows for preparing two cups simultaneously.

Steam Nozzle/Milk System Connection: For frothing milk or dispensing hot water.

Milk Container: Included accessory for frothing milk for cappuccinos and lattes.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and accessories. Ensure all parts are present.
2. **Initial Cleaning:** Wash the water tank, drip tray, and coffee grounds container with warm soapy water. Rinse thoroughly and dry.
3. **Fill Water Tank:** Fill the water tank with fresh, cold water up to the MAX level. Place it back into the machine.

4. **Fill Bean Hopper:** Open the lid of the bean hopper and fill it with fresh coffee beans. Close the lid securely.

Recommendation: Use light to medium roasted coffee beans. Avoid dark, oily roasts as they can clog the grinder.

5. **Power Connection:** Plug the appliance into a grounded electrical outlet (120V).

6. **Initial Rinse Cycle:** The machine will prompt you to perform an initial rinse cycle. Follow the instructions on the LCD screen. This primes the system and cleans internal components. Place a container under the coffee spouts during this process.

7. **Water Hardness Setting:** The machine may prompt you to set the water hardness. Refer to your local water supplier for this information or use the provided test strip (if included). This helps optimize descaling intervals.



Front view of the espresso maker, ready for use.

OPERATING INSTRUCTIONS

Turning On/Off

- **To Turn On:** Press the power button. The machine will perform a brief rinse cycle and preheat.

- **To Turn Off:** Press and hold the power button. The machine will perform a final rinse cycle before shutting down.

Adjusting Settings

Use the LCD screen and rotary dial to navigate menus and adjust settings.

- Coffee Intensity:** Select from 3 levels of intensity (e.g., mild, regular, strong) to customize your brew.
- Temperature:** Choose from 3 temperature levels for your beverage.
- Grind Level:** The integrated mill offers 3 grinding levels. Adjust this setting for finer or coarser grounds, depending on your preference and coffee type.

Preparing Beverages

Your machine offers a variety of one-touch and customizable beverages.

¿QUÉ BEBIDAS PUEDO HACER CON ESTA MÁQUINA?

Bebidas a 1 botón

- SHOT / DOBLE ESPRESSO
- SHOT/DOBLE RISTRETTO
- LONG BREWED COFFEE

Bebidas que puedes hacer por tú mismo.

- CAPPUCCINO
- FLAT WHITE
- LATTE MACCHIATO
- ESPRESSO MACCHIATO
- AMERICANO
- DOPPIO

Y mucho más

KRUPS
DELIGHT IN THE DETAILS

Overview of beverages and tips for optimal preparation.

One-Touch Beverages:

- Espresso / Double Espresso:** A concentrated coffee shot.
- Ristretto / Double Ristretto:** A shorter, more concentrated espresso.
- Brewed Coffee / Long Coffee:** A larger volume coffee.

To prepare, select the desired beverage from the LCD menu and press the start button.

Customizable Beverages (Manual Preparation):

For milk-based drinks, use the included milk container or a separate frothing pitcher with the steam nozzle.

- **Cappuccino:** Prepare an espresso shot, then froth milk using the steam function. Combine frothed milk with espresso.
- **Flat White:** Prepare an espresso shot, then steam milk to a velvety texture (less foam than cappuccino). Combine.
- **Latte Macchiato:** Froth milk, then slowly pour an espresso shot through the milk foam.
- **Espresso Macchiato:** Prepare an espresso shot, then add a dollop of milk foam.
- **Americano:** Dispense hot water, then add an espresso shot.
- **Doppio:** A double espresso shot.

Tip for frothing milk: Use cold, fresh milk (semi-skimmed, skimmed, or whole) directly from the refrigerator for best results. Clean and rinse the milk system frequently.

Hot Water Function

Your machine can also dispense hot water for teas or other infusions. Select the hot water option from the menu and place a cup under the steam nozzle.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your espresso machine.

Daily Cleaning

- **Drip Tray:** Empty and rinse the drip tray daily or when the indicator floats up.
- **Coffee Grounds Container:** Empty the coffee grounds container when prompted by the machine or after every 9-10 coffees. Rinse with warm water.
- **Water Tank:** Rinse the water tank daily and refill with fresh water.

Regular Cleaning (Weekly/Bi-weekly)

- **Brew Unit:** The machine has an internal brew unit. Follow the instructions on the LCD screen for any automated cleaning cycles.
- **Milk System:** If you frequently prepare milk-based beverages, clean the milk system (steam nozzle and milk container/tube) after each use or at least daily to prevent milk residue buildup. The machine may have an automatic milk system cleaning cycle.

Descaling

The KRUPS Quattro Force system includes an AutoClean pressure system designed to limit limescale build-up. However, regular descaling is still necessary, especially in areas with hard water.

- The machine will indicate when descaling is required.
- Use a descaling solution recommended by KRUPS.
- Follow the step-by-step instructions on the LCD screen for the automatic descaling program.
- *Recommendation: Perform automatic cleaning using cleaning tablets approximately 3 times a year, as indicated by the machine.*

TROUBLESHOOTING

If you encounter issues with your espresso maker, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty; coffee beans empty; brew unit clogged.	Refill water tank/bean hopper; perform a cleaning cycle.
Coffee is too weak or watery.	Grind setting too coarse; insufficient coffee dose; old beans.	Adjust grind to finer setting; increase coffee intensity; use fresh beans.
Milk not frothing properly.	Milk system clogged; milk not cold/fresh enough; wrong milk type.	Clean milk system thoroughly; use cold, fresh milk; try different milk fat content.
Machine displays a warning message.	Error code, maintenance reminder (e.g., empty grounds, descale).	Refer to the LCD message and follow instructions (e.g., empty grounds, refill water, descale).
Loud noise during grinding.	Foreign object in grinder; beans too oily/hard.	Check bean hopper for foreign objects; try different beans. If problem persists, contact support.

SPECIFICATIONS

Brand: KRUPS

Model Name: EA825511

Color: Red

Coffee Maker Type: Espresso Machine (Super-Automatic)

Special Feature: Programmable

Filter Type: Reusable

Operation Mode: Fully Automatic

Voltage: 120V

Water Tank Capacity: 1.7 Liters

Bean Hopper Capacity: 260 grams

Coffee Grounds Container Capacity: 9 cups

Approximate Product Height: 16 inches (40 cm)



Approximate dimensions of the espresso maker (Height: 16 inches / 40 cm).

Item Weight: 19.36 pounds

Manufacturer: GROUPE SEB

UPC: 010942210733

WARRANTY AND SUPPORT

For warranty information, service, or technical support, please refer to the official KRUPS website or contact their customer service.

Contact Information:

- **KRUPS Official Website:** www.krups.com
- **Contact Page (Mexico):** krups.com.mx/contacto1
- **Service Center (Mexico):** krups.com.mx/centro-de-servicio/
- **Phone (Mexico):** 55 52 83 93 54, 55 52 83 93 55

When contacting support, please have your model number (EA825511) and purchase details ready.

KRUPS®

sólo 4 PASOS

Servicio en garantía o fuera de garantía



CONTACTA

55 52 83 93 54
55 52 83 93 55



LOCALIZA



VALIDA

Recibo o factura
de compra
Garantía fechada
y sellada por
la tienda



APLICA

Continua
disfrutando
del producto
#krupscontigo

The KRUPS Espresso Maker seamlessly integrated into a modern kitchen.