

## Whirlpool WM1211D

# Whirlpool WM1211D Microwave Oven User Manual

Model: WM1211D

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Read all instructions carefully before using the appliance. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- Only qualified service personnel should adjust or repair the oven.
- Ensure proper ventilation around the microwave. Do not block any ventilation openings.
- Do not use corrosive chemicals or vapors in this appliance.
- Always use microwave-safe cookware.

## 2. SETUP AND INSTALLATION

---

### 2.1 Unpacking

Carefully remove the microwave oven from its packaging. Remove all packing materials, including any protective film or tape from the oven surfaces and accessories. Check the oven for any damage, such as dents or a misaligned door. If any damage is observed, do not operate the oven and contact customer service.

### 2.2 Placement

Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate space for ventilation:

- **Minimum 10 cm (4 inches)** clearance on the rear side.
- **Minimum 20 cm (8 inches)** clearance on the top.
- **Minimum 5 cm (2 inches)** clearance on the sides.

Do not place the oven near heat sources such as a conventional oven or radiator. Avoid placing it in areas of high humidity.

## 2.3 Turntable Installation

The turntable and turntable support are essential for proper operation. Ensure they are correctly installed before use.

1. Place the turntable support ring in the center of the oven cavity floor.
2. Place the glass turntable plate on top of the support ring, ensuring it sits securely in the center hub.



**Image Description:** An interior view of the Whirlpool WM1211D Microwave Oven with its door open. The glass turntable plate is visible, resting on its support ring inside the oven cavity. This illustrates the correct placement of the turntable components.

## 2.4 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the

specifications listed on the appliance rating label. Do not use extension cords or adapters.

### 3. OPERATING INSTRUCTIONS

---

#### 3.1 Control Panel Overview

The control panel features a digital display and various buttons for setting cooking times, power levels, and special functions.



**Image Description:** A close-up view of the upper section of the Whirlpool WM1211D Microwave Oven's control panel. It shows the digital time display (10:20) and buttons for 'Reloj' (Clock), 'Bloquear' (Lock), and 'Food Expert' options like 'Carne Molida' (Ground Beef), 'Pasta', 'Arroz' (Rice), 'Pescado' (Fish), 'Vegetales' (Vegetables), and 'Fajitas de Pollo' (Chicken Fajitas).



**Image Description:** A close-up view of the lower section of the Whirlpool WM1211D Microwave Oven's control panel. It displays buttons for 'Palomitas' (Popcorn), 'Papa Cocida' (Cooked Potato), 'Bebidas' (Drinks), and 'Descongelar' (Defrost) options for 'Carne' (Meat), 'Pollo' (Chicken), and 'Comida Preparada' (Prepared Food). Also visible are buttons for 'Potencia' (Power), 'Inicio Programado' (Programmed Start), 'Favorito' (Favorite), '+5 min', '+1 min', '+30 seg', 'Ajustar' (Adjust) arrows, 'Detener/Cancelar' (Stop/Cancel), and 'Inicio' (Start).

### 3.2 Setting the Clock

1. Press the '**Reloj**' (Clock) button.
2. Use the '**Ajustar**' (Adjust) arrow buttons (up/down) to set the current hour.
3. Press '**Reloj**' again.
4. Use the '**Ajustar**' arrow buttons to set the current minute.
5. Press '**Reloj**' one more time to confirm.

### 3.3 Basic Cooking (Time Cook)

1. Place food in a microwave-safe container on the turntable. Close the door.
2. Use the '+5 min', '+1 min', or '+30 seg' buttons to enter the desired cooking time. For example, press '+1 min' three times for 3 minutes.
3. Press the '**Inicio**' (Start) button to begin cooking.

### 3.4 Adjusting Power Level

To cook at a power level lower than 100%:

1. Enter the desired cooking time using the time buttons.
2. Press the '**Potencia**' (Power) button.
3. Use the '**Ajustar**' arrow buttons to select the desired power level (e.g., P-70 for 70% power).
4. Press '**Inicio**' (Start).

### 3.5 Defrosting Options

The microwave offers specific defrosting programs:

- '**Carne**' (Meat)
- '**Pollo**' (Chicken)
- '**Comida Preparada**' (Prepared Food)

To use a defrost program:

1. Place the frozen food in the oven.
2. Press the corresponding defrost button (e.g., '**Carne**').
3. Use the '**Ajustar**' arrow buttons to enter the weight of the food.
4. Press '**Inicio**' (Start). The oven will automatically calculate the defrosting time.

### 3.6 Food Expert Programs

The microwave includes pre-programmed settings for common foods:

- '**Carne Molida**' (Ground Beef)
- '**Pasta**'
- '**Arroz**' (Rice)
- '**Pescado**' (Fish)
- '**Vegetales**' (Vegetables)
- '**Fajitas de Pollo**' (Chicken Fajitas)
- '**Palomitas**' (Popcorn)
- '**Papa Cocida**' (Cooked Potato)
- '**Bebidas**' (Drinks)

To use a Food Expert program:

1. Place the food in the oven.
2. Press the desired Food Expert button (e.g., '**Palomitas**').
3. If prompted, use the '**Ajustar**' arrow buttons to select the quantity or weight.
4. Press '**Inicio**' (Start).

### 3.7 Favorite Button

The '**Favorito**' (Favorite) button allows you to store a frequently used cooking time and power level for one-touch preparation.

1. Set the desired cooking time and power level as you would for manual cooking.

2. Press and hold the **'Favorito'** button until a beep sounds, indicating the setting is saved.
3. To use the saved setting, simply press the **'Favorito'** button once, then press **'Inicio'** (Start).

### 3.8 Child Lock

To activate the child lock, press and hold the **'Bloquear'** (Lock) button for 3 seconds. The display will show an indicator (e.g., 'LOCK' or a key icon). To deactivate, press and hold the **'Bloquear'** button again for 3 seconds.

## 4. MAINTENANCE AND CLEANING

---

Regular cleaning helps maintain the performance and longevity of your microwave oven.

### 4.1 Cleaning the Interior

- Wipe the interior cavity after each use with a damp cloth and mild detergent.
- For stubborn food splatters, place a bowl of water with lemon slices inside and microwave on high for 2-3 minutes. The steam will loosen the residue, making it easier to wipe away.
- Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the interior surfaces.

### 4.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- For stainless steel finishes, use a specialized stainless steel cleaner and polish in the direction of the grain.
- Keep the control panel clean and dry. Wipe with a soft, damp cloth and dry immediately.

### 4.3 Cleaning the Turntable

The glass turntable plate and support ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

## 5. TROUBLESHOOTING

---

If you encounter issues with your microwave oven, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Child lock activated.	Ensure plug is secure; Close door firmly; Check household fuse/breaker; Deactivate child lock.
Food not heating	Incorrect cooking time/power level; Microwave-safe cookware not used.	Adjust time/power; Use appropriate cookware.
Turntable not rotating	Turntable not correctly placed; Debris under turntable.	Ensure turntable and support are correctly seated; Clean under the turntable.
Sparking inside oven	Metal or foil in oven; Damaged oven interior.	Remove all metal objects; Contact service if interior is damaged.

## 6. SPECIFICATIONS

---

Detailed technical specifications for the Whirlpool WM1211D Microwave Oven.

Feature	Specification
Brand	Whirlpool
Model Number	WM1211D
Capacity	1.1 Cubic Feet
Product Dimensions (D x W x H)	41D x 53.9W x 30H Centimeters
Color	Silver
Wattage (Cooking Power)	900 Watts
Voltage	120 Volts
Material Type	Stainless Steel
Inner Material	Stainless Steel
Controller Type	Button
Special Features	Defrost, Shortcut Keys, Turntable
Number of Programs	13 (Cooking Programs)
Item Weight	17.7 Kilograms

## 7. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Whirlpool website. Do not attempt to repair the appliance yourself. For service, contact authorized Whirlpool service centers.