

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool 8MWTW1705CM Washing Machine User Manual](#)

Whirlpool 8MWTW1705CM

Whirlpool 8MWTW1705CM Washing Machine User Manual

Model: 8MWTW1705CM

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential information for the safe and efficient operation of your Whirlpool 8MWTW1705CM washing machine. Please read all instructions carefully before use to prevent damage to the appliance or injury to yourself.

Important Safety Instructions:

- Always unplug the washing machine before cleaning or performing any maintenance.
- Do not operate the washing machine if it is damaged or malfunctioning. Contact an authorized service technician.
- Keep children and pets away from the washing machine during operation.
- Ensure the washing machine is properly grounded to avoid electrical shock.
- Do not wash items that have been soiled with flammable substances.

2. PRODUCT OVERVIEW

The Whirlpool 8MWTW1705CM is a top-load washing machine designed for efficient laundry care. It features a durable steel tub and a convenient glass lid.



Figure 1: Front view of the Whirlpool 8MWTW1705CM washing machine. This image shows the top-load design with a transparent glass lid, control panel, and the overall white finish of the appliance.

Key Features:

- Capacity: 17 kg
- 6 Automatic Cycles: Delicate, Jeans, Towels, Comforters, Xpert Cycle Colored Clothes, Xpert Cycle White Clothes
- 5 Manual Cycles: Soak, Wash Only, Rinse, Spin, Drain
- Automatic Bleach Dispenser
- Automatic Fabric Softener Dispenser
- 2 Control Knobs
- 4 Load Sizes with 'Intelicarga' technology
- 3 Temperature Settings
- Glass Lid
- LED Display with Cycle Status Indicator
- 100% Stainless Steel Basket
- Maximum Spin Speed: 700 RPM

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. It is the customer's responsibility to request product installation through a manufacturer-authorized installer. Please contact Whirlpool to schedule an installation.

Pre-Installation Checklist:

- Ensure the installation area has proper water supply (hot and cold), drainage, and electrical outlets.
- Verify that the floor is level and capable of supporting the weight of the washing machine (68 kg) when full of water and laundry.
- Allow adequate space around the machine for ventilation and access.

Initial Setup Steps (to be performed by authorized installer):

1. **Unpacking:** Remove all packaging materials, including the shipping bolts at the back of the machine.
2. **Leveling:** Adjust the leveling feet to ensure the machine is stable and balanced. This prevents excessive vibration during operation.
3. **Water Connection:** Connect the hot and cold water inlet hoses to the corresponding valves and to the machine. Ensure connections are tight to prevent leaks.
4. **Drain Hose:** Securely attach the drain hose to a standpipe or laundry tub, ensuring it is properly positioned to prevent siphoning.
5. **Electrical Connection:** Plug the power cord into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

Follow these steps for optimal washing performance.

Loading Laundry:

- Sort laundry by fabric type, color, and soil level.
- Open the glass lid and load items loosely around the agitator. Do not overload the machine.
- For best results, use the 'Intelicarga' feature to automatically detect the optimal water level for your load size.

Adding Detergent and Additives:

- Add the recommended amount of detergent directly into the wash basket before adding clothes, or follow detergent manufacturer instructions.
- Pour liquid bleach into the automatic bleach dispenser.
- Pour liquid fabric softener into the automatic fabric softener dispenser.

Selecting a Cycle:

1. **Power On:** Press the Power button (if applicable) or turn the main control knob to activate the machine.
2. **Select Cycle:** Use the cycle selector knob to choose one of the 6 automatic cycles (Delicate, Jeans, Towels, Comforters, Xpert Cycle Colored Clothes, Xpert Cycle White Clothes) or one of the 5 manual

cycles (Soak, Wash Only, Rinse, Spin, Drain).

3. **Select Temperature:** Use the temperature control knob to select one of the 3 available water temperatures.
 4. **Select Load Size:** If not using 'Intelicarga', manually select one of the 4 load sizes.
 5. **Start Cycle:** Press the Start/Pause button to begin the wash cycle. The LED display will show the cycle status.
-

5. MAINTENANCE AND CARE

Regular maintenance helps ensure your washing machine operates efficiently and extends its lifespan.

Cleaning the Exterior:

- Wipe the exterior surfaces with a soft, damp cloth and mild soap.
- Avoid abrasive cleaners or solvents that could damage the finish.

Cleaning the Dispensers:

- Periodically remove and clean the bleach and fabric softener dispensers to prevent residue buildup. Rinse thoroughly with warm water.

Cleaning the Wash Tub:

- Run a 'Clean Washer' cycle (if available) or a hot water wash cycle with a washing machine cleaner or a cup of white vinegar to remove detergent residue and odors.

Water Inlet Hoses:

- Inspect water inlet hoses periodically for cracks, bulges, or leaks. Replace hoses every five years, or sooner if wear is visible.
-

6. TROUBLESHOOTING

Before contacting service, try these solutions for common issues.

Washing Machine Does Not Start:

- Ensure the power cord is securely plugged into a working outlet.
- Check if the circuit breaker has tripped.
- Make sure the lid is fully closed. The machine will not operate if the lid is open.
- Verify that a cycle has been selected and the Start/Pause button has been pressed.

Machine Does Not Fill with Water:

- Check if the water supply faucets (hot and cold) are fully open.
- Inspect the water inlet hoses for kinks or blockages.
- Ensure the water pressure is adequate.

Machine Does Not Drain or Spin:

- Check the drain hose for kinks or blockages.
- Ensure the drain hose is not inserted too far into the standpipe, which can cause siphoning.
- Distribute the laundry evenly in the tub to prevent an unbalanced load, which can stop the spin cycle.

Excessive Vibration or Noise:

- Ensure the washing machine is level. Adjust the leveling feet if necessary.
- Verify that all shipping bolts have been removed from the back of the machine.
- Redistribute the laundry inside the tub to balance the load.

7. SPECIFICATIONS

Technical details for the Whirlpool 8MWTW1705CM washing machine.

Feature	Specification
Brand	Whirlpool
Model Number	8MWTW1705CM
Color	White
Product Dimensions (W x D x H)	67 x 67 x 111 cm
Product Weight	68 kg
Access Location	Top Load
Maximum Spin Speed	700 RPM
Capacity	17 kg
Tub Material	100% Stainless Steel
UPC	883049324920

8. WARRANTY AND SUPPORT

For warranty information, service requests, or technical support, please contact Whirlpool customer service directly. It is the customer's responsibility to request product installation through a manufacturer-authorized installer. Please contact the manufacturer to schedule an installation.

Keep your purchase receipt and this manual for future reference.