

Indesit ITW D 61252 W

Indesit ITW D 61252 W (EU) Top-Loading Washing Machine

User Manual

INTRODUCTION

This manual provides essential information for the correct installation, safe use, and maintenance of your Indesit ITW D 61252 W (EU) top-loading washing machine. Please read these instructions carefully before using the appliance and keep them for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Ensure the appliance is properly grounded.
- Do not allow children to play with the appliance.
- Do not touch the appliance with wet hands or feet.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not open the detergent dispenser while the machine is operating.
- Do not force the lid open during a cycle.

SETUP

Unpacking

Carefully remove all packaging materials. Check the appliance for any damage during transit. The washing machine weighs approximately 62 kg and measures 40 cm (width) x 60 cm (depth) x 90 cm (height). It is recommended to have two people for unpacking and positioning.



Image: Indesit ITW D 61252 W (EU) top-loading washing machine. This image shows the overall design of the appliance with its top-loading access.

Installation

1. **Positioning:** Place the washing machine on a flat, stable surface. Ensure there is adequate space around the appliance for ventilation and access.
2. **Leveling:** Adjust the feet of the washing machine to ensure it is perfectly level. This prevents excessive vibration and noise during operation. Use a spirit level to verify.

3. **Water Connection:** Connect the water inlet hose to a cold water tap. Ensure the connections are tight to prevent leaks.
4. **Drainage:** Position the drain hose into a suitable drain pipe or sink, ensuring it is securely fixed and not kinked. The end of the drain hose should be between 65 cm and 100 cm from the floor.
5. **Electrical Connection:** Plug the power cord into a grounded electrical outlet. Do not use extension cords or adapters.

First Use

Before washing laundry for the first time, run a short wash cycle without any laundry and with a small amount of detergent to clean the drum and remove any manufacturing residues.

OPERATING INSTRUCTIONS

Loading Laundry

Open the top lid and the drum flaps. Load laundry into the drum, ensuring not to exceed the maximum load capacity of 6 kg. Distribute the laundry evenly to maintain balance during the spin cycle. Close the drum flaps and the top lid securely.

Adding Detergent

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent and fabric softener to the designated compartments according to the detergent manufacturer's instructions and the selected wash program. Close the dispenser drawer.

Selecting a Program

Turn the program selector knob to choose one of the 18 available wash programs. Common programs include Cotton, Synthetics, Delicates, Wool, and Quick Wash. Refer to the control panel for specific program details and recommended temperatures.

Starting a Cycle

Press the Start/Pause button to begin the selected wash cycle. The machine will automatically fill with water and start the washing process.

Ending a Cycle

At the end of the cycle, the machine will signal completion. Open the top lid and remove your laundry promptly to prevent creasing and odors. Unplug the appliance from the power outlet when not in use.

MAINTENANCE

Cleaning the Detergent Dispenser

Regularly clean the detergent dispenser to prevent residue buildup. Remove the dispenser drawer and rinse it under running water. Use a brush to remove stubborn deposits. Reinsert the drawer.

Cleaning the Filter

Locate the drain pump filter, usually at the bottom front of the machine. Place a shallow container underneath to catch any residual water. Unscrew the filter cover and carefully remove any lint, coins, or

foreign objects. Clean the filter under running water and screw it back in securely.

Cleaning the Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the surface.

Winter Storage

If the appliance is to be stored in an unheated area during winter, ensure all water is drained from the hoses and pump to prevent freezing and damage. Disconnect the water inlet hose and drain the remaining water. Run a drain cycle if possible.

TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; lid not closed; program not selected.	Check power connection; ensure lid is closed; select a program and press Start.
Water not filling	Water tap closed; inlet hose kinked; water supply interrupted.	Open water tap; straighten hose; check household water supply.
Water not draining	Drain hose kinked or blocked; drain pump filter clogged.	Straighten drain hose; clean drain pump filter.
Excessive vibration/noise	Machine not level; laundry unevenly distributed; transport bolts not removed.	Level the machine; redistribute laundry; ensure transport bolts are removed (during installation).

If the problem persists or an error code appears on the display, consult the full service manual or contact customer support.

SPECIFICATIONS

Model: ITW D 61252 W (EU)

Type: Top-Loading Washing Machine

Capacity: 6 kg

Maximum Spin Speed: 1200 RPM

Energy Efficiency Class: A++

Annual Energy Consumption: 173 kWh

Annual Water Consumption: 8926 L

Dimensions (W x D x H): 40 cm x 60 cm x 90 cm

Weight: 62 kg

Noise Level (Wash): 59 dB

Number of Programs: 18

Color: White

WARRANTY AND SUPPORT

Your Indesit ITW D 61252 W (EU) washing machine comes with a manufacturer's warranty. Please refer to the warranty card provided with your appliance for details on coverage and terms. For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support. Contact information can typically be found on the Indesit official website or in the documentation supplied with your product.