

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Our Generation](#) /
- › [Our Generation Suite Teepee User Manual](#)

### Our Generation Suite Teepee

# Our Generation Suite Teepee User Manual

Model: Suite Teepee

## INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of the Our Generation Suite Teepee. Designed as a charming play tent for Our Generation dolls and children, this teepee offers a delightful space for imaginative play, indoor camping, and cozy relaxation. Please read these instructions carefully before setup and use to ensure proper enjoyment and longevity of your product.



Figure 1: Assembled Our Generation Suite Teepee with its entrance open.

## SETUP INSTRUCTIONS

The Our Generation Suite Teepee is designed for easy assembly. Follow these steps to set up your teepee:

- 1. Unpack Components:** Carefully remove all components from the packaging. You should find the fabric teepee cover, several wooden poles, and a light-up chandelier accessory.
- 2. Assemble Poles:** Gather the wooden poles. These poles are designed to interlock or be tied together at the top to form the teepee's frame. Ensure they are securely fastened at the apex.
- 3. Attach Fabric Cover:** Drape the fabric teepee cover over the assembled pole frame. The bottom edges of the fabric should align with the base of the poles.
- 4. Secure Base:** The teepee features a green floor. Ensure the fabric is spread evenly and the base is stable. The poles may not "click" into place, but should be positioned to create a stable structure.
- 5. Position Entrance:** The teepee has an entrance with tie-back straps. Adjust the fabric to create the desired opening.



Figure 2: Teepee with its entrance flaps tied back, revealing the interior.

## OPERATING INSTRUCTIONS

The Our Generation Suite Teepee enhances imaginative play with its features and accessories.

### Light-Up Chandelier

- **Battery Installation:** The included chandelier requires 3 AA batteries (not included). Locate the battery compartment, insert the batteries according to polarity markings, and secure the cover.
- **Placement:** Hang the chandelier inside the teepee from the apex.
- **Activation:** Use the switch on the chandelier to turn the lights on or off. The lights provide a soft glow, perfect for creating a cozy atmosphere.



Figure 3: The battery-operated light-up chandelier accessory.



Figure 4: The teepee interior illuminated by the chandelier, with a doll resting inside.

## Teepee Usage

- **Doll Play:** The teepee is sized to comfortably accommodate Our Generation dolls, allowing for various play scenarios such as indoor camping or sleepovers.
- **Child Interaction:** The teepee is also suitable for children to sit or curl up inside, providing a personal play space.
- **Entrance Ties:** The entrance flaps can be tied back to keep the teepee open or left closed for privacy during play.

## Included Accessories

The Suite Teepee set includes several miniature accessories to enhance play:

- Miniature Guitar
- Camper's Guide Book (blank pages for imaginative journaling)
- Canteen with strap
- Compass
- Camp Skillet with miniature eggs, sausage, and spatula
- Firefly in a Jar

## MAINTENANCE AND CARE

Proper care will ensure the longevity of your Our Generation Suite Teepee.

- **Fabric Cleaning:** The polyester teepee cover can be spot cleaned with a damp cloth and mild soap. Allow to air dry completely. Do not machine wash or tumble dry, as this may damage the fabric or structure.
- **Pole Care:** Inspect wooden poles periodically for any signs of wear or damage. Clean with a dry cloth.
- **Storage:** When not in use, the teepee can be disassembled for compact storage. Store all components in a dry, cool place away from direct sunlight.
- **General Handling:** While durable, avoid excessive force or rough handling, especially with the poles, to prevent damage.

## TROUBLESHOOTING

- **Teepee Stability Issues:** If the teepee feels unstable, ensure all wooden poles are properly positioned and securely tied at the top. Adjust the spread of the poles at the base to create a wider, more stable footprint.
- **Chandelier Lights Not Working:**
  - a. Check if the batteries are correctly installed with the correct polarity.
  - b. Replace old batteries with new AA batteries.
  - c. Ensure the power switch on the chandelier is in the "ON" position.
- **Poles Detaching:** If poles frequently come out of their connections, ensure they are firmly inserted or tied. Gentle handling during play can help maintain the structure's integrity.

## SPECIFICATIONS

<b>Brand</b>	Our Generation
<b>Manufacturer</b>	Battat
<b>Model Name</b>	Suite Teepee
<b>Product ASIN</b>	B00TTKZEC6
<b>Packaged Dimensions</b>	6 x 26.5 x 12.5 inches
<b>Item Weight</b>	2.44 pounds
<b>Recommended Age</b>	3 months - 10 years
<b>Battery Requirement</b>	3 AA batteries (for chandelier, not included)
<b>Materials</b>	Polyester fabric cover, wooden poles

## WARRANTY INFORMATION

Specific warranty details for the Our Generation Suite Teepee are not provided in the product information. For inquiries regarding warranty coverage, please retain your proof of purchase and contact the

manufacturer directly. General consumer rights apply.

## **CUSTOMER SUPPORT**

---

Should you require assistance with assembly, parts, or have any questions regarding your Our Generation Suite Teepee, please contact Battat customer service. Contact information can typically be found on the product packaging or the official Battat/Our Generation website.