

[Manuals.plus](#) /

› [Sony](#) /

› Sony SRSX11 Ultra-Portable Bluetooth Speaker User Manual

Sony SRSX11

Sony SRSX11 Ultra-Portable Bluetooth Speaker User Manual

Model: SRSX11

1. PRODUCT OVERVIEW

The Sony SRSX11 is an ultra-portable Bluetooth speaker designed to deliver powerful sound in a compact form factor. It features easy connectivity options including Bluetooth and NFC, allowing for wireless audio streaming and hands-free calling. With up to 12 hours of battery life, it is suitable for extended use. The speaker also supports a 'Speaker Add' function for enhanced stereo sound by pairing with a second unit.



Figure 1: Front view of the Sony SRSX11 Ultra-Portable Bluetooth Speaker (Red).

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- Sony SRSX11 Ultra-Portable Bluetooth Speaker
- Micro USB Cable for charging
- Silicon Accessory Strap
- Operating Instructions (this manual)



Figure 2: Sony SRSX11 speaker with the included silicon accessory strap.

3. PRODUCT FEATURES

- **10 Watts of Digital Amplification:** Delivers robust audio performance.
- **Single Speaker with Dual Passive Radiators:** Enhances bass response for a fuller sound.
- **Speaker Add Function:** Allows pairing two SRSX11 units for stereo or double mode audio.
- **Bluetooth Audio Streaming:** Supports SBC for wireless music playback.
- **One-touch Listening (NFC):** Simplifies Bluetooth pairing with compatible devices.
- **Long Battery Life:** Up to 12 hours of continuous playback on a single charge.
- **Speakerphone Functionality:** Integrated microphone for hands-free calls.
- **Micro USB Charging:** Convenient charging via a standard micro USB input.

4. SETUP

4.1 Charging the Speaker

1. Connect the supplied micro USB cable to the DC IN 5V port on the speaker.
2. Connect the other end of the USB cable to a USB AC adapter (not supplied) or a powered USB port on a computer.
3. The CHARGE indicator will light up during charging and turn off when charging is complete.

4.2 Powering On/Off

- To power on, press and hold the **POWER** button until the indicator lights up.
- To power off, press and hold the **POWER** button again until the indicator turns off.

4.3 Bluetooth Pairing

Pair your speaker with a Bluetooth-enabled device (e.g., smartphone, tablet, laptop).

1. Turn on the speaker. The **Bluetooth** indicator will flash rapidly.
2. On your device, enable Bluetooth and search for available devices.
3. Select "SRSX11" from the list of devices.
4. Once connected, the **Bluetooth** indicator will stop flashing and remain lit.

NFC One-touch Pairing

For NFC-compatible devices:

1. Ensure NFC is enabled on your device.
2. Touch your NFC-compatible device to the **N-Mark** on the speaker.
3. Follow the on-screen prompts on your device to complete pairing.



Figure 3: Top controls of the Sony SRSX11 speaker, including NFC touchpoint (image shows black model for illustration).

4.4 Speaker Add Function (Stereo/Double Mode)

To use two SRSX11 speakers together:

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (Speaker A), press the **ADD** button. The **ADD** indicator will flash.
3. On the second speaker (Speaker B), press the **ADD** button. The **ADD** indicator will flash.
4. Once connected, the **ADD** indicators on both speakers will light up. Speaker A will be the left channel and Speaker B the right channel for stereo mode.
5. To switch to Double mode (both speakers play full range audio), press the **ADD** button on either speaker again.
6. Connect your Bluetooth device to Speaker A.



Figure 4: Two SRSX11 speakers configured for stereo playback.

5. OPERATING INSTRUCTIONS

5.1 Playing Music

- After successful Bluetooth pairing, start music playback on your connected device.
- Audio will stream wirelessly to the SRSX11 speaker.
- Alternatively, connect an audio device using a 3.5mm stereo mini cable to the **AUDIO IN** port.

5.2 Adjusting Volume

- Press the **+** button to increase volume.
- Press the **-** button to decrease volume.
- You can also adjust the volume directly from your connected Bluetooth device.

5.3 Handling Phone Calls

- When a call comes in, music playback will pause.
- Press the **CALL** button to answer the call.
- Speak into the speaker's built-in microphone.
- Press the **CALL** button again to end the call.

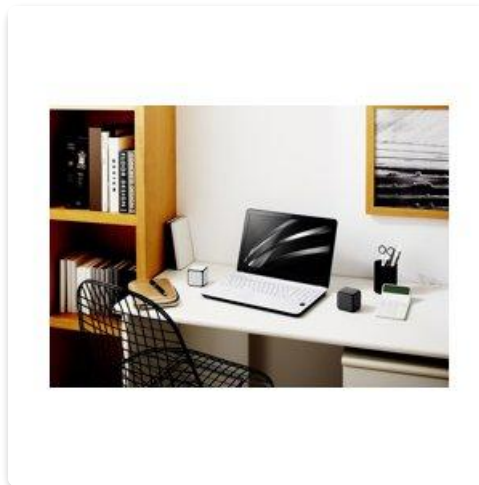


Figure 5: The SRSX11 speaker wirelessly connected to a smartphone.

6. MAINTENANCE

6.1 Cleaning

- Wipe the speaker with a soft, dry cloth.
- Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzene.

6.2 Battery Care

- Charge the battery fully before first use.
- To preserve battery life, charge the speaker at least once every six months if not in regular use.
- Avoid exposing the speaker to extreme temperatures.

6.3 Storage

- Store the speaker in a cool, dry place away from direct sunlight and moisture.

7. TROUBLESHOOTING

7.1 No Power

- Ensure the speaker is charged. Connect it to a power source using the micro USB cable.
- Press and hold the **POWER** button for a few seconds to ensure it's properly turned on.

7.2 Cannot Pair via Bluetooth

- Make sure the speaker is in pairing mode (Bluetooth indicator flashing rapidly).
- Ensure your device's Bluetooth is enabled and within 10 meters (33 feet) of the speaker.
- If previously paired, try deleting "SRSX11" from your device's Bluetooth list and re-pairing.
- Try resetting the speaker (see 7.4 Resetting the Speaker).

7.3 No Sound or Low Volume

- Increase the volume on both the speaker and your connected device.
- Ensure the speaker is properly connected via Bluetooth or the AUDIO IN cable.
- Check if the audio source on your device is playing.

7.4 Resetting the Speaker

If the speaker is not operating correctly, you can perform a reset:

- Locate the **RESET** button (usually a small pinhole) on the back of the speaker.
- Use a thin object (like a paperclip) to press and hold the **RESET** button for a few seconds.
- The speaker will restart, and settings will return to default.

8. SPECIFICATIONS

Feature	Specification
Brand	Sony
Model Number	SRSX11
Speaker Maximum Output Power	10 Watts
Connectivity Technology	Bluetooth, NFC, USB
Audio Output Mode	Stereo
Battery Average Life	12 Hours
Control Method	Touch
Bluetooth Range	10 Meters
Signal-to-Noise Ratio	70 dB
Item Dimensions (D x W x H)	2.4"D x 2.4"W x 2.4"H
Item Weight	7.6 Ounces
Power Source	Battery & AC
Compatible Devices	Laptop, Smartphone, Tablet

9. WARRANTY INFORMATION

This Sony SRSX11 Ultra-Portable Bluetooth Speaker comes with a Limited Warranty. Please refer to the separate warranty document included with your purchase for detailed terms and conditions, including coverage period and claim procedures. Keep your proof of purchase for warranty service.

10. SUPPORT

For further assistance, technical support, or service inquiries, please contact Sony customer support. You can find contact information on the official Sony website or in the support section of your product registration.

- **Online Support:** Visit the official Sony support website for FAQs, drivers, and software updates.
- **Telephone Support:** Refer to your product packaging or the Sony website for regional contact numbers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question