



Manuals.plus /

› IMC Toys /

› IMC Toys 16316 Frozen Skating Princess Remote Control Doll User Manual

## IMC Toys 16316

# IMC Toys Frozen Skating Princess Remote Control Doll User Manual

Model: 16316

## 1. INTRODUCTION

---

The IMC Toys Frozen Skating Princess is a remote-controlled musical doll designed for interactive play. This doll, inspired by the beloved character Elsa, can skate forward, rotate on herself, and sing. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new toy.

## 2. SAFETY INFORMATION

---

**WARNING: Not suitable for children under 3 years due to small parts and potential choking hazards.**

- Always supervise children during play.
- Keep the doll and remote control away from water and excessive moisture.
- Do not attempt to disassemble or modify the product.
- Use only the specified battery type and ensure correct polarity.

## 3. PACKAGE CONTENTS

---

Carefully unpack all items from the box. Ensure all components listed below are present:

- 1 x Frozen Skating Princess Doll (Elsa)
- 1 x Remote Control



Figure 3.1: Product and remote control as packaged.

## 4. SETUP

### 4.1 Battery Installation

The doll and remote control require batteries (not included).

1. **Doll:** Locate the battery compartment on the back or base of the doll. Use a screwdriver to open the cover. Insert 5 x AAA batteries, ensuring correct polarity (+/-). Close the cover and secure with the screw.
2. **Remote Control:** Locate the battery compartment on the back of the remote control. Use a screwdriver to open the cover. Insert 2 x AAA batteries, ensuring correct polarity (+/-). Close the cover and secure with the screw.

### 4.2 Initial Pairing

The doll and remote control are pre-paired at the factory. Simply ensure both have fresh batteries installed and are powered on for immediate use.



Figure 4.1: Doll and remote control ready for use.

## 5. OPERATING INSTRUCTIONS

---

The remote control allows you to guide the Frozen Skating Princess doll's movements and activate her singing function.

### 5.1 Basic Movement

Use the remote control to make the doll skate and spin:

- **Forward Movement:** Press the "GO" button on the remote control to make the doll skate forward.
- **Spin/Turn:** Press the "TURN!" button to make the doll rotate on herself.

### 5.2 Singing Function

The doll sings when the button on her chest is pressed. The doll sings in multiple languages including French, English, Italian, Spanish, and German.



Figure 5.1: Child interacting with the doll.

## 6. MAINTENANCE

---

### 6.1 Cleaning

To clean the doll and remote control, wipe them gently with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid getting water into any electronic components.

### 6.2 Battery Care

To prolong battery life and prevent damage:

- Remove batteries if the toy will not be used for an extended period.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

## 7. TROUBLESHOOTING

---

If you encounter issues with your Frozen Skating Princess doll, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Doll does not move or respond to remote.	Low or dead batteries in doll or remote.	Replace batteries in both the doll and the remote control. Ensure correct polarity.
Doll moves erratically.	Interference or low battery.	Move to an area with less electronic interference. Replace batteries.
Doll does not sing.	Low or dead batteries in doll. Button not pressed correctly.	Replace doll batteries. Ensure the chest button is fully pressed.
Remote control indicator light is off.	Low or dead batteries in remote.	Replace remote control batteries.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	16316
Product Dimensions	29.2 x 21 x 40 cm
Product Weight	1.3 kg
Recommended Age	3 years and up
Doll Battery Type	5 x AAA (not included)
Remote Control Battery Type	2 x AAA (estimated, not included)
Remote Control Type	Radio Control
Number of Pieces	2 (Doll, Remote Control)
Material Composition	29.72% ABS - 53.28% PVC - 0.66% Pom - 11.71% electronic - 4.63% metal
Languages (Singing)	French, English, Italian, Spanish, German

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official IMC Toys website. Keep your purchase receipt as proof of purchase.