

## Electrolux EOQ2400BOX

# Electrolux EOQ2400BOX Multifunction Catalytic Oven User Manual

## 1. INTRODUCTION

---

Thank you for choosing the Electrolux EOQ2400BOX Multifunction Catalytic Oven. This manual provides essential information for the safe and efficient use, installation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before using the oven and keep them for future reference.

## 2. SAFETY INFORMATION

---

Your safety and the safety of others are paramount. Please observe all safety precautions outlined in this manual.

- Ensure the oven is installed by a qualified professional in accordance with local regulations.
- Do not allow children to operate or play near the oven.
- Always use oven mitts when handling hot dishes or oven components.
- Do not store flammable materials in or near the oven.
- Disconnect the appliance from the power supply before any cleaning or maintenance.
- Ensure adequate ventilation around the oven during operation.

## 3. PRODUCT OVERVIEW

---

The Electrolux EOQ2400BOX is a 57-liter multifunction electric oven designed for efficient cooking. It features a catalytic cleaning system, an energy efficiency class A rating, and a ventilated door with two glass panels for improved safety and insulation. The oven offers a temperature range of 50°C to 250°C. Its control panel includes an LED display and rotary knobs for easy operation, and the anti-fingerprint stainless steel finish ensures a sleek appearance.

## 4. SETUP AND INSTALLATION

---

Proper installation is crucial for the safe and optimal performance of your oven. It is strongly recommended that installation be carried out by a qualified technician.

### 4.1 Unpacking

Carefully remove all packaging materials. Inspect the oven for any signs of damage. If damage is found, do not install the appliance and contact your retailer.

### 4.2 Electrical Connection

Ensure the electrical supply matches the voltage and frequency specified on the rating plate. The oven must be correctly earthed. Do not use adapters, multiple sockets, or extension cables.

### 4.3 Positioning and Ventilation

Install the oven into a suitable cabinet opening, ensuring adequate space for ventilation as per the installation diagram. Do not obstruct ventilation openings.

### 4.4 Initial Cleaning

Before first use, clean the oven interior and accessories with warm water and a mild detergent. Rinse thoroughly and dry.

## 5. OPERATING INSTRUCTIONS

---

Familiarize yourself with the oven's controls before first use.

### 5.1 Control Panel

The oven features an LED display for time and temperature, and rotary knobs for selecting cooking functions and setting the temperature.

### 5.2 Setting the Time

Upon initial power-up or after a power cut, the display will flash. Use the appropriate knob or buttons (refer to the specific symbols on your oven) to set the current time.

### 5.3 Selecting a Cooking Function

Turn the function selector knob to choose the desired cooking mode (e.g., conventional heat, fan cooking, grill). The selected function will typically be indicated on the display.

### 5.4 Setting the Temperature

Once a function is selected, turn the temperature selector knob to set the desired cooking temperature between 50°C and 250°C. The oven will begin to heat up.

### 5.5 Initial Use (Burn-in)

Before cooking food for the first time, heat the empty oven for approximately 30-60 minutes at maximum temperature (250°C) using a conventional heating function. This helps to burn off any manufacturing residues and odors. Ensure the kitchen is well-ventilated during this process.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Electrolux oven.

### 6.1 Catalytic Cleaning

Your oven is equipped with catalytic liners that absorb grease and food residues. During cooking, especially at higher temperatures, these liners oxidize and break down the deposits. For effective cleaning, occasionally run the oven at its maximum temperature for about an hour after cooking. The catalytic surfaces should not be cleaned with abrasive detergents or brushes, as this can damage them. Simply wipe with a damp cloth once cooled.



Image: Close-up view of the catalytic oven lining, characterized by its textured, dark grey surface, designed for self-cleaning.

### 6.2 Removable Door and Glass Panels

The oven door and its inner glass panels are designed to be removable for thorough cleaning. To remove the door, open it fully, then locate and lift the hinges' locking levers. Close the door partially until the levers engage, then lift the door upwards and outwards. To remove the glass panels, follow the specific instructions in your full manual, usually involving clips or screws. Clean the glass with a non-abrasive glass cleaner. Ensure all parts are dry before reassembling.



Image: The oven door with its internal glass panels detached and laid out, alongside a cleaning cloth, illustrating the ease of access for cleaning.

### 6.3 General Cleaning

- **Exterior:** Clean the exterior surfaces with a soft cloth and warm soapy water. For stainless steel, use a specialized stainless steel cleaner to prevent streaks and fingerprints.
- **Interior (non-catalytic areas):** For areas without catalytic lining, use a mild oven cleaner or warm soapy water. Avoid abrasive cleaners or scourers that can scratch surfaces.
- **Accessories:** Wash oven racks, trays, and other accessories in warm soapy water or in a dishwasher.

## 7. TROUBLESHOOTING

If you encounter issues with your oven, refer to the table below for common problems and solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; incorrect settings.	Check circuit breaker/fuse. Ensure function and temperature are correctly set.
Oven smokes excessively during initial use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. The smoke should subside after the initial burn-in period.

Problem	Possible Cause	Solution
Oven door feels hot during operation.	Normal operation for a ventilated 2-glass door; not a 'cold door' feature.	The oven has a ventilated 2-glass door, which reduces external temperature but does not make it 'cold'. Exercise caution, especially with children.
Difficulty setting the time.	Unfamiliarity with controls; power interruption.	Refer to the 'Setting the Time' section in this manual or the full product manual for detailed steps.
Food not cooking evenly.	Incorrect rack position; overloaded oven; door opened too frequently.	Use recommended rack positions. Avoid overcrowding. Minimize opening the door during cooking.

## 8. SPECIFICATIONS

Key technical specifications for the Electrolux EOQ2400BOX oven:

Specification	Value
Brand	Electrolux
Model Name	EOQ2400BOX
Heating Method	Convection
Fuel Type	Electric
Power / Wattage	2725 Watts
Item Weight	33.1 Kilograms
Capacity	57 Liters
Oven Cooking Mode	Convection
Manufacturer Part Number	7332543356157
ASIN	B00U14C7RO

## 9. WARRANTY AND SUPPORT

For information regarding your product's warranty, please refer to the warranty card included with your purchase or visit the official Electrolux website. For technical assistance, spare parts, or service requests, please contact Electrolux customer support. Have your model number (EOQ2400BOX) and serial number ready when contacting support.

## 10. DISPOSAL

Do not dispose of this product with household waste. This appliance contains recyclable materials. Please take it to a local collection point for electrical and electronic equipment recycling. By ensuring this product is

disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.