

[Manuals.plus](#) /

› [Fiskars](#) /

› Fiskars Functional Form Universal Scissors 1019198 Instruction Manual

Fiskars 1019198

Fiskars Functional Form Universal Scissors 1019198 Instruction Manual

Model: 1019198 | Brand: Fiskars

1. INTRODUCTION

Thank you for choosing Fiskars Functional Form Universal Scissors. This manual provides essential information for the safe and effective use, maintenance, and care of your new scissors. Please read these instructions carefully before first use and retain them for future reference.



Image 1.1: Fiskars Functional Form Universal Scissors in Black.

2. PRODUCT OVERVIEW AND KEY FEATURES

The Fiskars Functional Form Universal Scissors are designed for versatile cutting tasks, offering comfort and precision.

Key Features:

- **Universal Design:** Suitable for cutting multiple layers of various materials.
- **Ergonomic Handles:** Comfortable grip and firm hold, designed for right-handed users and hands of different sizes.
- **High-Quality Blades:** Long stainless steel blades ensure fast and clean cutting.
- **Adjustable Blade Tension:** Allows for effortless cutting through various materials.
- **Durable Construction:** Made from quality steel and synthetic material for high durability.
- **Easy Maintenance:** Dishwasher safe for convenient cleaning.
- **Finnish Craftsmanship:** Proudly made in Finland.



Functional Form

Large universal scissors
Universalschere groß
Ciseaux Universels
larges

25cm



Image 2.1: Packaging of Fiskars Functional Form Universal Scissors, highlighting key features.



Made in Finland

Image 2.2: Indication of product origin: Made in Finland.

3. SETUP AND INITIAL USE

Unpacking:

1. Carefully remove the scissors from their packaging.
2. Inspect the scissors for any signs of damage. If damaged, do not use and contact customer support.

First Use:

The scissors are designed for immediate use. Ensure a comfortable grip before beginning any cutting task.

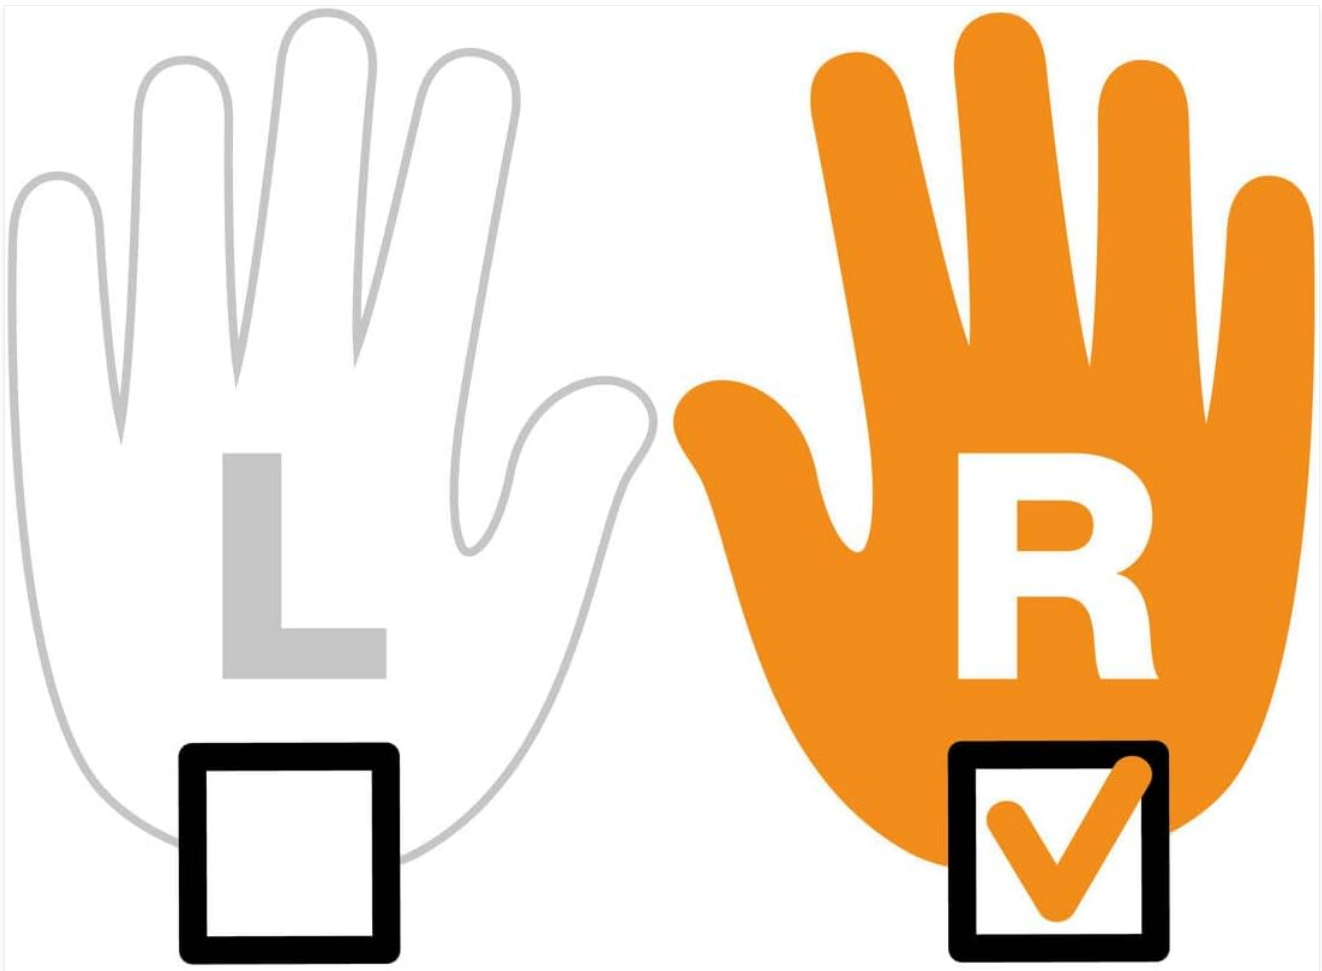


Image 3.1: The scissors are designed for right-handed use.

4. OPERATING INSTRUCTIONS

General Cutting:

1. Hold the scissors firmly with your dominant hand, placing your thumb in the smaller loop and your fingers in the larger loop.
2. Position the material to be cut between the blades.
3. Apply steady pressure and close the blades to make a cut. For best results, use the full length of the blade when possible.



Image 4.1: Close-up view of the sharp stainless steel blades.

Cutting Multiple Layers:

These universal scissors are designed to cut through several layers of different materials. For thicker materials or multiple layers, ensure the blade tension is appropriately adjusted.

Adjustable Blade Tension:

The scissors feature an adjustable pivot screw (often orange) that allows you to fine-tune the blade tension. To adjust, use a suitable tool (e.g., a coin or screwdriver, depending on the screw type) to slightly tighten or loosen the screw. Adjusting the tension can improve cutting performance on different material thicknesses.



Image 4.2: Scissors in use for general household tasks, demonstrating versatility.



Image 4.3: A user demonstrating the comfortable grip while cutting.

Your browser does not support the video tag.

Video 4.1: A demonstration of Fiskars scissors, highlighting their smooth cutting action and ergonomic design. This video is provided by a seller.

5. MAINTENANCE AND CARE

Cleaning:

The Fiskars Functional Form Universal Scissors are designed for easy cleaning. They are dishwasher safe, allowing for thorough sanitization. For manual cleaning, wash with warm soapy water and dry immediately to prevent water spots or corrosion.

Storage:

Store the scissors in a dry place, preferably with the blades closed, to protect the cutting edge and prevent accidental injury. Keep out of reach of children.

6. TROUBLESHOOTING

If you encounter issues with your Fiskars scissors, consider the following:

- **Blades not cutting smoothly:** Check the adjustable blade tension screw. A slight tightening may improve performance. Ensure blades are clean and free of debris.
- **Difficulty cutting thick materials:** Verify blade tension is appropriate. For extremely thick or hard materials, these universal scissors may not be suitable; consider specialized cutting tools.
- **Rust or discoloration:** Although made of quality steel, prolonged exposure to moisture can cause issues. Ensure scissors are thoroughly dried after washing.

7. SPECIFICATIONS

Detailed specifications for the Fiskars Functional Form Universal Scissors (Model 1019198):

Attribute	Detail
Model Number	1019198 (GTIN: 06411509961657)
Brand	Fiskars
Color	Black
Total Length	24 cm (9.84 inches)
Blade Length	12 cm
Item Weight	135 g (5.3 ounces)
Blade Material	Quality Steel (Stainless Steel)
Handle Material	Synthetic Material
Blade Edge	Straight
Point Style	Pointed
Hand Orientation	Right Hand
Dishwasher Safe	Yes
Manufacturer	Fiskars



Image 7.1: Dimensional diagram of the scissors, showing total length and handle height.

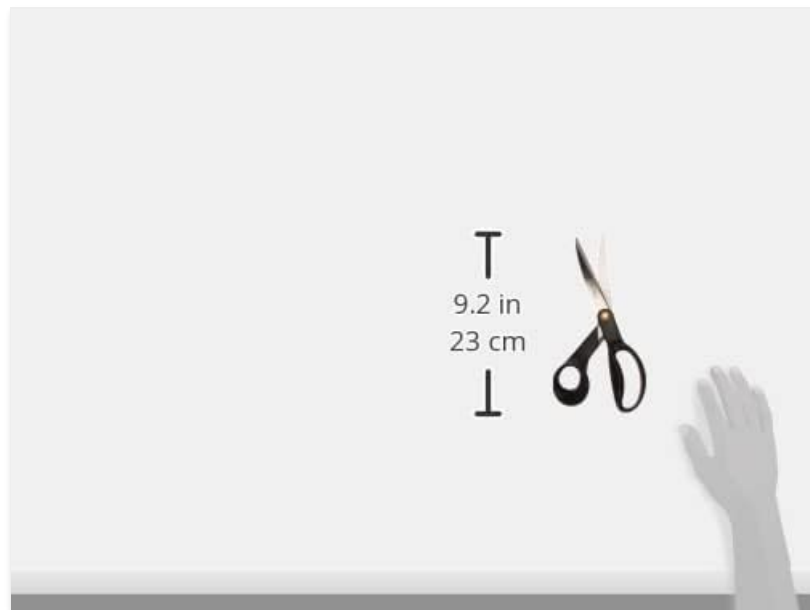


Image 7.2: Alternate dimensional diagram, indicating a total length of 9.2 inches (23 cm).



HRC
57

Image 7.3: Indication of blade hardness, HRC 57, contributing to durability.

8. WARRANTY AND SUPPORT

Fiskars products are manufactured to high-quality standards. For information regarding warranty coverage, product registration, or customer support, please refer to the official Fiskars website or contact their customer service department directly. Keep your purchase receipt as proof of purchase.