

[Manuals.plus](#) /

> [Nerf](#) /

> Nerf N-Strike Elite Mega CycloneShock Blaster User Manual

## Nerf A9249

# Nerf N-Strike Elite Mega CycloneShock Blaster Instruction Manual

Model: A9249

## INTRODUCTION

The Nerf N-Strike Elite Mega CycloneShock Blaster is designed for high-performance dart firing. This blaster utilizes Mega Darts, engineered for extended firing range. It features a rotating drum that allows for rapid firing of multiple darts without immediate reloading.

## PACKAGE CONTENTS

- CycloneShock Blaster
- 6 Mega Darts
- Instruction Manual (this document)



Image: The Nerf N-Strike Elite Mega CycloneShock Blaster shown with its packaging and the included 6 Mega Darts.

## SETUP

---

1. **Unpack the Blaster:** Carefully remove the CycloneShock blaster and all included components from the packaging.
2. **Inspect Components:** Verify that all parts listed in the "Package Contents" section are present and undamaged.
3. **Load Darts:**
  - Insert one Mega Dart into each chamber of the rotating drum. The blaster has a 6-dart capacity.
  - Ensure darts are fully seated in the chambers.



Image: A hand inserting a Mega Dart into one of the chambers of the blaster's rotating drum.

## OPERATING INSTRUCTIONS

---

1. **Load Darts:** As described in the Setup section, load up to 6 Mega Darts into the rotating drum.
2. **Prime the Blaster:** Pull the priming slide located on the top of the blaster all the way back until it clicks, then push it forward. This action prepares the blaster to fire.

3. **Aim:** Point the blaster at your intended target.
4. **Fire:** Squeeze the trigger to launch a Mega Dart. The rotating drum will advance to the next dart automatically.
5. **Reload:** After firing all 6 darts, repeat step 1 to reload the drum.

**Safety Warning:**

**DO NOT** aim at eyes or face.

**DO NOT** modify darts or blaster.

Use only official NERF Mega Darts. Other darts may not function correctly or could cause damage.



Image: A child holding the Nerf CycloneShock Blaster, demonstrating how to aim.

Your browser does not support the video tag.

Video: An overview of the NERF N-Strike Elite Mega CycloneShock Blaster, demonstrating its features and operation.

## MAINTENANCE

- **Cleaning:** Wipe the blaster with a dry, soft cloth to remove dust and debris. Do not use water or cleaning solutions, as this may damage internal mechanisms.
- **Dart Care:** Store Mega Darts in a clean, dry place. Avoid bending or crushing darts, as this can affect their flight performance and cause jams.
- **Storage:** Store the blaster in a cool, dry environment away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

### Blaster not firing or darts not launching properly:

- Ensure the blaster is fully primed. Pull the priming slide all the way back until it clicks, then push it forward completely.
- Check if darts are properly loaded into the drum chambers.
- Inspect darts for damage (e.g., bent tips, torn foam). Damaged darts may not fire correctly. Replace with new, official NERF Mega Darts if necessary.
- **Dart Jams:** If a dart is jammed, ensure the blaster is not primed and carefully remove the jammed dart from the barrel or drum. Do not force the trigger if a jam is suspected.

Your browser does not support the video tag.

Video: A demonstration showing how to address potential dart jams in the blaster.

## SPECIFICATIONS

|                              |                                               |
|------------------------------|-----------------------------------------------|
| Brand:                       | Nerf                                          |
| Model Number:                | A9249                                         |
| Item Type Name:              | Nerf N-Strike Elite Mega CycloneShock Blaster |
| Age Range:                   | Kid (Manufacturer Minimum Age: 96 months)     |
| Dart Capacity:               | 6 Mega Darts                                  |
| Maximum Range:               | 90 Feet                                       |
| Operation Mode:              | Manual                                        |
| Power Source:                | Manual (No batteries required)                |
| Material Type:               | Plastic                                       |
| Item Weight:                 | 1.6 Pounds                                    |
| Item Dimensions (L x W x H): | 3.5"L x 15.98"W x 10"H                        |
| Assembly Required:           | No                                            |

## WARRANTY AND SUPPORT

This product is manufactured by Hasbro. For any questions regarding product operation, parts, or potential issues, please contact Hasbro customer support directly. Specific warranty details may be available on the official Nerf or Hasbro websites, or through the retailer where the product was purchased.

Manufacturer Warranty Description: No Warranty (as per product specifications).  
For further assistance, please visit the official Nerf website:[Nerf Official Store](#)