



Manuals.plus /

› KOHLER /

› KOHLER K-558-1CP DTV Prompt Digital Interface User Manual

KOHLER K-558-1CP

KOHLER K-558-1CP DTV Prompt Digital Interface User Manual

Model: K-558-1CP

1. OVERVIEW

The KOHLER K-558 DTV Prompt digital interface provides intuitive control over your shower experience. This system features a large, easy-to-read display and pushbutton controls, capable of operating up to three distinct shower outlets. Its digital thermostatic valve technology ensures precise and safe temperature regulation, enhancing user comfort and safety.

Key Features:

- Large, easy-to-read LCD display provides time and temperature feedback.
- Raised 'one-touch' buttons offer intuitive control of operation and temperature adjustment.
- Warm-up mode pauses the shower flow when water is brought up to preferred temperature, then notifies you that the shower is ready, conserving water.
- Pause feature allows you to temporarily pause the water flow for up to two minutes.
- Requires K-559 DTV Prompt interface mounting bracket and K-557-K three-outlet digital thermostatic valve (both sold separately).

2. SETUP AND INSTALLATION

Installation of the KOHLER K-558-1CP DTV Prompt Digital Interface requires specific components and should be performed by a qualified professional to ensure proper function and safety. Please refer to the official installation manual for detailed instructions and diagrams.

Required Components (Sold Separately):

- KOHLER K-559 DTV Prompt interface mounting bracket
- KOHLER K-557-K three-outlet digital thermostatic valve

For comprehensive installation guidance, please download the official [Installation Manual \(PDF\)](#).



Image: Front view of the KOHLER K-558-1CP DTV Prompt Digital Interface, showcasing its display and control buttons.

3. OPERATING INSTRUCTIONS

The DTV Prompt interface is designed for ease of use, allowing you to customize your shower experience with simple button presses.

3.1 Power On/Off

- To turn the system on, press the **Power button** (circle with vertical line) located at the top of the interface. The display will illuminate.

- To turn the system off, press the **Power button** again.

3.2 Adjusting Temperature

- Use the **Up arrow button** (red) to increase the water temperature.
- Use the **Down arrow button** (blue) to decrease the water temperature.
- The current temperature will be displayed on the LCD screen.

3.3 Controlling Outlets

The interface can control up to three separate shower outlets (e.g., showerhead, handshower, body sprays).

- Press the corresponding **outlet button** (circular buttons below the display) to activate or deactivate an outlet.
- Multiple outlets can be active simultaneously.

3.4 Warm-up Mode

When activated, the warm-up mode will run the shower until the desired temperature is reached, then pause the water flow to conserve water. The system will notify you when the shower is ready.

3.5 Pause Feature

The pause feature allows you to temporarily stop the water flow for up to two minutes without losing your temperature settings. Press the designated **Pause button** (if available, typically indicated by a pause icon) to activate and deactivate this function.

4. CARE AND MAINTENANCE

To maintain the appearance and functionality of your KOHLER DTV Prompt Digital Interface, follow these guidelines:

- Clean regularly with a soft, damp cloth.
- Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish and electronic components.
- Wipe dry after cleaning to prevent water spots.

5. TROUBLESHOOTING

If you encounter issues with your DTV Prompt Digital Interface, consult the table below for common problems and solutions. For more complex issues, contact KOHLER customer support or a qualified technician.

Problem	Possible Cause	Solution
No power to interface	Power supply issue; loose connection.	Check circuit breaker. Ensure all connections to the digital valve are secure.
Incorrect or fluctuating temperature	Digital valve malfunction; water supply issues.	Verify water supply pressure. Consult the full installation manual for digital valve diagnostics.
Outlet not activating	Digital valve connection issue; outlet blocked.	Ensure the outlet is not physically blocked. Check connections to the digital valve.
Display not responding	Interface malfunction; power issue.	Try cycling power to the unit. If issue persists, contact support.

6. PRODUCT SPECIFICATIONS

Specification	Detail
Manufacturer	KOHLER
Part Number	K-558-1CP
Item Weight	12.8 ounces
Product Dimensions	9.75 x 4.13 x 3.25 inches
Item Model Number	K-558-1CP
Size	7.75 x 2.69 x 0.75 inches
Color	Black
Finish	Black
Material	Plastic
Item Package Quantity	1
Number Of Pieces	1
Included Components	KOHLER K-558-1CP Digital Interface, 7.75 x 2.69 x 0.75 inches, Black
Batteries Included?	No
Batteries Required?	No
Date First Available	March 2, 2015

7. WARRANTY AND SUPPORT

The KOHLER K-558-1CP DTV Prompt Digital Interface comes with a **One year limited warranty** from the manufacturer. Please retain your proof of purchase for warranty claims.

For further assistance, technical support, or to inquire about replacement parts, please visit the official KOHLER Store on Amazon or consult the comprehensive Installation Manual (PDF).

