

Fujifilm Instax Mini 90

Fujifilm Instax Mini 90 Instant Film Camera User Manual

Model: Instax Mini 90

INTRODUCTION

This user manual provides detailed instructions for the safe and effective operation of your Fujifilm Instax Mini 90 Instant Film Camera. Please read this manual thoroughly before using the camera to ensure proper handling and to maximize your photographic experience. Keep this manual in a safe place for future reference.

SAFETY INFORMATION

To prevent injury or damage to the camera, please observe the following safety precautions:

- Do not disassemble, modify, or attempt to repair the camera yourself. Refer all servicing to qualified personnel.
- Keep the camera away from water and other liquids. Do not operate the camera with wet hands.
- Avoid exposing the camera to extreme temperatures, direct sunlight for prolonged periods, or high humidity.
- Use only specified batteries and chargers. Improper use can lead to fire, explosion, or leakage.
- Keep film and batteries out of reach of small children.
- Do not look directly into the flash when it fires, as it may temporarily impair vision.

PACKAGE CONTENTS

Verify that all items are present in your camera package:

- Fujifilm Instax Mini 90 Classic Instant Camera (Brown)
- Rechargeable Lithium-ion Battery
- Battery Charger
- Shoulder Strap
- Instruction Manual (this document)

CAMERA PARTS AND FUNCTIONS

Familiarize yourself with the various parts of your Instax Mini 90 camera.



Image 1: Front View of the Instax Mini 90 Camera. This image displays the front of the Fujifilm Instax Mini 90 camera in brown. Key features visible include the lens, flash unit, viewfinder, shutter button, and power button. The lens is centrally located with focus and aperture markings. The flash is positioned to the right of the lens.

- **Lens:** F=60mm, F=12.7. Used for capturing images.
- **Flash:** Provides illumination in low-light conditions.
- **Viewfinder:** For composing your shots.
- **Shutter Button:** Press to take a picture.
- **Power Button:** Turns the camera on and off.
- **Mode Dial:** Selects various shooting modes.
- **LCD Display:** Shows current settings and film count.
- **Film Ejection Slot:** Where developed photos emerge.
- **Battery Compartment:** Houses the rechargeable battery.

SETUP

1. Battery Installation and Charging

1. Open the battery compartment cover located on the side or bottom of the camera.

2. Insert the supplied rechargeable lithium-ion battery, ensuring correct polarity.
3. Close the battery compartment cover securely.
4. Connect the battery charger to a power outlet and insert the battery. The charging indicator will show the charging status. Charge fully before first use.

2. Loading Instax Mini Film

The Instax Mini 90 uses Fujifilm Instax Mini instant color print film.

This Instax Device Uses Requis par ce dispositif Instax instax[®] mini Film

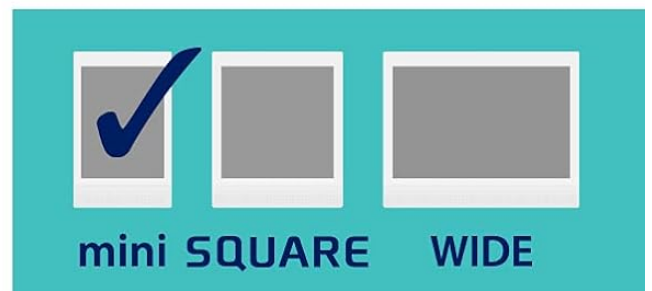


Image 2: Instax Mini Film Dimensions. This image illustrates the dimensions of the Instax Mini film, showing a picture size of 62mm x

46mm and a film size of 86mm x 54mm. It also indicates compatibility with "mini" film types.

1. Press the film compartment latch to open the film cover on the back of the camera.
2. Align the yellow mark on the film pack with the yellow mark inside the camera's film compartment.
3. Insert the film pack straight into the compartment. Do not press down on the film pack.
4. Close the film compartment cover firmly until it clicks. The film counter on the LCD will display "S" (Start) or "10" (if a new pack is loaded).
5. Turn on the camera and press the shutter button once to eject the black film cover. The film counter will then show the number of remaining exposures.

OPERATING THE CAMERA

1. Basic Shooting

1. Turn on the camera by pressing the power button.
2. Look through the viewfinder to compose your shot.
3. Press the shutter button to take a picture. The film will automatically eject from the top slot.
4. Allow the ejected film to develop naturally. Do not shake or bend the film.

2. Shooting Modes

Rotate the mode dial to select different shooting modes. The selected mode will be displayed on the LCD.

- **Automatic Mode:** The camera automatically detects ambient brightness and adjusts flash and shutter speed for optimal photo quality.
- **Bulb Mode:** The shutter remains open for up to 10 seconds while the shutter button is pressed, allowing for creative light trail photography or capturing night scenes.
- **Double Exposure Mode:** Allows two different images to be captured on a single film sheet by pressing the shutter button twice.
- **Macro Mode:** Enables close-up photography for subjects between 30 cm and 60 cm without an additional lens.
- **Kids Mode:** Utilizes a faster shutter speed, ideal for capturing fast-moving subjects like children or pets.
- **Party Mode:** Optimizes settings to clearly photograph both the subject and the background in dimly lit environments.

3. Flash Control

The flash can be adjusted or turned off depending on your shooting conditions. Refer to the camera's LCD and buttons for flash settings.

4. Brightness Control

Adjust the brightness of your photos (Lighten/Darken) using the dedicated brightness control buttons or menu options on the camera.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a lens cleaning cloth. Do not use organic solvents or abrasive cleaners.
- **Storage:** When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.
- **Film Handling:** Store film packs in a cool, dry place. Avoid exposing film to high temperatures or direct sunlight.

before use.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not turn on.	Battery is depleted or incorrectly inserted. Charge the battery or re-insert it correctly.
Film does not eject.	Film pack is empty, incorrectly loaded, or jammed. Replace film pack or re-load correctly.
Photos are too dark/light.	Incorrect brightness setting or flash not used/overused. Adjust brightness control or flash settings. Ensure sufficient lighting.
Blurred images.	Camera shake or subject movement. Hold the camera steady. Use Kids Mode for moving subjects.
"E" or other error code on LCD.	Refer to the full Fujifilm Instax Mini 90 manual for specific error code meanings, or contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Instax Mini 90 Classic Instant Camera
Film Format Type	Instant (Fujifilm Instax Mini)
Film Size	86mm x 54mm
Picture Size	62mm x 46mm
Lens	F=60mm, F=12.7
Minimum Shutter Speed	1/8 Seconds
Maximum Shutter Speed	1/4000 Seconds
Power Source	1 Lithium Metal battery (included)
Product Dimensions (L x W x H)	3.6 x 2.2 x 4.5 inches
Item Weight	1 pound (16 ounces)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Fujifilm website.
[Visit Fujifilm Official Website](#)

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question