

[Manuals.plus](#) /

› [Nikon](#) /

› Nikon Coolpix P900 Super Zoom Camera - User Manual

Nikon 32022

Nikon Coolpix P900 Super Zoom Camera - User Manual

Model: 32022

INTRODUCTION

Welcome to the user manual for your Nikon Coolpix P900 Super Zoom Camera. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your camera. The Nikon Coolpix P900 is renowned for its spectacular zoom power, offering an 83x optical zoom, equivalent to a 2000mm focal length. It combines outstanding image quality with DSLR-like styling, featuring a comfortable grip, a swiveling Vari-angle display, and a high-resolution Electronic Viewfinder.



Front view of the Nikon Coolpix P900 camera, showcasing its large optical zoom lens.

SETUP

Unboxing and Initial Inspection

Upon opening the package, ensure all components are present. The camera typically includes the camera body and battery. Check for any visible damage before proceeding with setup.

Battery Installation and Charging

1. Open the battery chamber cover located at the bottom of the camera.
2. Insert the supplied rechargeable Lithium-ion battery, ensuring it clicks into place.
3. Close the battery chamber cover securely.
4. Connect the camera to the AC adapter using the supplied USB cable to charge the battery. The charging indicator will light up during charging and turn off when complete.

Memory Card Insertion

The Nikon Coolpix P900 supports SD memory cards (Class 10 or higher recommended, up to 32 GB). Insert the memory card into the designated slot until it locks into place. Ensure the camera is off before inserting or removing the memory card.



Rear view of the Nikon Coolpix P900 with its vari-angle display extended, showing the screen and control buttons.

OPERATING THE CAMERA

Powering On/Off

Press the ON/OFF button located on the top of the camera to power it on or off.

Using the Zoom

The P900 features an impressive 83x optical zoom. Use the zoom lever around the shutter button or the side zoom control on the lens barrel to adjust the focal length. The camera offers a 24-2000mm equivalent zoom range.



Top view of the Nikon Coolpix P900, highlighting the mode dial, zoom controls, and built-in microphone.

Viewfinder and Vari-angle Display

The camera is equipped with both an Electronic Viewfinder (EVF) and a swiveling Vari-angle LCD display. The EVF is useful for shooting in bright light, while the vari-angle screen allows for flexible shooting from high or low angles. The display automatically turns on when lifted to your eye.

Shooting Modes

Select your desired shooting mode using the mode dial. Available modes include Programmed Auto (P), Shutter-Priority Auto (S), Aperture-Priority Auto (A), and Manual (M), along with various scene modes for specific shooting conditions.

Image Stabilization

The P900 features Optical Image Stabilization, rated to 5 stops, which is crucial for maintaining sharpness, especially at longer focal lengths. This system helps to reduce blur caused by camera shake.

Video Recording

The camera supports Full HD (1080p) video recording at 24, 30, or 60 FPS in MP4 format. Press the dedicated

movie record button to start and stop recording.

MAINTENANCE

Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a lens brush or a blower to remove dust, then gently wipe with a lens cleaning cloth and lens cleaning solution if necessary.
- Avoid using harsh chemicals or abrasive materials.

Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if the camera will not be used for an extended period.

TROUBLESHOOTING

Common Issues and Solutions

- **Camera does not power on:** Ensure the battery is fully charged and correctly inserted.
- **Images are blurry:** Check that image stabilization is enabled. Ensure sufficient light for the scene. Use a tripod for extremely long zoom shots.
- **Memory card error:** Ensure the memory card is properly inserted and not full. Try formatting the card (this will erase all data).
- **Poor low-light performance:** The P900 has a smaller sensor. For best results in low light, use higher ISO settings or ensure adequate lighting.

For more complex issues, refer to the full digital manual available on the Nikon support website or contact Nikon customer support.

SPECIFICATIONS

 
Feature	Specification
Brand	Nikon
Model Name	32022
Photo Sensor Resolution	16 MP
Optical Zoom	83x
Maximum Focal Length	2000 Millimeters (equivalent)
Image Stabilization	Optical

Feature	Specification
Video Resolution	1080p (Full HD)
Screen Size	3 Inches (Vari-angle)
Connectivity Technology	HDMI, NFC, USB, Wi-Fi
Item Weight	0.9 Kilograms
Supported File Format	MP4 (Video), JPEG (Image)
Battery Type	Rechargeable Lithium-ion

WARRANTY AND SUPPORT

Product Warranty

The Nikon Coolpix P900 typically comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For example, some regions may offer a 2-year warranty from Nikon Canada Inc.



Example of a warranty badge, indicating a 2-year warranty from Nikon Canada Inc.

Customer Support

For technical assistance, service, or additional information, please visit the official Nikon support website or contact their customer service department. Keep your product's serial number and proof of purchase readily available when seeking support.

You can find more information and resources on the official [Nikon Store on Amazon](#).